SHARP SERVICE MANUAL

S04B1LC20SH1E

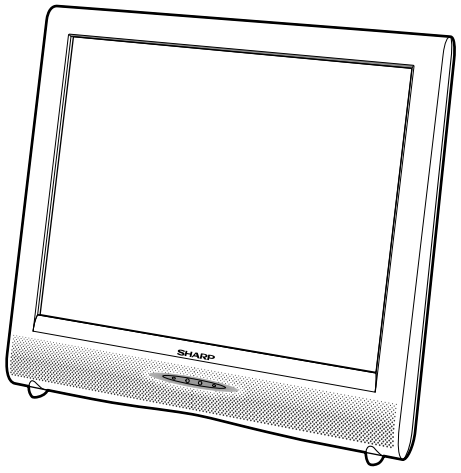

LCD COLOUR TELEVISION

MODEL LC-20SH1E

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

Page

- IMPORTANT SERVICE SAFETY PRECAUTION 2
- SPECIFICATIONS 4
- OPERATION MANUAL 5
- DIMENSIONS 7
- REMOVING OF MAJOR PARTS 8
- ADJUSTING PROCEDURE OF EACH SECTION 12
- TROUBLE SHOOTING TABLE 21
- CHASSIS LAYOUT 26
- BLOCK DIAGRAM 28
- OVERALL WIRING DIAGRAM 30
- DESCRIPTION OF SCHEMATIC DIAGRAM 32
- SCHEMATIC DIAGRAM 33
- PRINTED WIRING BOARD ASSEMBLIES 46
- REPLACEMENT PARTS LIST 61
- PACKING OF THE SET 73

SHARP CORPORATION

IMPORTANT SERVICE SAFETY PRECAUTION

■ **Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:**

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.

CAUTION: FOR CONTINUED PROTECTION AGAINST A RISK OF FIRE REPLACE ONLY WITH SAME TYPE F6700 (1.25A, 250V), F6701 (1.25A, 250V), F6702 (1.25A, 250V), F6703 (1.25A, 250V) F6704 (1.25A, 250V) AND F7701 (3.15A, 250V) FUSE.

BEFORE RETURNING THE RECEIVER (Fire & Shock Hazard)

Before returning the receiver to the user, perform the following safety checks:

1. Inspect all lead dress to make certain that leads are not pinched, and check that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulation materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacitor networks, mechanical insulators, etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.

- Plug the AC cord directly into a 220~240 volt AC outlet.
- Using two clip leads, connect a 50k ohm, 10 watt resistor paralleled by a 0.15µF capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to an earth ground.
- Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity or measure the AC voltage drop across the resistor.
- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.
  All checks must be repeated with the AC cord plug connection reversed. (If necessary, a nonpolarized adaptor plug must be used only for the purpose of completing these checks.)
  Any reading of 0.75V peak (this corresponds to 0.5 mA. peak AC.) or more is excessive and indicates a potential shock hazard which must be corrected before returning the monitor to the owner.

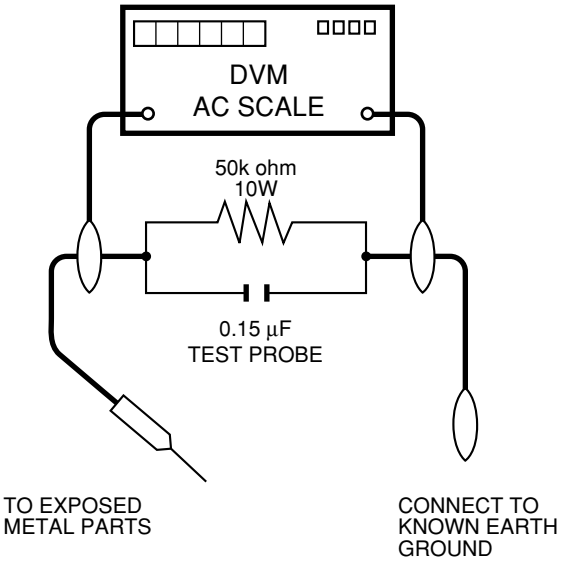

SAFETY NOTICE

Many electrical and mechanical parts in LCD television have special safety-related characteristics.
These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.
Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by " ⚠ " and shaded areas in the ***Replacement Parts Lists and Schematic Diagrams.***
For continued protection, replacement parts must be identical to those used in the original circuit.
The use of a substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire or other hazards.

Precautions for using lead-free solder

1 Employing lead-free solder

"MAIN PWB" of this model employs lead-free solder. The LF symbol indicates lead-free solder, and is attached on the PWBs and service manuals. The alphabetical character following LF shows the type of lead-free solder.

Example:

Indicates lead-free solder of tin, silver and copper.

2 Using lead-free wire solder

When fixing the PWB soldered with the lead-free solder, apply lead-free wire solder. Repairing with conventional lead wire solder may cause damage or accident due to cracks.

As the melting point of lead-free solder (Sn-Ag-Cu) is higher than the lead wire solder by 40°C, we recommend you to use a dedicated soldering bit, if you are not familiar with how to obtain lead-free wire solder or soldering bit, contact our service station or service branch in your area.

3 Soldering

As the melting point of lead-free solder (Sn-Ag-Cu) is about 220°C which is higher than the conventional lead solder by 40°C, and as it has poor solder wettability, you may be apt to keep the soldering bit in contact with the PWB for extended period of time. However, Since the land may be peeled off or the maximum heat-resistance temperature of parts may be exceeded, remove the bit from the PWB as soon as you confirm the steady soldering condition.

Lead-free solder contains more tin, and the end of the soldering bit may be easily corroded. Make sure to turn on and off the power of the bit as required.

If a different type of solder stays on the tip of the soldering bit, it is alloyed with lead-free solder. Clean the bit after every use of it.

When the tip of the soldering bit is blackened during use, file it with steel wool or fine sandpaper.

Be careful when replacing parts with polarity indication on the PWB silk.

Lead-free wire solder for servicing

Part No.	★	Description		Code
ZHNDAi123250E	J	ϕ0.3mm	250g(1roll)	BL
ZHNDAi126500E	J	ϕ0.6mm	500g(1roll)	BK
ZHNDAi12801KE	J	ϕ1.0mm	1kg(1roll)	BM

Precautions on removing the Sub PWB

- **CAUTION**

  Before taking out and servicing the Sub unit, be sure to discharge the C7703 electrolytic capacitor. Otherwise you may get an electric shock by the capacitor's charging voltage.

SPECIFICATIONS

Items \ Model		LC-20SH1E
LCD panel		20" Advanced Super View& BLACK TFT LCD
Number of dots		921,600 dots
Video colour system		PAL/SECAM/NTSC
TV	TV-Standard (CCIR)	B/G, I, D/K, L/L'
	TV-Tuning System	Auto preset 200 ch.
	STEREO/BILINGUAL	NICAM, A2 stereo
	AUTO PRESET	YES
	CATV	~Hyper Band
Brightness		430 cd/m^2
Viewing angles		H: 170° V: 170°
Audio amplifier		2.1 W × 2
Speakers		11 cm × 4 cm 2 pcs.
Terminals	EXT1	21-pin Euro-SCART
	EXT2	S-VIDEO, VIDEO, AUDIO
	OUT	AUDIO
	Antenna	DIN
	Headphones	3.5 mm ø jack (side)
OSD language		English/Spanish/German/French/Italian/Swedish/Dutch/Russian/Portuguese/ Turkish/Greek/Finnish/Polish
Power requirement		AC 220 V–240 V, 50/60 Hz
Power consumption		74 W (1.0 W Standby) AC 220 V–240 V
Weight (approx.)		6.3 kg, w/o accessories

■ As a part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Part Names of the Main Unit

The examples used throughout this manual are based on the LC-20SH1E model.

Controls

Upper control panel

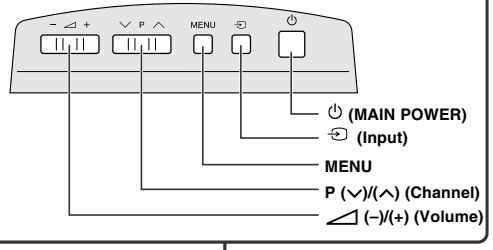

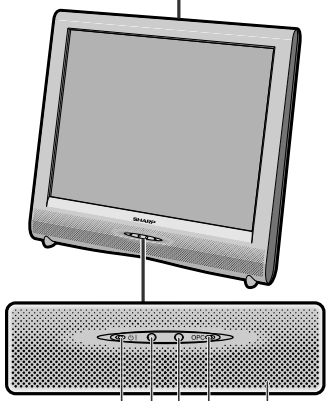
Speaker
OPC (Optical Picture Control) indicator
The OPC indicator lights up green when the "Backlight" is set to "Auto (OPC)".
Remote sensor
OPC sensor
STANDBY/ON indicator
STANDBY/ON indicator lights up green when the power is on, and red when in the standby mode (the indicator will not light when the main power is off).

■ How to adjust the angle

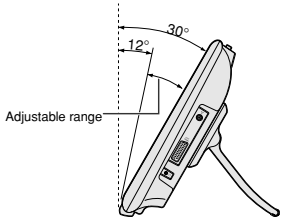

The screen angle can be tilted backwards between 12 and 30 degrees. (It cannot be set to vertical.) When changing the angle, make sure to hold the stand and adjust the screen to the best viewable angle.

NOTE

- **(Input)**, **P (∨)/(∧)(Channel)**, **(–)/(+) (Volume)** and **MENU** on the control panel of the main unit have the same functions as the same buttons on the remote control. Fundamentally, this operation manual provides a description based on operation using the remote control.

Terminals

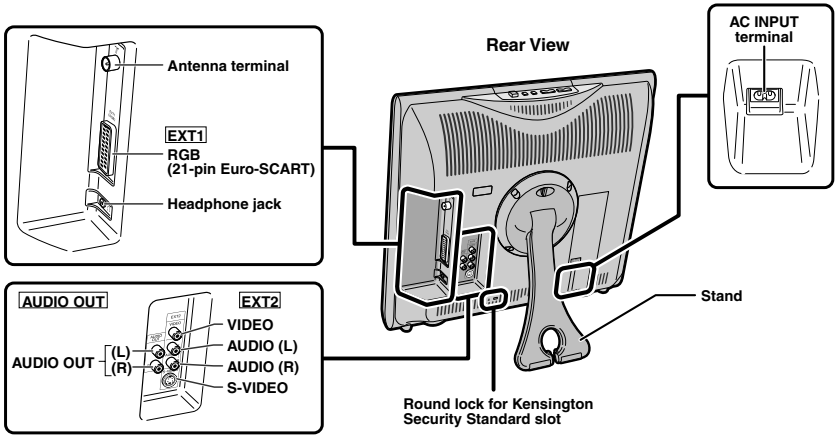

How to Fix the Cables

Pull the cables connected to each terminal. Insert the cables into the stand hole and fix the cables.

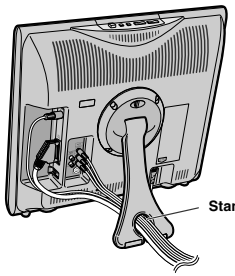

How to Prevent the LCD TV Set from Falling Over

To prevent the LCD TV set from falling over in case of earthquakes and so on, strap it onto the wall by threading one end of the string through the loop of the stand (①) and fastening the LCD TV set with the string attached to the hook on the wall or the post, etc. (②).
(An example of strapping the LCD TV set onto the wall is shown on the right.)

- The string and hook are commercially available.

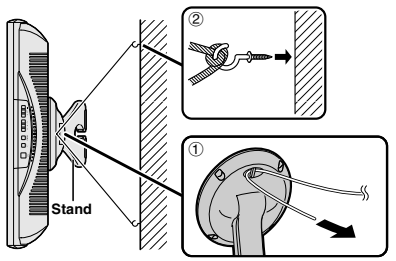

Part Names of the Remote Control

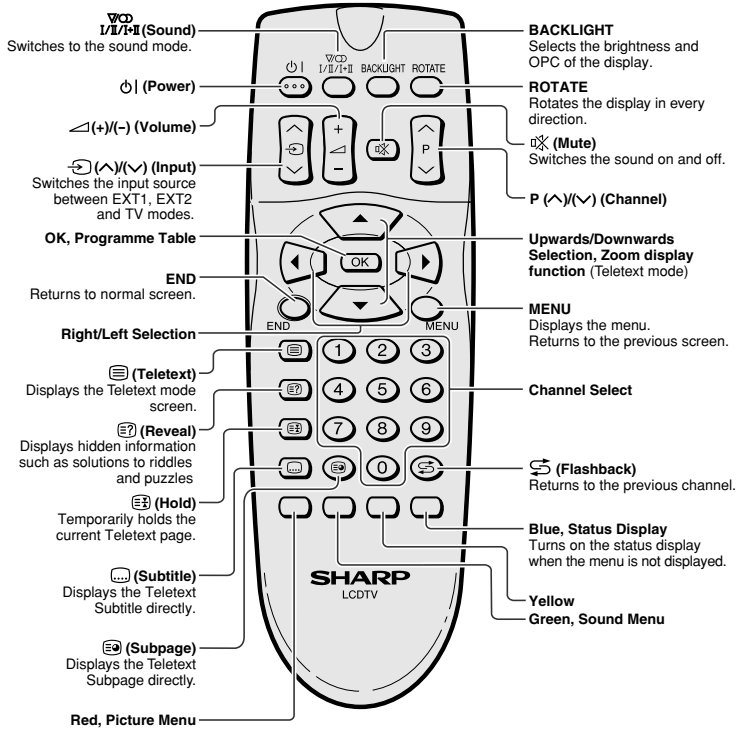

Preparation

Installing Batteries in the Remote Control

Before using the LCD TV set for the first time, install the two “AA” size batteries (supplied) in the remote control. When the batteries become depleted and the remote control fails to operate, replace the batteries with new “AA” size batteries.

1 Open the battery cover.



- Detach the cover while pressing the (▼) part.

2 Insert two “AA” size batteries.



- Place batteries with their terminals corresponding to the (+) and (–) indications in the battery compartment.

3 Close the battery cover.

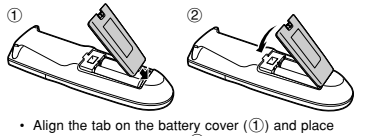

- Align the tab on the battery cover (①) and place it while pressing the tab (②) to close it.

⚠ Caution!

Precautions regarding batteries

Improper use of batteries can result in a leakage of chemicals and/or explosion. Be sure to follow the instructions below.

- Place batteries with their terminals corresponding to the (+) and (–) indications.
- Different types of batteries have different characteristics. Do not mix batteries of different types.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and/or cause old batteries to leak chemicals.
- Remove batteries as soon as they are depleted. Chemicals that leak from batteries can cause a rash. If chemical leakage is found, wipe it off with a cloth.
- The batteries supplied with the LCD TV set may have a shorter operating time due to storage conditions.
- If the remote control is not to be used for an extended period of time, remove the batteries from the remote control.

Using the Remote Control

Use the remote control by pointing it towards the remote sensor window of the main unit. Objects between the remote control and sensor window may prevent proper operation.

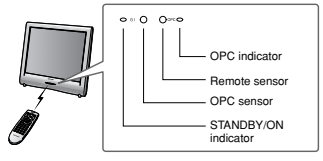

Cautions regarding use of the remote control

- Do not apply shock to the remote control. In addition, do not expose the remote control to liquids, and do not place it in an area with high humidity.
- Do not install or place the remote control under direct sunlight. The heat may cause deformation of the unit.
- The remote control may not work properly if the remote sensor window is under direct sunlight or strong lighting. In such a case, change the angle of the lighting or main unit, or operate the remote control closer to the remote sensor window.

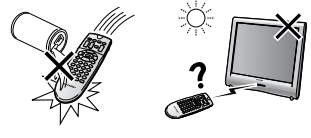

DIMENSIONS

Unit: mm

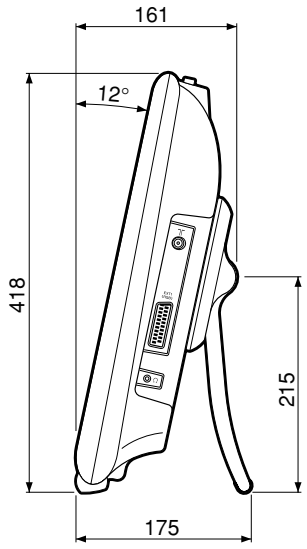

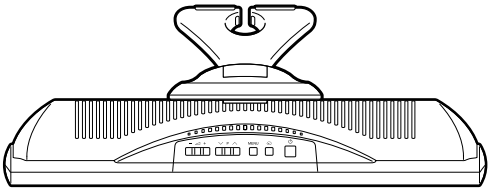

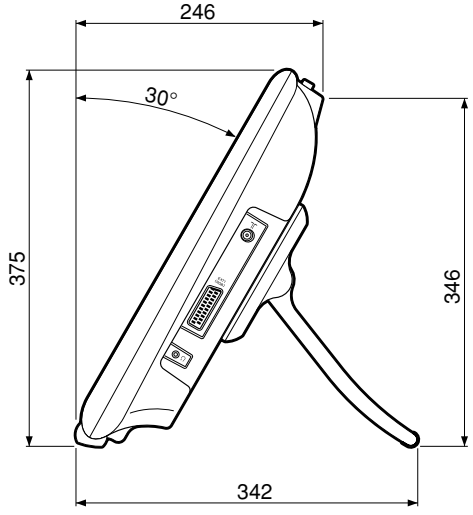

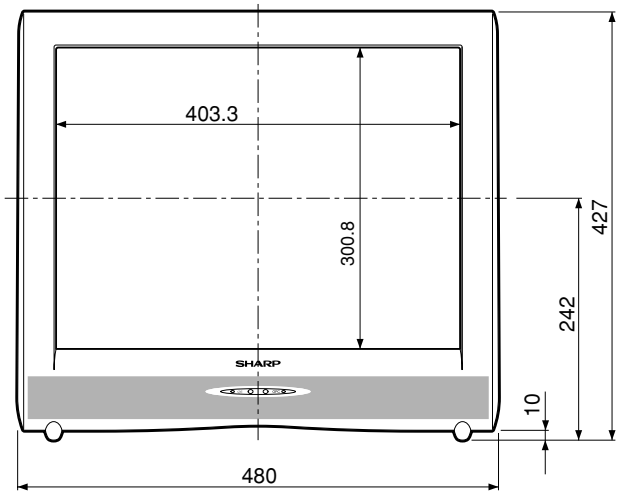

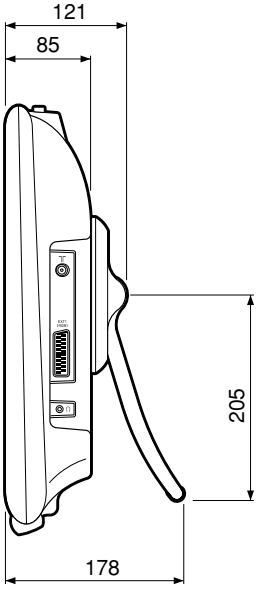

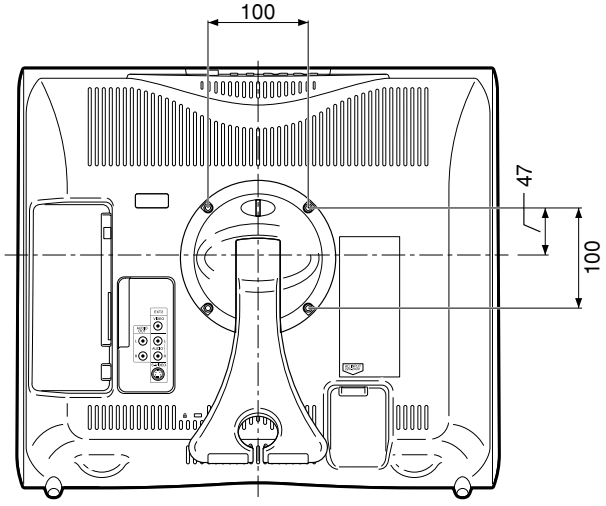

REMOVING OF MAJOR PARTS

1. Remove the stand fixing screws (4 pcs.).
2. Remove the cabinet B fixing screws (7 pcs.).
3. Remove the cabinet B after opening from the direction of an arrow.
4. Detach the connector from each PWB.

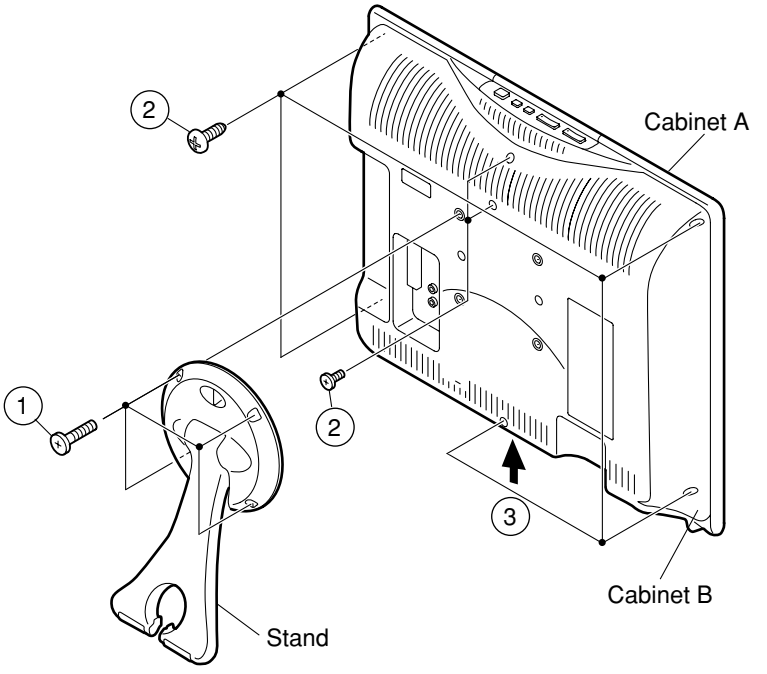

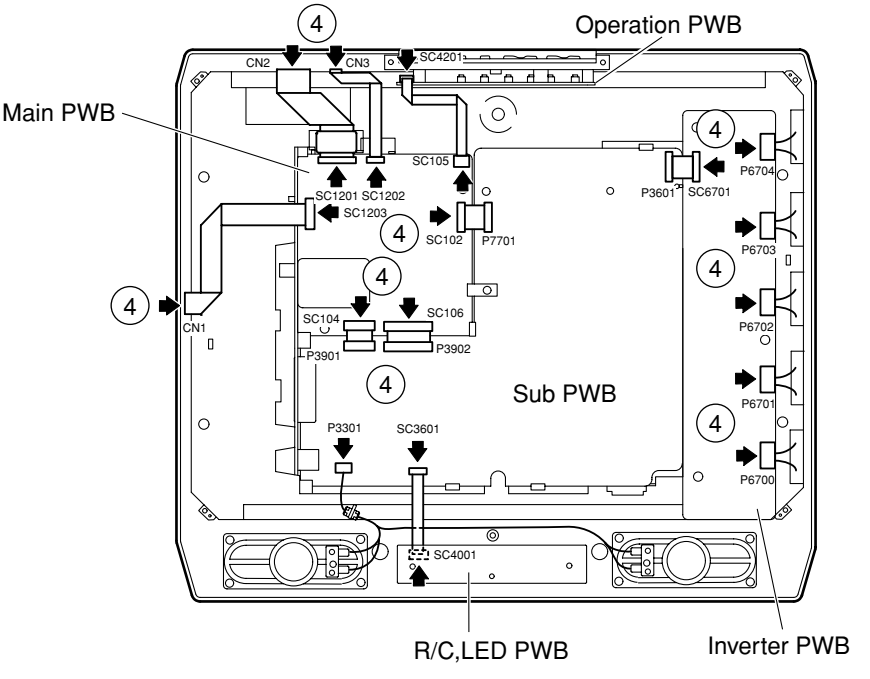

5. Remove the 2 lock screws from the main PWB and undo the hooks a. Detach the chassis frame, together with its terminals, from the main PWB.
6. Remove the 2 lock screws from the sub PWB and undo the hooks b, c and d. Detach the chassis frame together with its terminals, from the sub PWB.
7. Remove the 3 lock screws from the inverter PWB and take out the inverter PWB.
8. Remove the 2 lock screws from the R/C, LED PWB and take out the R/C, LED PWB.
9. Remove the 2 lock screws from the operation panel (top cover), and detach the operation panel (top cover).
10. Remove the 3 lock screws from the operation PWB, and detach the operation PWB.
11. Remove the 4 lock screws each from the right and left speakers and take out both the speakers.

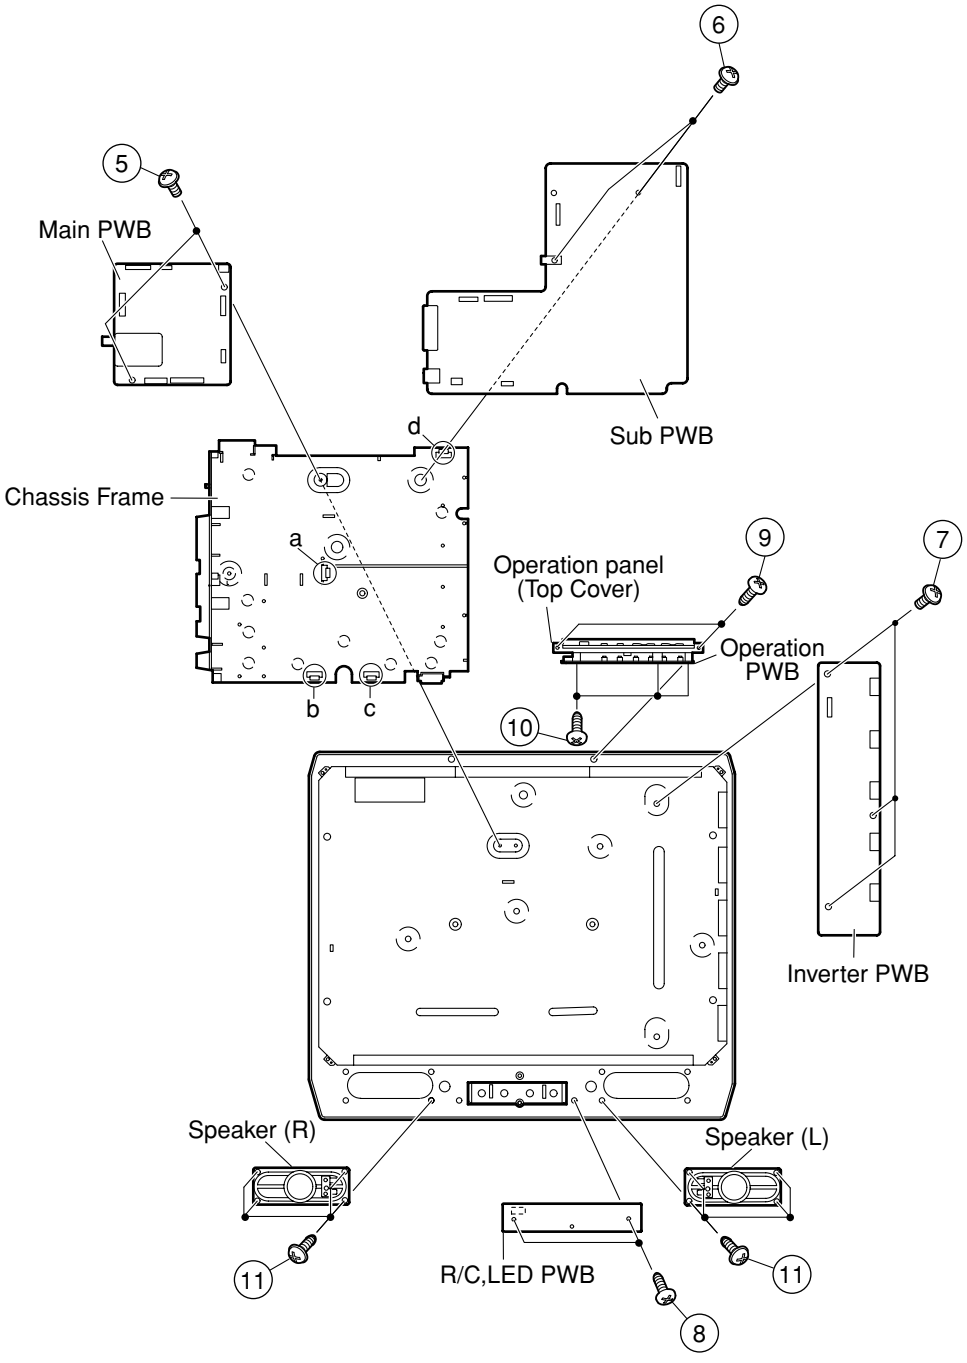

- Precautions in handling the LCD panels
  1. Work in a clean room (with humidities below 50%).
  2. Be sure to wear an anti-static armband.
  3. Handle the panels on an electro-conductive mat.
  4. Be careful not to fall, shake and shock the panels.

12. Remove the 3 lock screws from the LCD panel and detach the LCD panel.
13. Remove the reflection/deflection sheet, diffusion sheet and diffusion plate.
14. Detach the lamp holders -R (top), -L (top) and -R (bottom), -L (bottom) from the lamp unit.
15. Detach the reflection sheet from the back shield.

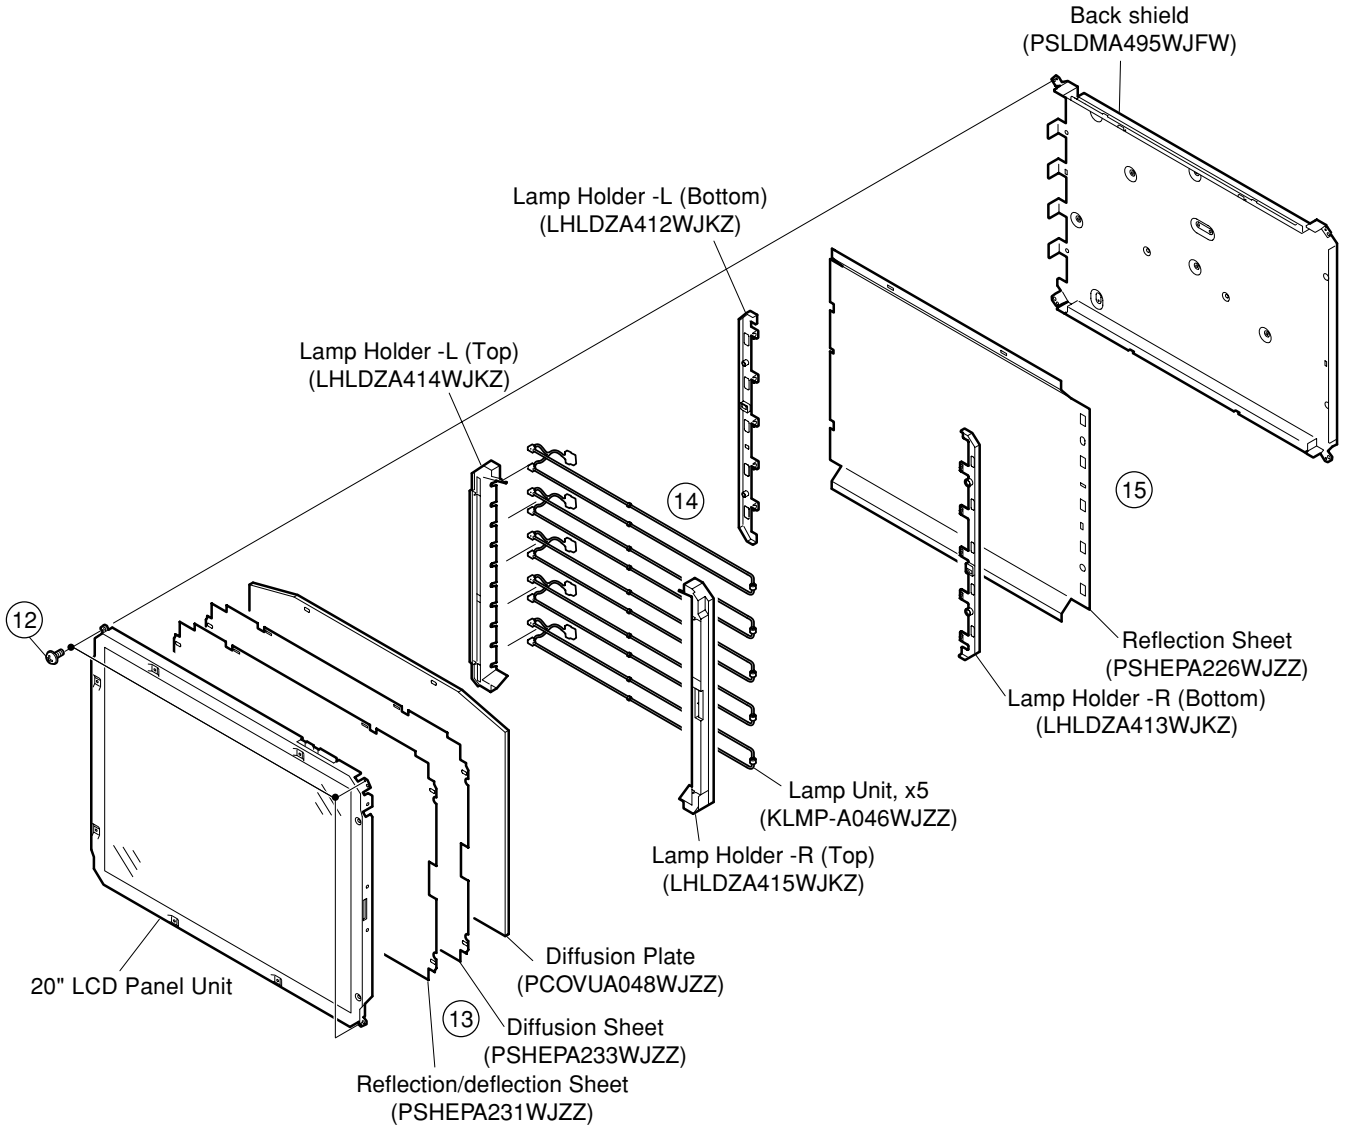

- **Precautions at the time of the side B(back) service of main, sub and Inverter unit.**
  1. Remove only SC1203 of the FFC for connection between Main unit (SC1203) and LCD panel, and connect the extended cable (QCNW-A553WJZZ) for service.
  2. Remove only SC1202 of the FFC for connection between Main unit (SC1202) and LCD panel, and connect the extended cable (QCNW-B556WJZZ) for service.
  3. Remove only SC1201 of the FFC for connection between Main unit (SC1201) and LCD panel, and connect the extended cable (QCNW-A555WJZZ) for service.
  4. Remove only SC105 of the FFC for connection between Main unit (SC105) and Operation unit (SC4201), and connect the extended cable (QCNW-D444WJQZ) for service.
  5. Remove only SC3601 of the FFC for connection between Sub unit (SC3601) and R/C, LED unit (SC4001), and connect the extended cable (QCNW-D445WJQZ) for service.
  6. Remove the PWB unit fixing screws (main unit : 2pcs, sub unit : 2pcs., inverter unit : 3pcs.)

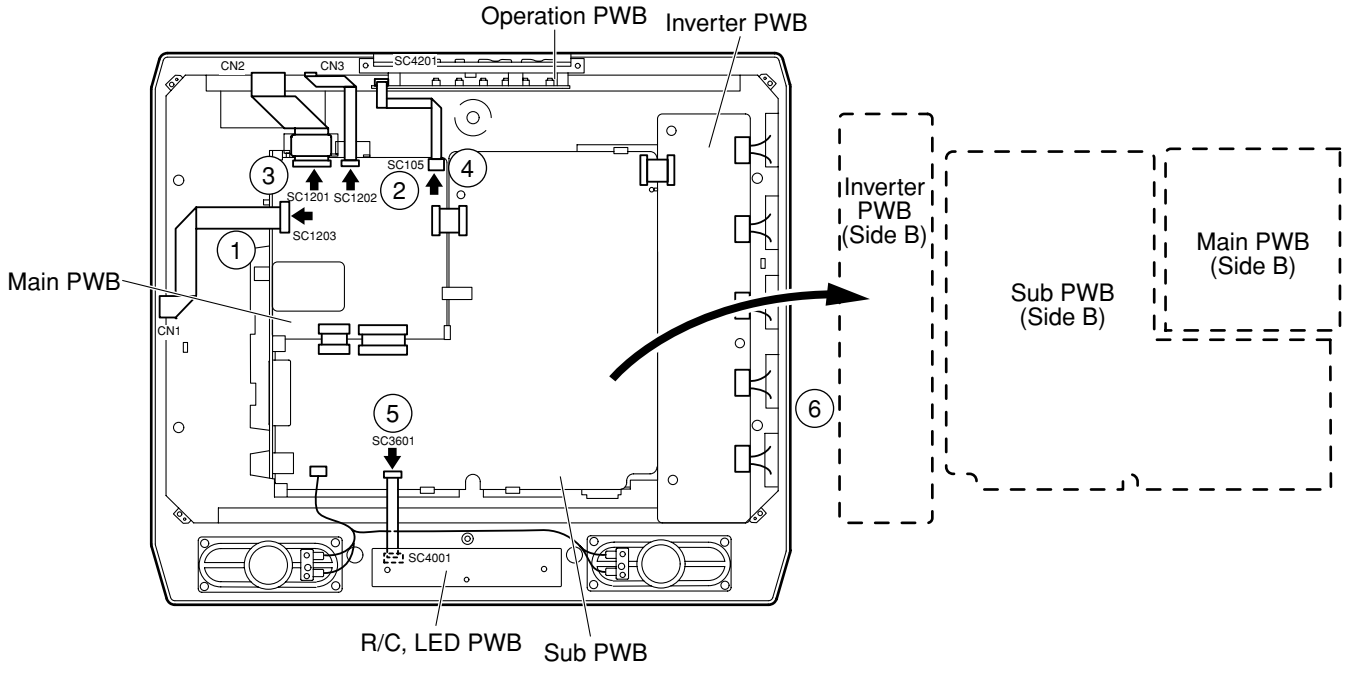

Step	Part No.	Description
1	QCNW-A553WJZZ	Extension Cable 30-pin Main (SC1203)-LCD Panel
2	QCNW-A556WJZZ	Extension Cable 50-pin Main (SC1202)-LCD panel
3	QCNW-A555WJZZ	Extension Cable 20-pin Main (SC1201)-LCD panel
4	QCNW-D444WJQZ	Extension Cable 5-pin Operation (SC4201)-Main (SC105)
5	QCNW-D445WJQZ	Extension Cable 8-pin R/C, LED (SC4001)-Sub (SC3601)

ADJUSTING PROCEDURE OF EACH SECTION

The best adjustment is made before shipping. If any position deviation is found or after part replacement is performed, adjust as follows.

Preparation for adjustments

Use a stable AC power source.
LC-20SH1E AC Power : 230V

1. Adjusting procedure

Complete Set → Power ON → Enter Adjustment Process Mode (By Remote Control) → RF AGC adjustment → DCXO adjustment → Common Bias adjustment → White Balance adjustment

2. Entering the adjustment process mode

- After power on, press the adjustment process mode key on the service remote control.
- Switching on the TV set, holding pushed the "Input" and "Volume (–)" Key at once, the TV set enters in the "K" mode.
  In this condition, pushing "Volume (–)" and "P (∨)" Key, the adjust mode appears.

3. Key operation in the adjustment process mode

- Use the "UP" or "DOWN" cursor key to select the adjustment mode item.
- Use the "LEFT" or "RIGHT" cursor key to change the data.

4. Initialization

When the EEPROM (IC101) has been replaced or when the EEPROM has been initialized, readjust the each adjust the each adjustments.

4-1. When the EEPROM has been replaced:

1) Plug in the AC cord to an AC power outlet and turn on the power.
2) When the setting is finished, the LED turns from red to green. In about 15 seconds, the initialization is completed.

4-2. When initializing the EEPROM data and making readjustments:

1) Enter the Adjustment Process mode.
2) Select the INIT TV item and press the "RIGHT" cursor key to enable the item.
3) Unplug the power cable and plug it again in the AC power outlet. Turn on the power.
4) When the setting is finished, the LED turns from red to green. In about 5 seconds, the initialization is completed.

<Note>
When the INIT TV item has been enabled in the adjustment process, be sure to unplug the power cable and plug it in again. Then start adjustments. Otherwise the readjusted data cannot be put in memory.

4-3. Setting the screen size (inches)

1) Enter the Adjustment Process mode.
2) Check the model number.
3) Hold down the "LEFT" or "RIGHT" cursor key longer than 2 seconds, and select a screen size (LC-20SH1E).

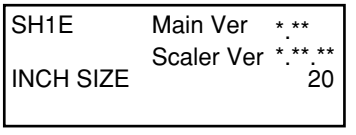

5. Adjustment

5-1. RF AGC adjustment

1) Feed the colour bar signal.

2) In Adjustment Mode, select the RF AGC AUTO ("OFF") and press the " RIGHT" cursor key to start the adjustment.

3) Automatic adjustment is complete when it display "OK" is displayed.

4) RF AGC data will be in the range of 0-63. If "NOK" is displayed, adjustment failed.

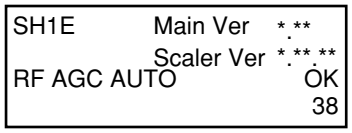

RF AGC Auto adjustment complete

RF AGC data (Example)

5-2. DCXO adjustment

1) Feed the colour bar signal.

2) In Adjustment Mode, select the DCXO AUTO ("OFF") and press " RIGHT" cursor key to start the adjustment.

3) Automatic adjustment is complete when "OK" is displayed. If "NOK" is displayed, adjustment failed.

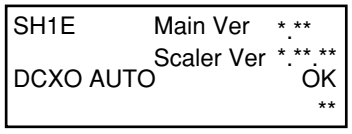

DCXO Auto adjustment complete

DCXO data

5-3. Common bias adjustment

1) Select the EXT-Video input and without signal.

2) In Adjustment Mode, select the COM BIAS and vary the data until the contrast becomes the sharpest. (Black looks most sinking.)

5-4. White balance adjustment

[A] White balance pre-adjustment

1) Feed the 100% white signal.

2) In Adjustment Mode, select the AWBSD ("OFF") and press the " RIGHT" cursor key to start the adjustment.

3) Automatic adjustment is complete when "OK" is displayed.

[B] White balance adjustment

Adjust "R CUTOFF2", "G CUTOFF2", "B CUTOFF2", "WB R GAIN", "WB G GAIN" and "WB B GAIN" in the adjustment processing to obtain the same colour as the standard set.

6. Factory setting

6-1. Make the factory setting using the adjustment remote control.

Model	Key Name	Remote Control Code				OSD Language Setting	
A3IK20SH1E	Shipment Setting 1	1000	0011	1111	110	German	(00001 FEh)
A3IK20SH1K	Shipment Setting 2	1000	0000	1010	110	English	(00002 A8h)
A3IK20SH1R	Shipment Setting 3	1000	0110	1011	110	Russian	(00003 EBh)
A3IK20SH1F	Shipment Setting 4	1000	0100	1011	110	French	(00004 E9h)
A3IK20SH1I	Shipment Setting 6	1000	0000	1011	110	Italian	(00005 E8h)

6-2. Different factory settings.

Model	Language	Country	Color System	Sound System
A3IK20SH1E	German	Germany	PAL	B/G
A3IK20SH1K	English	UK	PAL	I
A3IK20SH1R	Russian	Russia	SECAM	D/K
A3IK20SH1F	French	France	SECAM	L/L'
A3IK20SH1I	Italian	Italy	PAL	B/G

7. Lamp error detection

7-1. Functional description

This LCD colour television has a function (lamp error detection) to be turned OFF automatically for safety when the lamp or lamp circuit is abnormal.

If the lamp or lamp circuit is abnormal, or some other errors happen, and the lamp error detection is executed, the followings occur.

① The main unit of television is turned OFF 5 seconds after it is turned ON. (The power LED on the front side of TV turns from green to red.)

② If the situation ① happens 5 times sequentially, television can not be turned ON. (The power LED remains red.)

7-2. Countermeasures

7-2-1. Check when turning OFF the lamp error detection

If the power has been turned off 5 times because of lamp error, hold down the unit's "INPUT" and "Volume (–)" kye simultaneously and turn on the unit's power switch. The TV set gets back on power in the "K" mode.

In this state, press the unit's "Volume (–)" and "P (∨)" key simultaneously. The Adjustment Process mode shows up.

This enables the operation check to detect errors in the lamp or lamp circuit.

Check whether "ERROR NO RESET" of the adjustment process is 1 or more. If it is 1 or more, it indicates the lamp error detection was executed.

7-2-2. Resetting of the lamp error count

After confirming that the lamp or lamp circuit is normal, reset the lamp error count. Select "ERROR NO RESET" of the adjustment process and set the number to 0 using the "LEFT" or "RIGHT" cursor key.

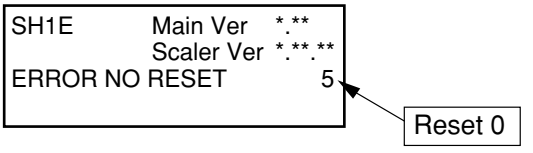

Afterwards, perform the operation check to confirm that the lamp error detection does not function.

8. Hotel mode

8-1. How to enter the Hotel mode.

1) Turn on the power and enter the Adjustment Process mode.
2) Using the "UP" or "DOWN" cursor key on the remote controller, select the Hotel mode.
3) Using the "RIGHT" cursor key on the remote controller, change the setting from "0" to "1". Now the Hotel mode shows up.

Adjustment Process menu

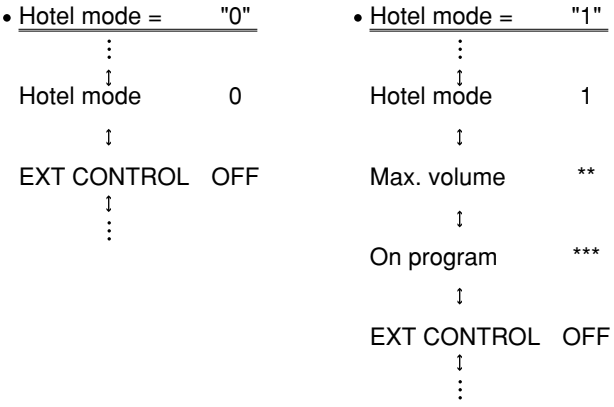

4) Using the "UP" or "DOWN" cursor key on the remote controller, select "Max. volume" and "On program". Make the setting with the "LEFT" or "RIGHT" cursor key.
5) Finally quit the Adjustment Process mode and turn off the power. The TV set comes on in the Hotel mode after the next switch-on.

8-2. Hotel mode settings

1) Max. volume (0-60)
   You can set the maximum volume at your desired level.
2) On program (0-199)
   You can select a desired channel when switching on the TV set.

8-3. Canceling the Hotel mode

1) Turn on the power and enter the Adjustment Process mode.
2) Using the "UP" or "DOWN" cursor key, select the Hotel mode.
3) Using the "LEFT" cursor key, change the setting from "1" to "0".
4) Finally quit the Adjustment Process mode and turn off the power. The TV set comes on out of the Hotel mode after the next switch-on.

9. Software Loading

1) Upgrading the software or after replacement of IC151, IC501 or Main PWB, make sure to upload the processors with updated software.
2) Please use the dedicated Interface JIG (JIGINF-001) and supplied programs for upgrading the software.
3) This model employs two software;
   • SCALER microprocessor software
   • MAIN microprocessor software
   Please upload the SCALER microprocessor software first follow by MAIN microprocessor software.

1. SCALER microprocessor
   1) Set Interface JIG switch to position "SCALER".
   2) Power ON the set and plug Interface JIG connector to P2002.
   3) Run the ISP_Tool.exe program.

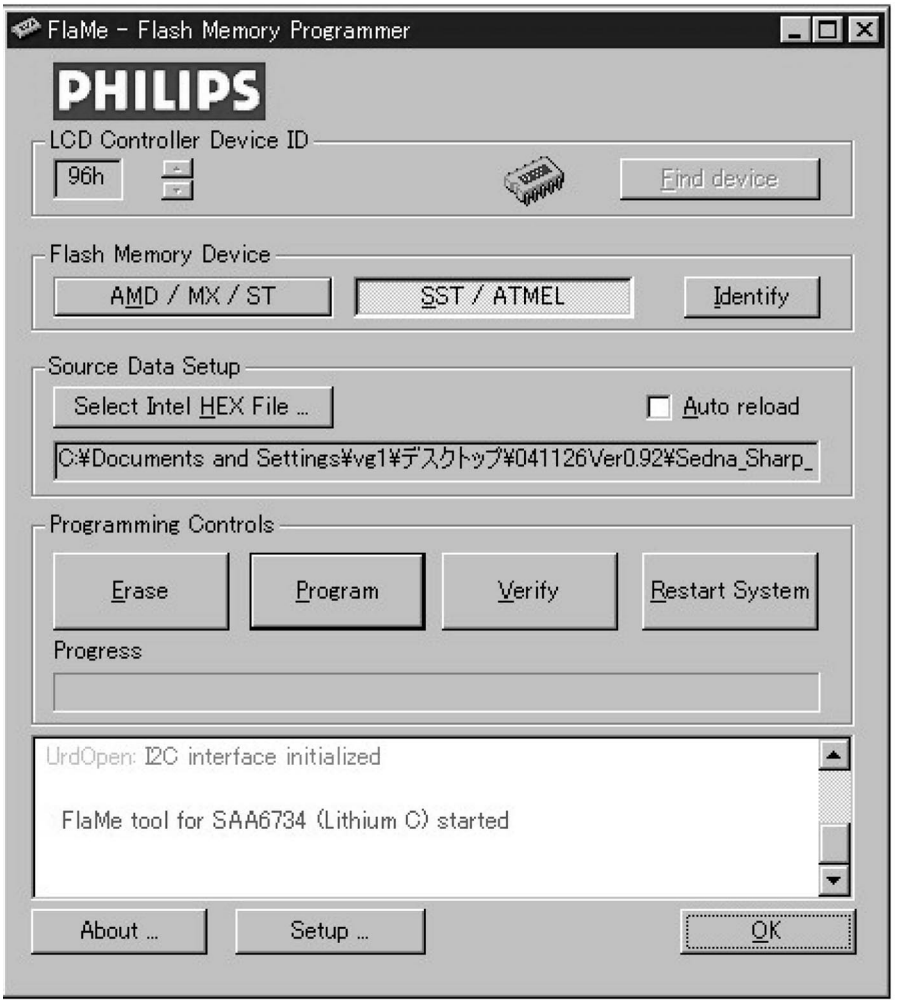

4) First click [SST / ATMEL] and then follow by [Identify] to identify the flash memory.

Confirm the item below in Comment Window.

5) Click [Select Intel HEX File …] to open the source files. The source file name are "Sedna_Sharp****.hex"

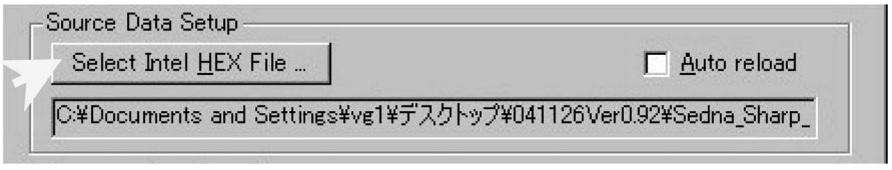

Confirm the source file is loaded correctly.

6) Next click the [Erase] to erase all the data in the flash memory. Confirm the erase process is complete without any error.

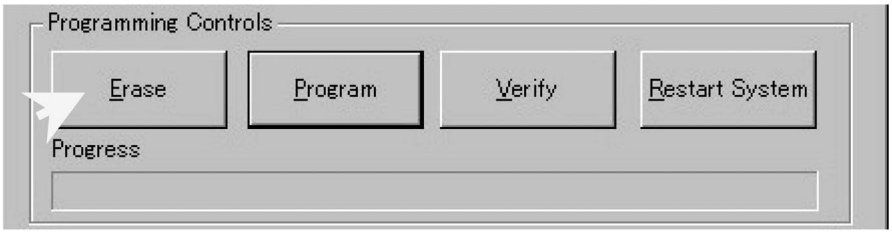

7) Then click [Program] to start uploading the source file into the flash memory. After uploading process is complete, confirm there are no error.

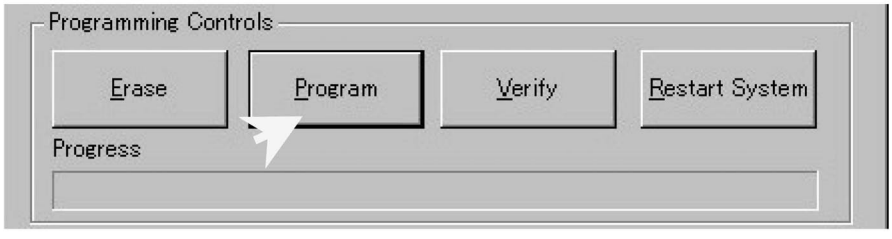

8) Click [Verify] to verify the uploaded data and confirm there are no error.

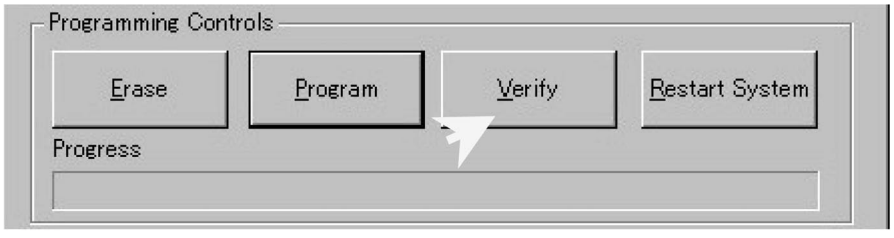

9) Finally click [Restart System] to initialize. Confirm "Reset done" in Comment Window.

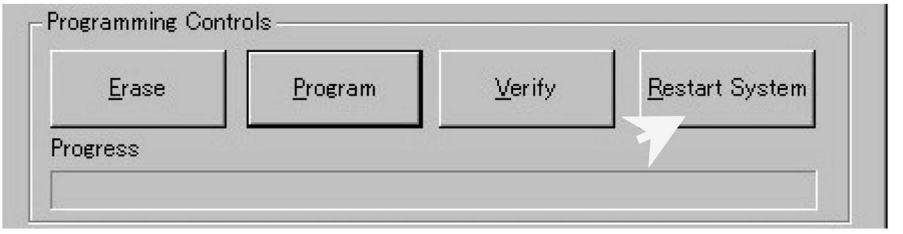

10) Power OFF the set by unplugging AC Cord, remove the JIG from the plug and wait for 1 minute before power ON again.

Notes: If any error occur during any process, power OFF the set and repeat the all the process again. If these still fail, please erase Main Software and repeat the whole process again. To erase Main software, please refer to MAIN microprocessor step No. 1) to 5) only.

2. MAIN microprocessor
   1) Set JIG switch to position "LOC".
   2) Power ON the set and plug Interface JIG connector to P2002.
   3) Run the WISP.exe program.

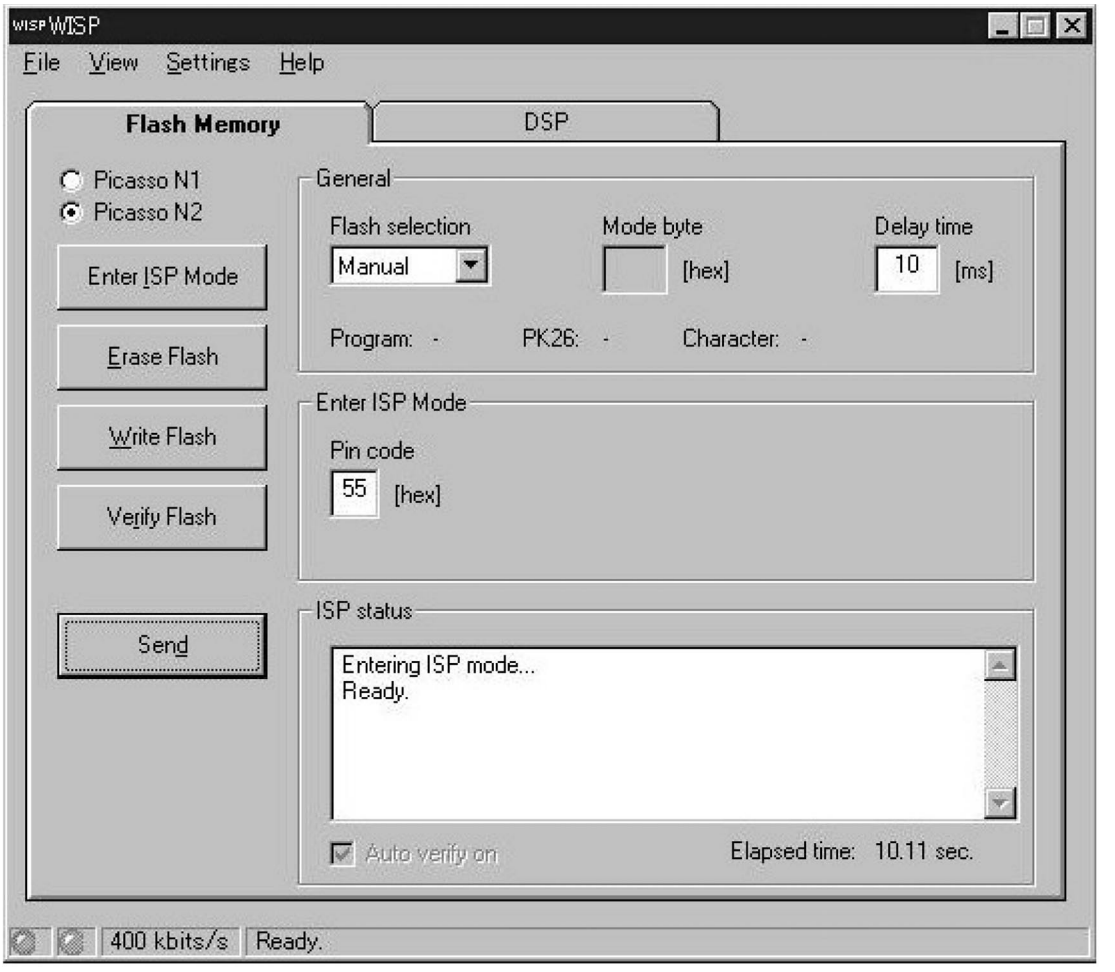

4) First click [Enter ISP Mode] then click [Send]. If the following window appear, click [Yes]

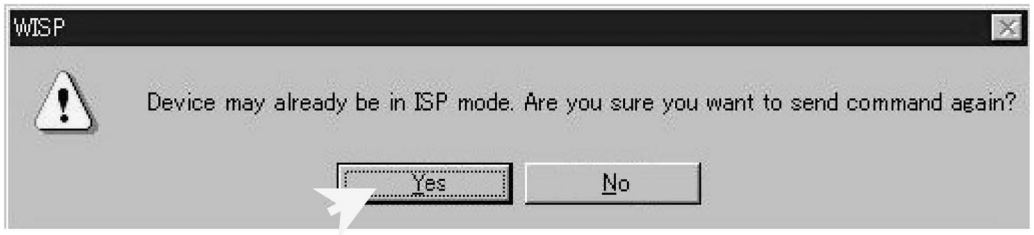

Confirm ISP status "Ready".

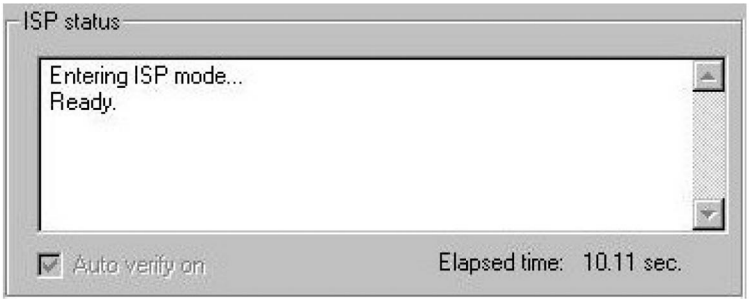

If "Entering ISP is not successful" occur, repeat step No. 4) again. If still fail, unplug the AC cord and repeat from step No. 2) again.

5) Then click [Erase Flash], follow by [Send]. Confirm the Program, PK26 & Character are all "OK" and ISP status is "Ready".

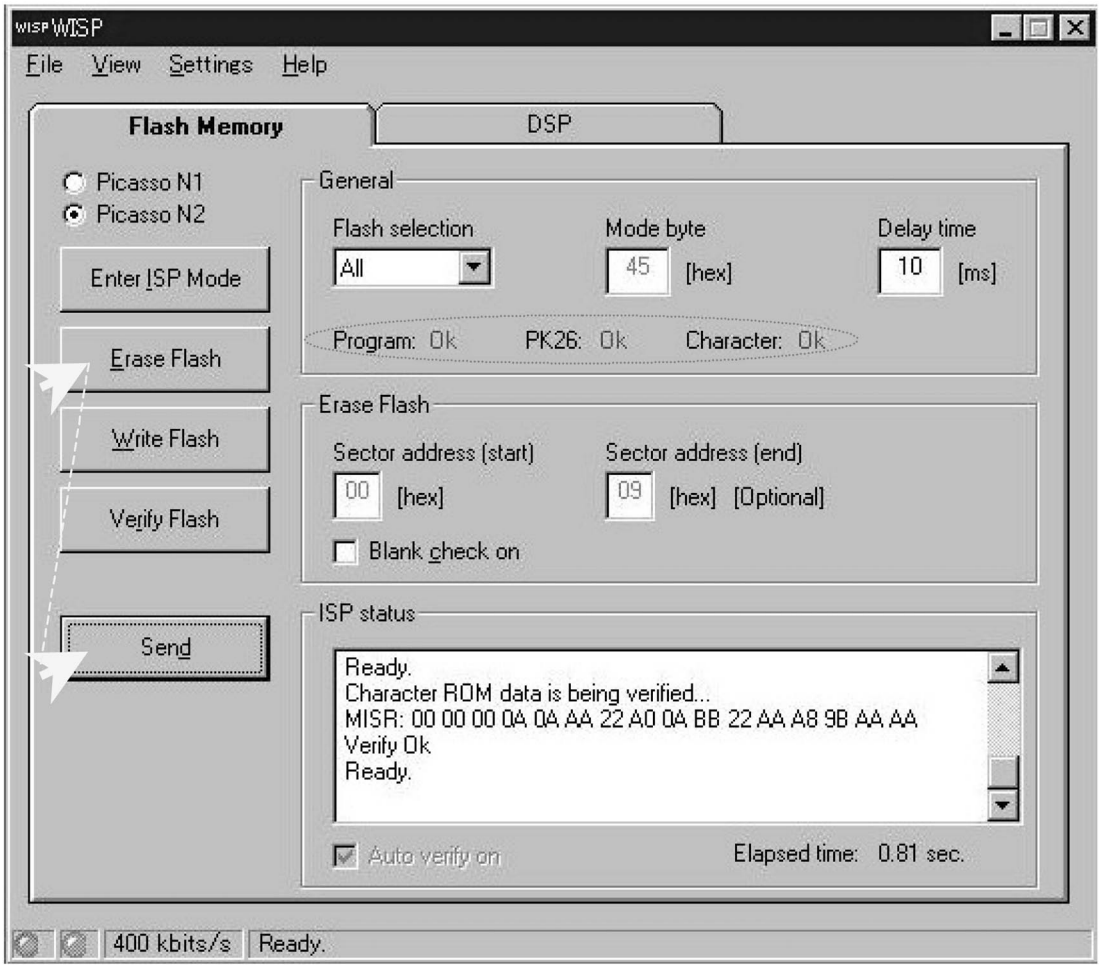

If "Failed" occur, unplug the AC cord and repeat the whole process again from beginning.

6) Next click [Write Flash] and load the source file by clicking [Browse]. The source file name are "LC20SH1_****.hex". Once the data is loaded successfully click [Send]. Confirm the Program, PK26 & Character are all "OK" and ISP status is "Ready".

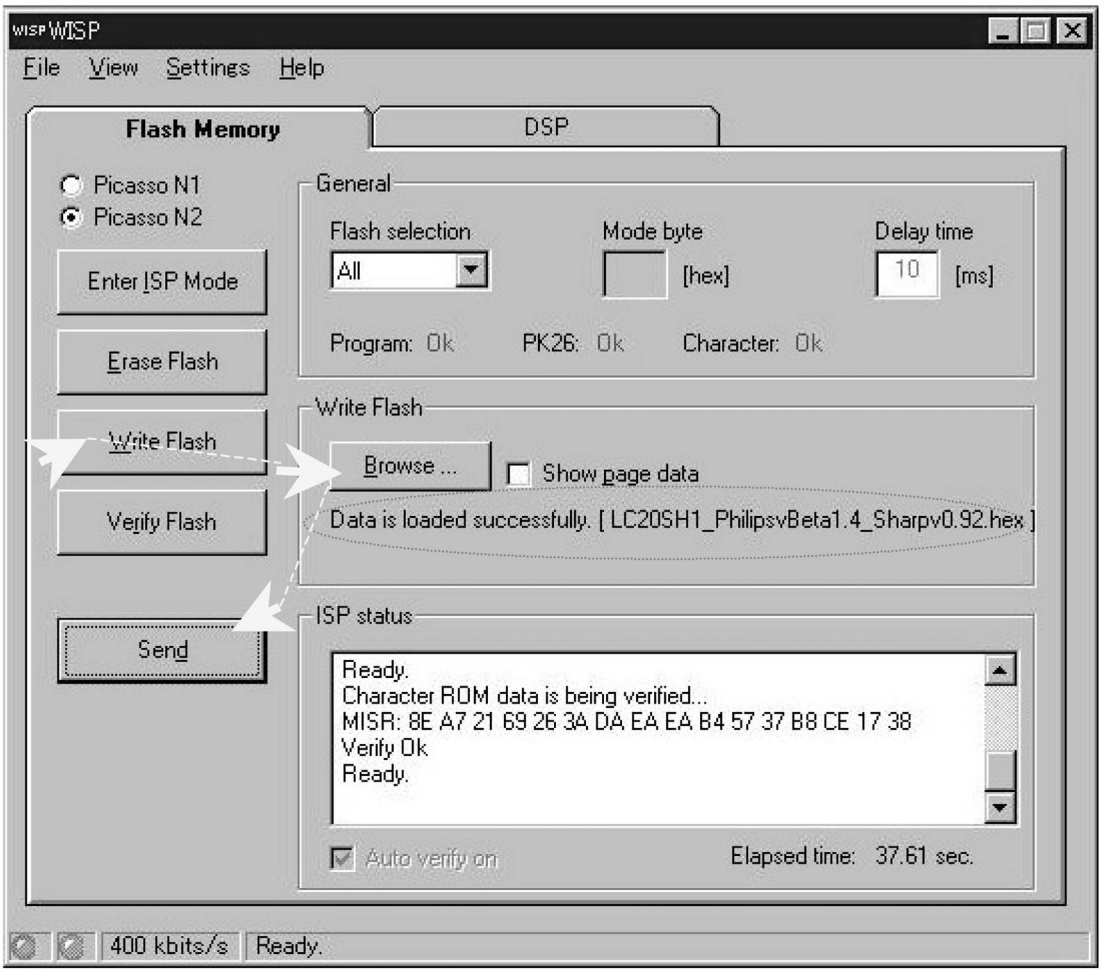

If "Failed" occur, unplug the AC cord and repeat the whole process again from beginning.

7) Finally click [Verify Flash] and [Send] to verify the flash memory. Confirm the Program, PK26 & Character are all "OK" and ISP status is "Ready". If "Failed" occur, unplug the AC cord and repeat the whole process again from beginning.
8) Power OFF the set and remove the JIG.

TROUBLE SHOOTING TABLE

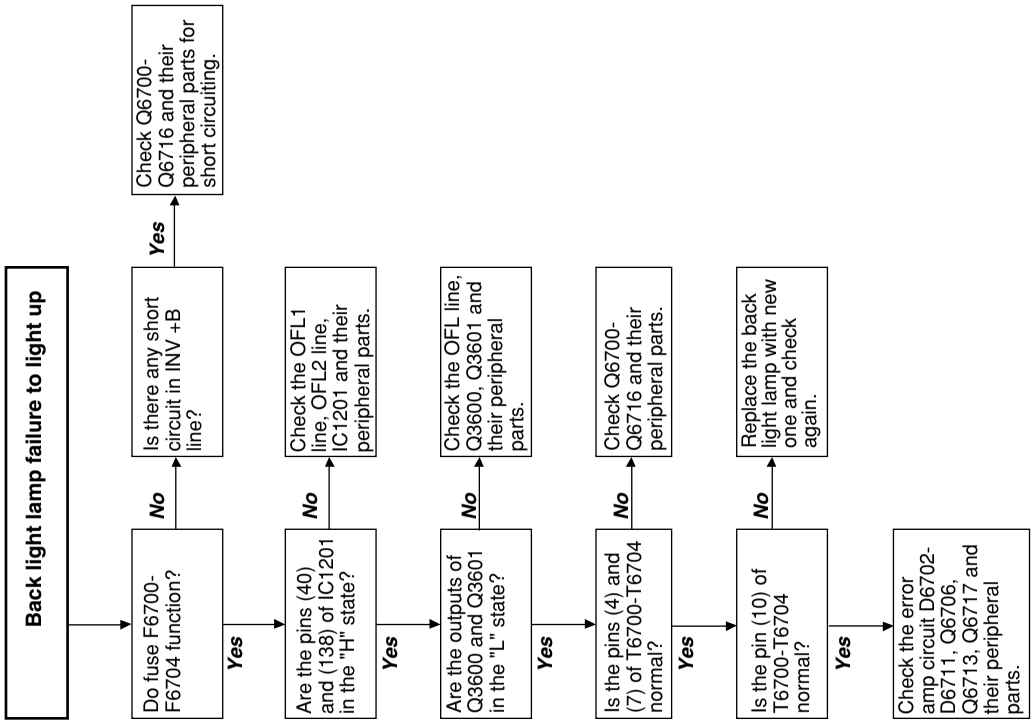
Back light lamp failure to light up
Do fuse F6700-F6704 function?
No
Is there any short circuit in INV +B line?
Yes
Check Q6700-Q6716 and their peripheral parts for short circuiting.
Yes
Are the pins (40) and (138) of IC1201 in the "H" state?
No
Check the OFL1 line, OFL2 line, IC1201 and their peripheral parts.
Yes
Are the outputs of Q3600 and Q3601 in the "L" state?
No
Check the OFL line, Q3600, Q3601 and their peripheral parts.
Yes
Is the pins (4) and (7) of T6700-T6704 normal?
No
Check Q6700-Q6716 and their peripheral parts.
Yes
Is the pin (10) of T6700-T6704 normal?
No
Replace the back light lamp with new one and check again.
Yes
Check the error amp circuit D6702-D6711, Q6706, Q6713, Q6717 and their peripheral parts.

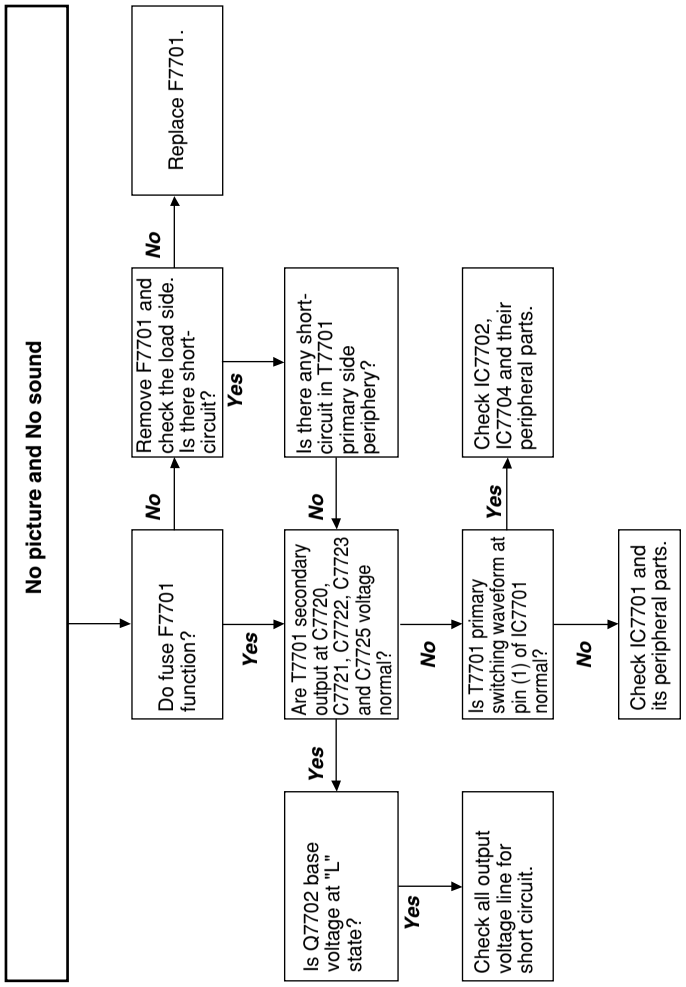
No picture and No sound
Do fuse F7701 function?
No
Remove F7701 and check the load side. Is there short-circuit?
No
Replace F7701.
Yes
Is there any short-circuit in T7701 primary side periphery?
Yes
Are T7701 secondary output at C7720, C7721, C7722, C7723 and C7725 voltage normal?
No
Is T7701 primary switching waveform at pin (1) of IC7701 normal?
Yes
Check IC7702, IC7704 and their peripheral parts.
No
Check IC7701 and its peripheral parts.
Yes
Is Q7702 base voltage at "L" state?
Yes
Check all output voltage line for short circuit.

TROUBLE SHOOTING TABLE (Continued)

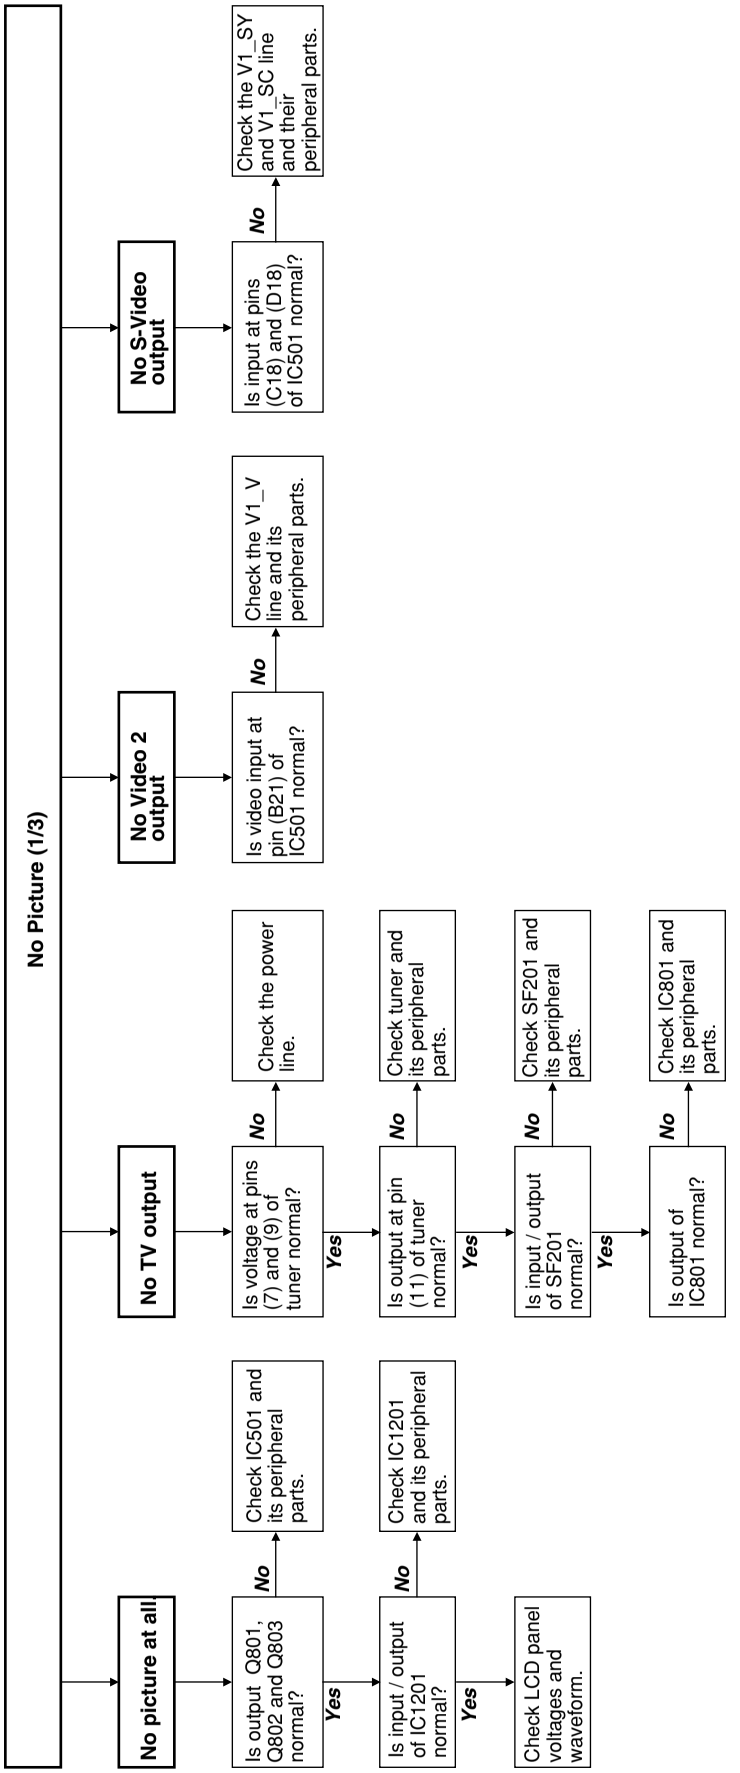
No Picture (1/3)
No picture at all.
Is output Q801, Q802 and Q803 normal?
No
Check IC501 and its peripheral parts.
Yes
Is input / output of IC1201 normal?
No
Check IC1201 and its peripheral parts.
Yes
Check LCD panel voltages and waveform.
No TV output
Is voltage at pins (7) and (9) of tuner normal?
No
Check the power line.
Yes
Is output at pin (11) of tuner normal?
No
Check tuner and its peripheral parts.
Yes
Is input / output of SF201 normal?
No
Check SF201 and its peripheral parts.
Yes
Is output of IC801 normal?
No
Check IC801 and its peripheral parts.
No Video 2 output
Is video input at pin (B21) of IC501 normal?
No
Check the V1_V line and its peripheral parts.
No S-Video output
Is input at pins (C18) and (D18) of IC501 normal?
No
Check the V1_SY and V1_SC line and their peripheral parts.

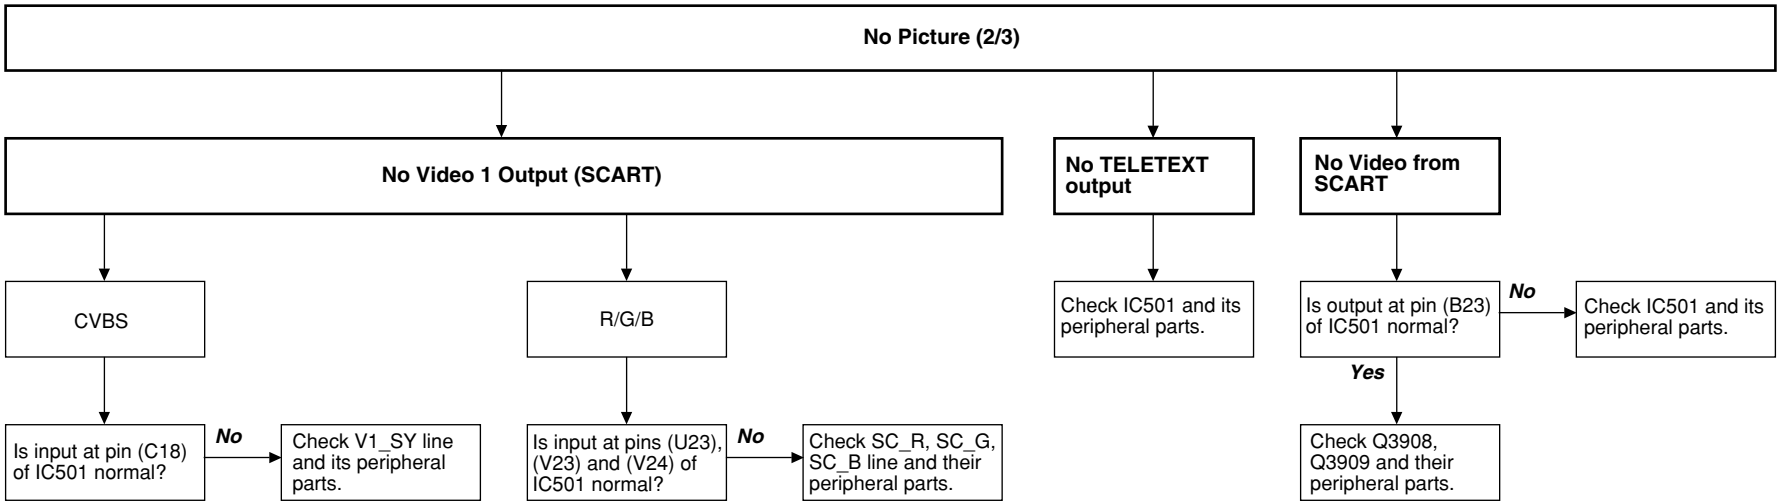
No Picture (2/3)
No Video 1 Output (SCART)
No TELETEXT output
No Video from SCART
CVBS
R/G/B
Check IC501 and its peripheral parts.
Is output at pin (B23) of IC501 normal?
No
Check IC501 and its peripheral parts.
Yes
Is input at pin (C18) of IC501 normal?
No
Check V1_SY line and its peripheral parts.
Is input at pins (U23), (V23) and (V24) of IC501 normal?
No
Check SC_R, SC_G, SC_B line and their peripheral parts.
Check Q3908, Q3909 and their peripheral parts.

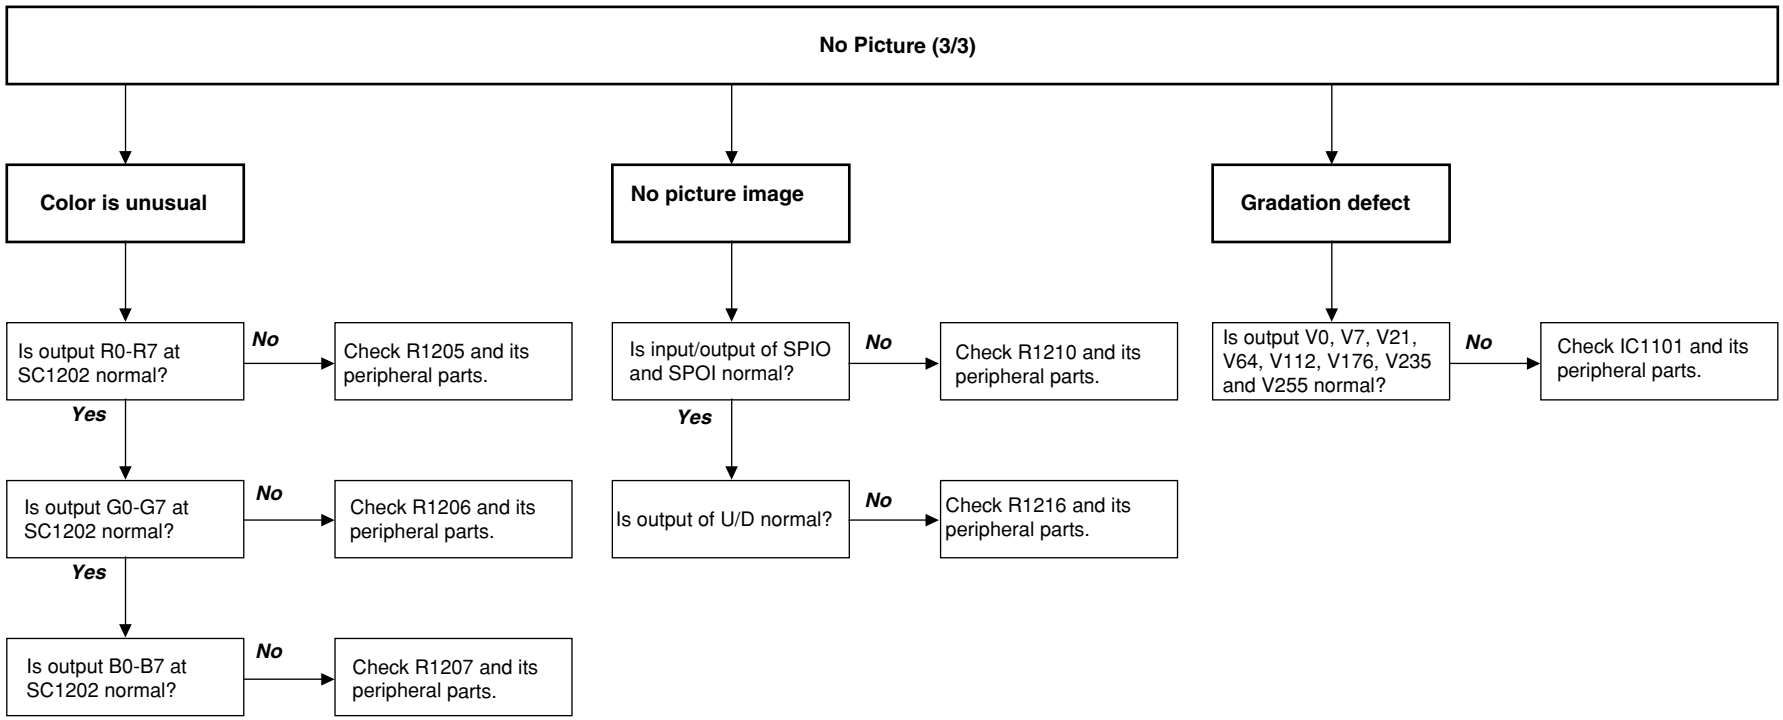
No Picture (3/3)
Color is unusual
No picture image
Gradation defect
Is output R0-R7 at SC1202 normal?
No
Check R1205 and its peripheral parts.
Is input/output of SPIO and SPOI normal?
No
Check R1210 and its peripheral parts.
Is output V0, V7, V21, V64, V112, V176, V235 and V255 normal?
No
Check IC1101 and its peripheral parts.
Yes
Yes
Is output G0-G7 at SC1202 normal?
No
Check R1206 and its peripheral parts.
Is output of U/D normal?
No
Check R1216 and its peripheral parts.
Yes
Is output B0-B7 at SC1202 normal?
No
Check R1207 and its peripheral parts.

TROUBLE SHOOTING TABLE (Continued)

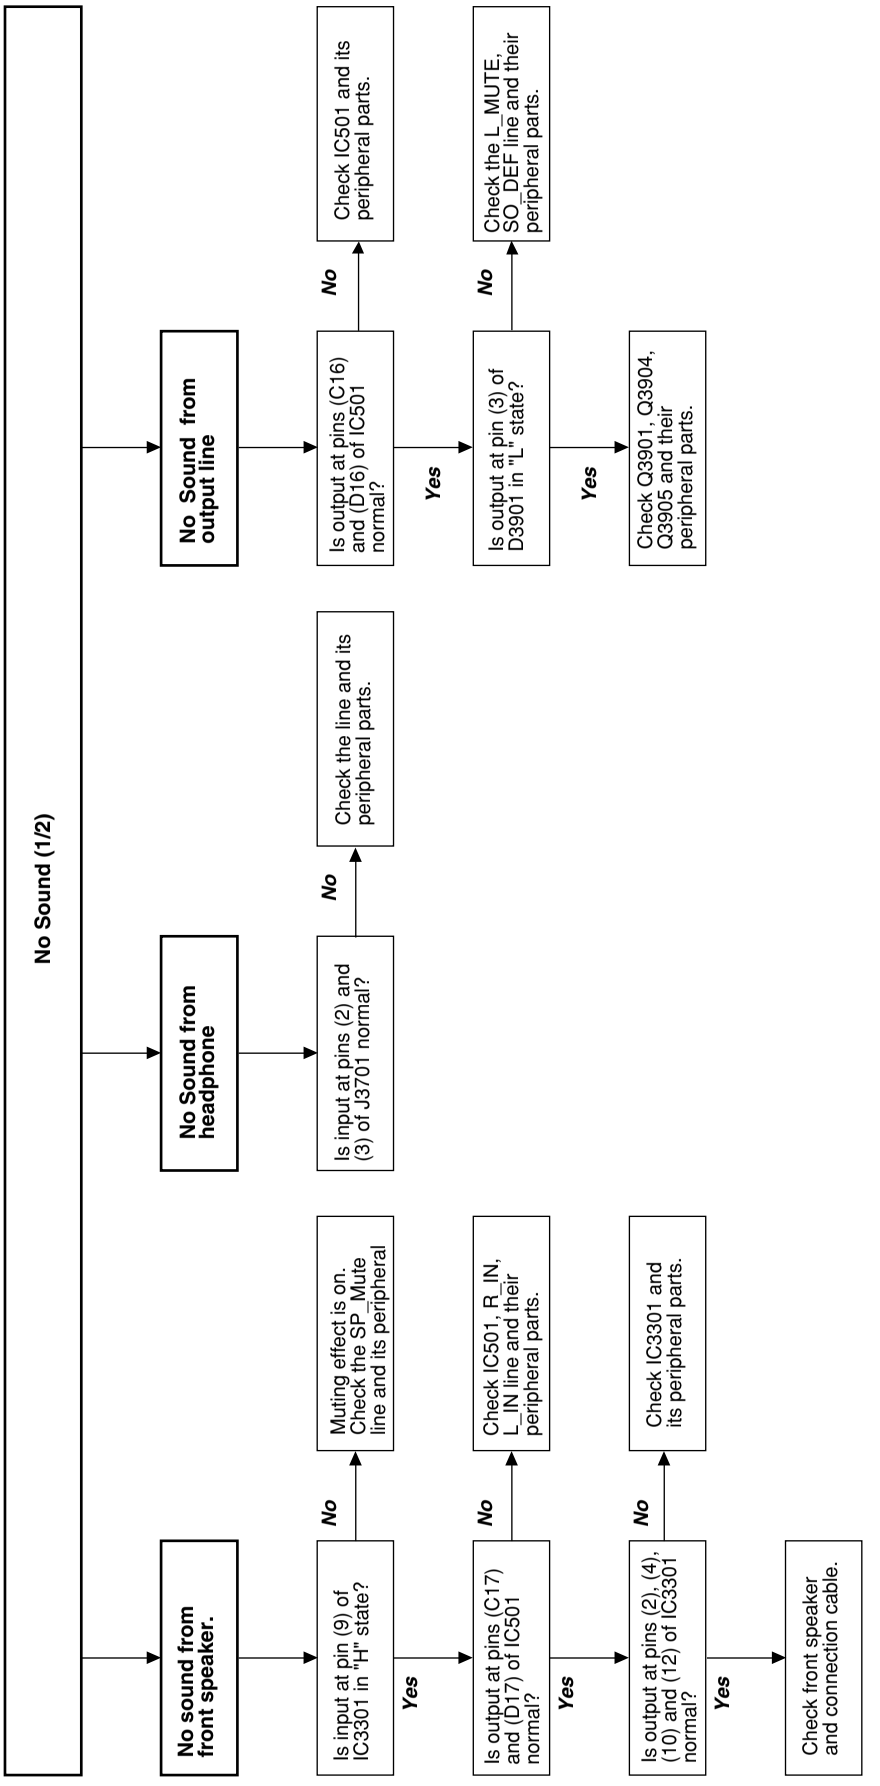
No Sound (1/2)
No sound from front speaker.
Is input at pin (9) of IC3301 in "H" state?
No
Muting effect is on. Check the SP_Mute line and its peripheral
Yes
Is output at pins (C17) and (D17) of IC501 normal?
No
Check IC501, R_IN, L_IN line and their peripheral parts.
Yes
Is output at pins (2), (4), (10) and (12) of IC3301 normal?
No
Check IC3301 and its peripheral parts.
Yes
Check front speaker and connection cable.
No Sound from headphone
Is input at pins (2) and (3) of J3701 normal?
No
Check the line and its peripheral parts.
No Sound from output line
Is output at pins (C16) and (D16) of IC501 normal?
No
Check IC501 and its peripheral parts.
Yes
Is output at pin (3) of D3901 in "L" state?
No
Check the L_MUTE, SO_DEF line and their peripheral parts.
Yes
Check Q3901, Q3904, Q3905 and their peripheral parts.

TROUBLE SHOOTING TABLE (Continued)

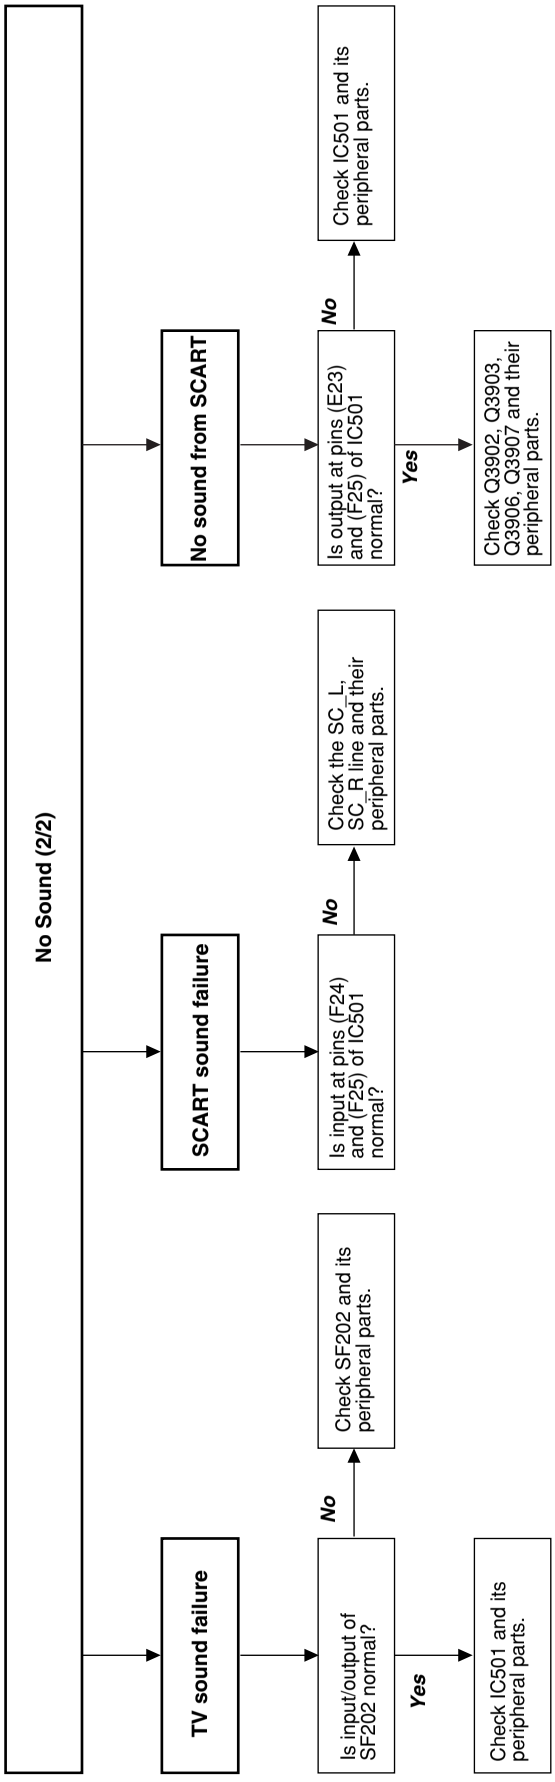
No Sound (2/2)
TV sound failure
Is input/output of SF202 normal?
No
Check SF202 and its peripheral parts.
Yes
Check IC501 and its peripheral parts.
SCART sound failure
Is input at pins (F24) and (F25) of IC501 normal?
No
Check the SC_L, SC_R line and their peripheral parts.
No sound from SCART
Is output at pins (E23) and (F25) of IC501 normal?
No
Check IC501 and its peripheral parts.
Yes
Check Q3902, Q3903, Q3906, Q3907 and their peripheral parts.

CHASSIS LAYOUT

OPERATION Unit

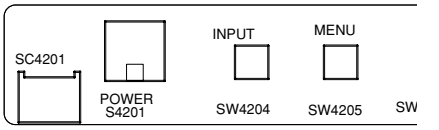

MAIN Unit

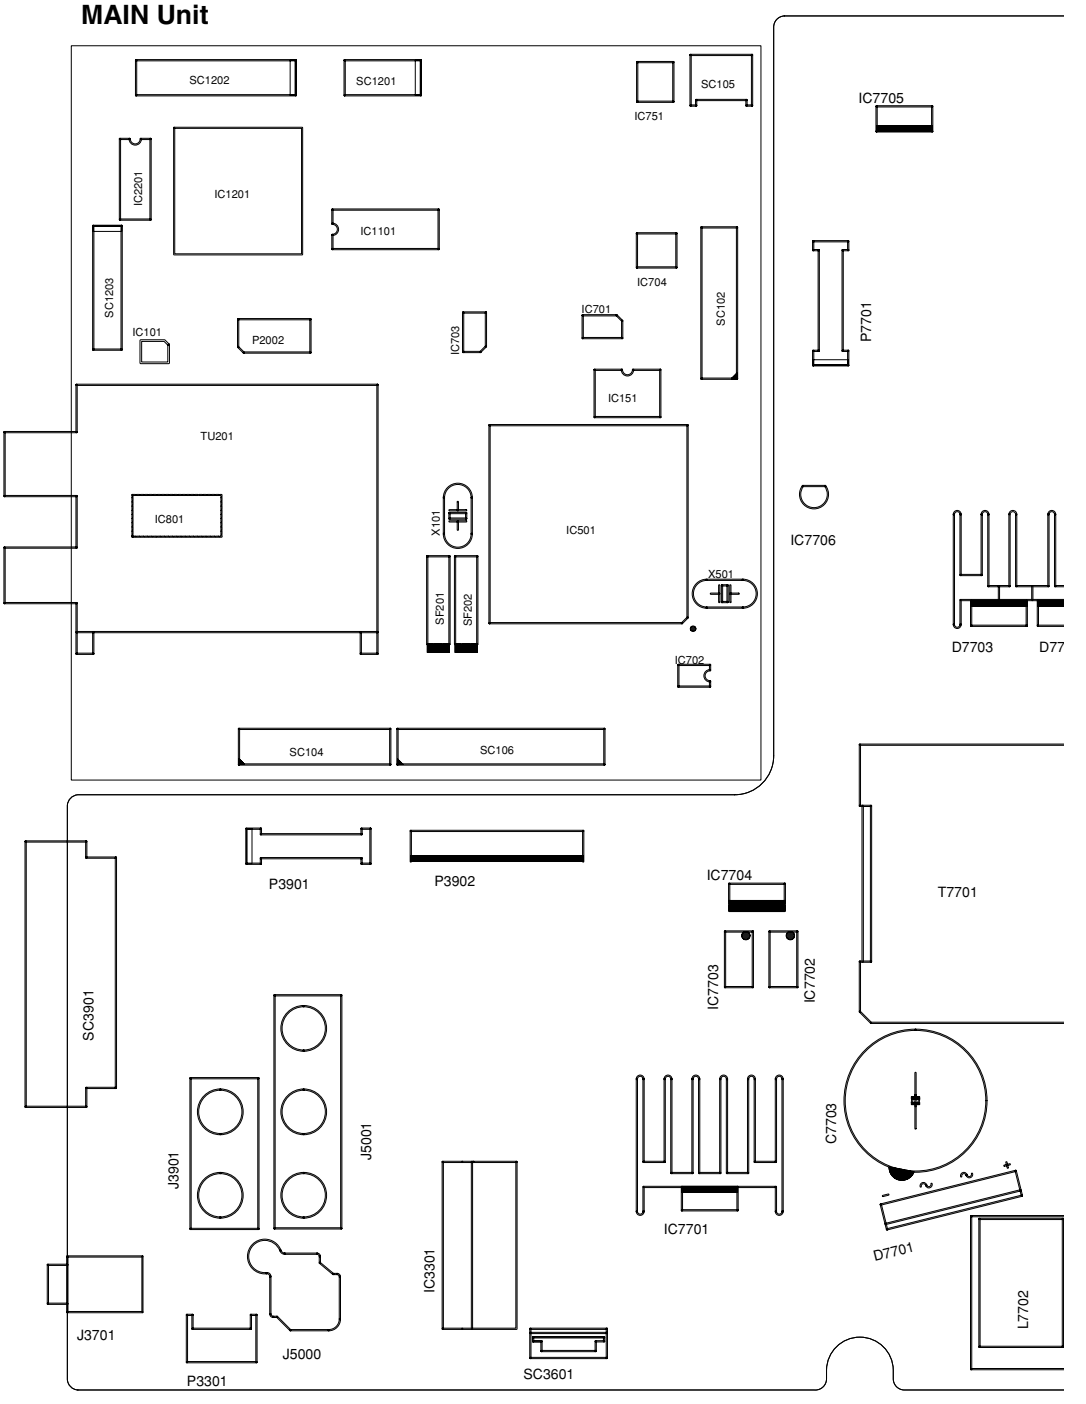

R/C, LED Unit

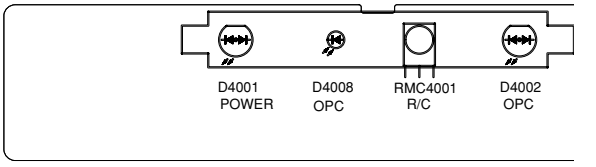

1	2	3	4	5	6	7	8	9	10

H G F E D C B A

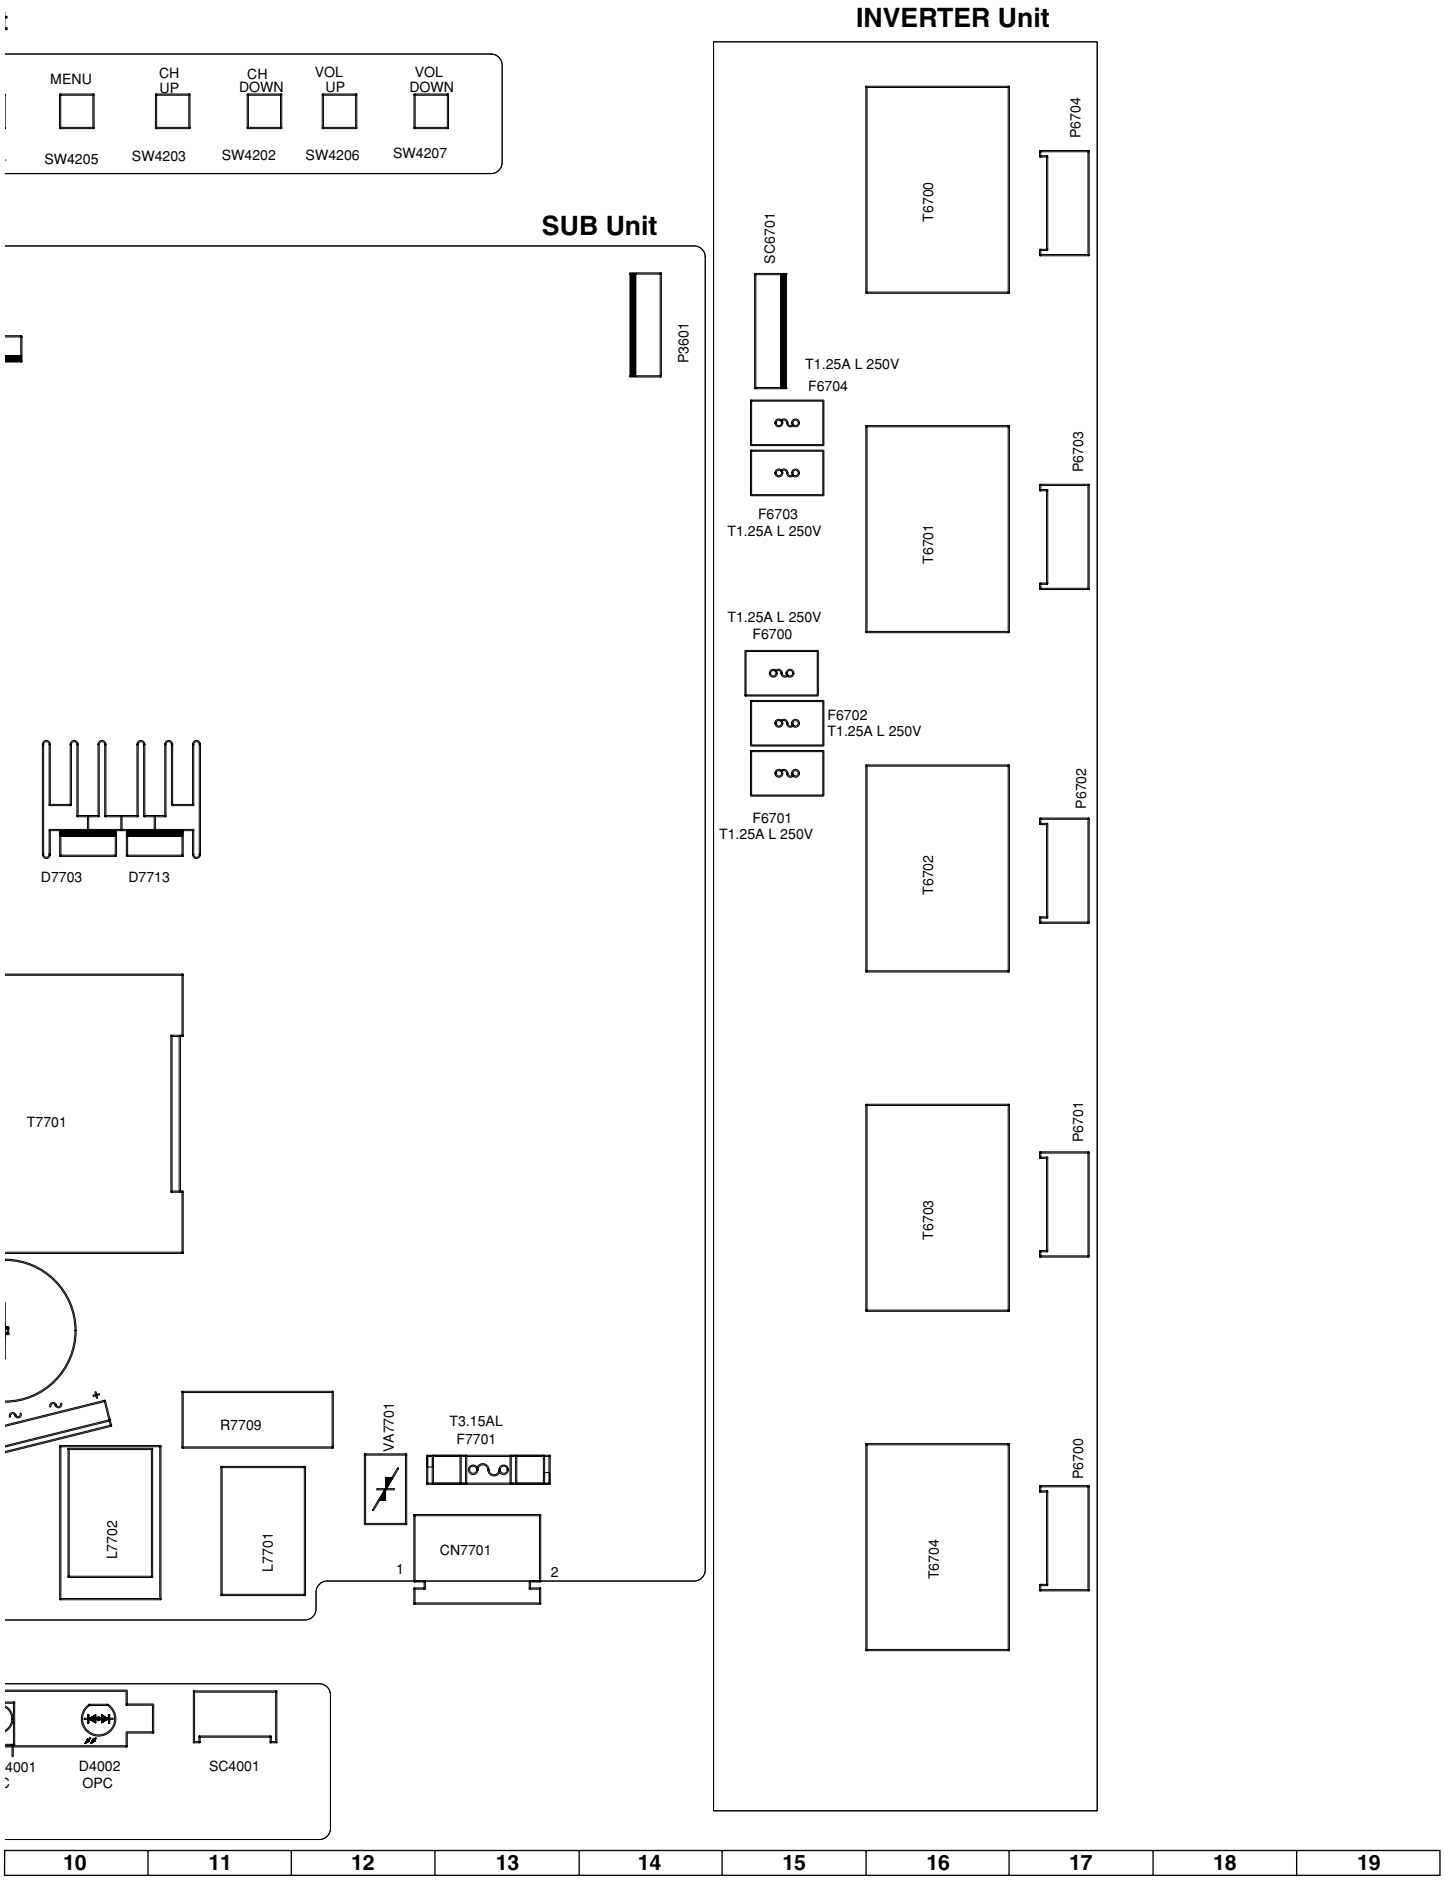

10	11	12	13	14	15	16	17	18	19

BLOCK DIAGRAM

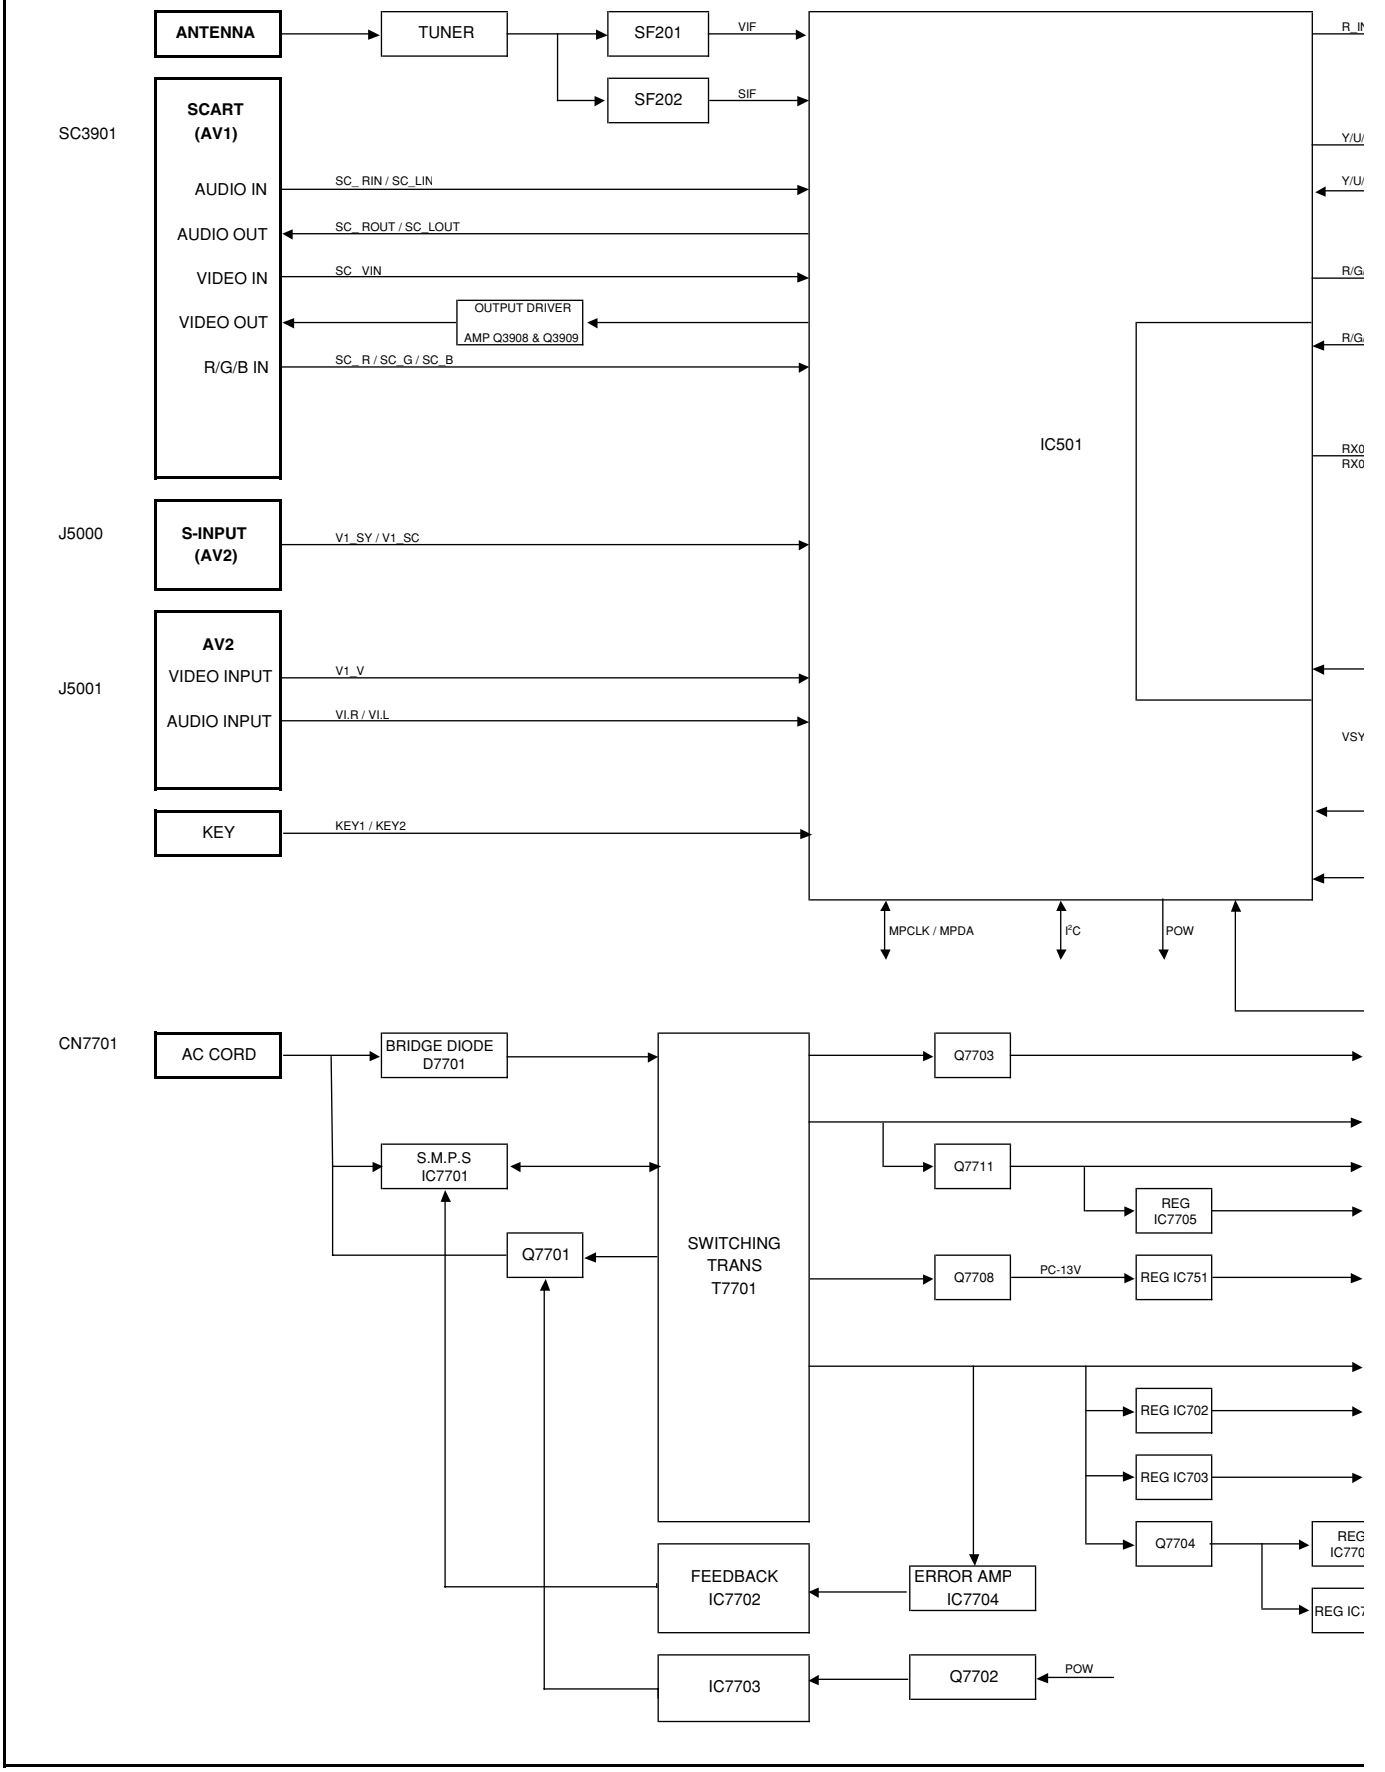

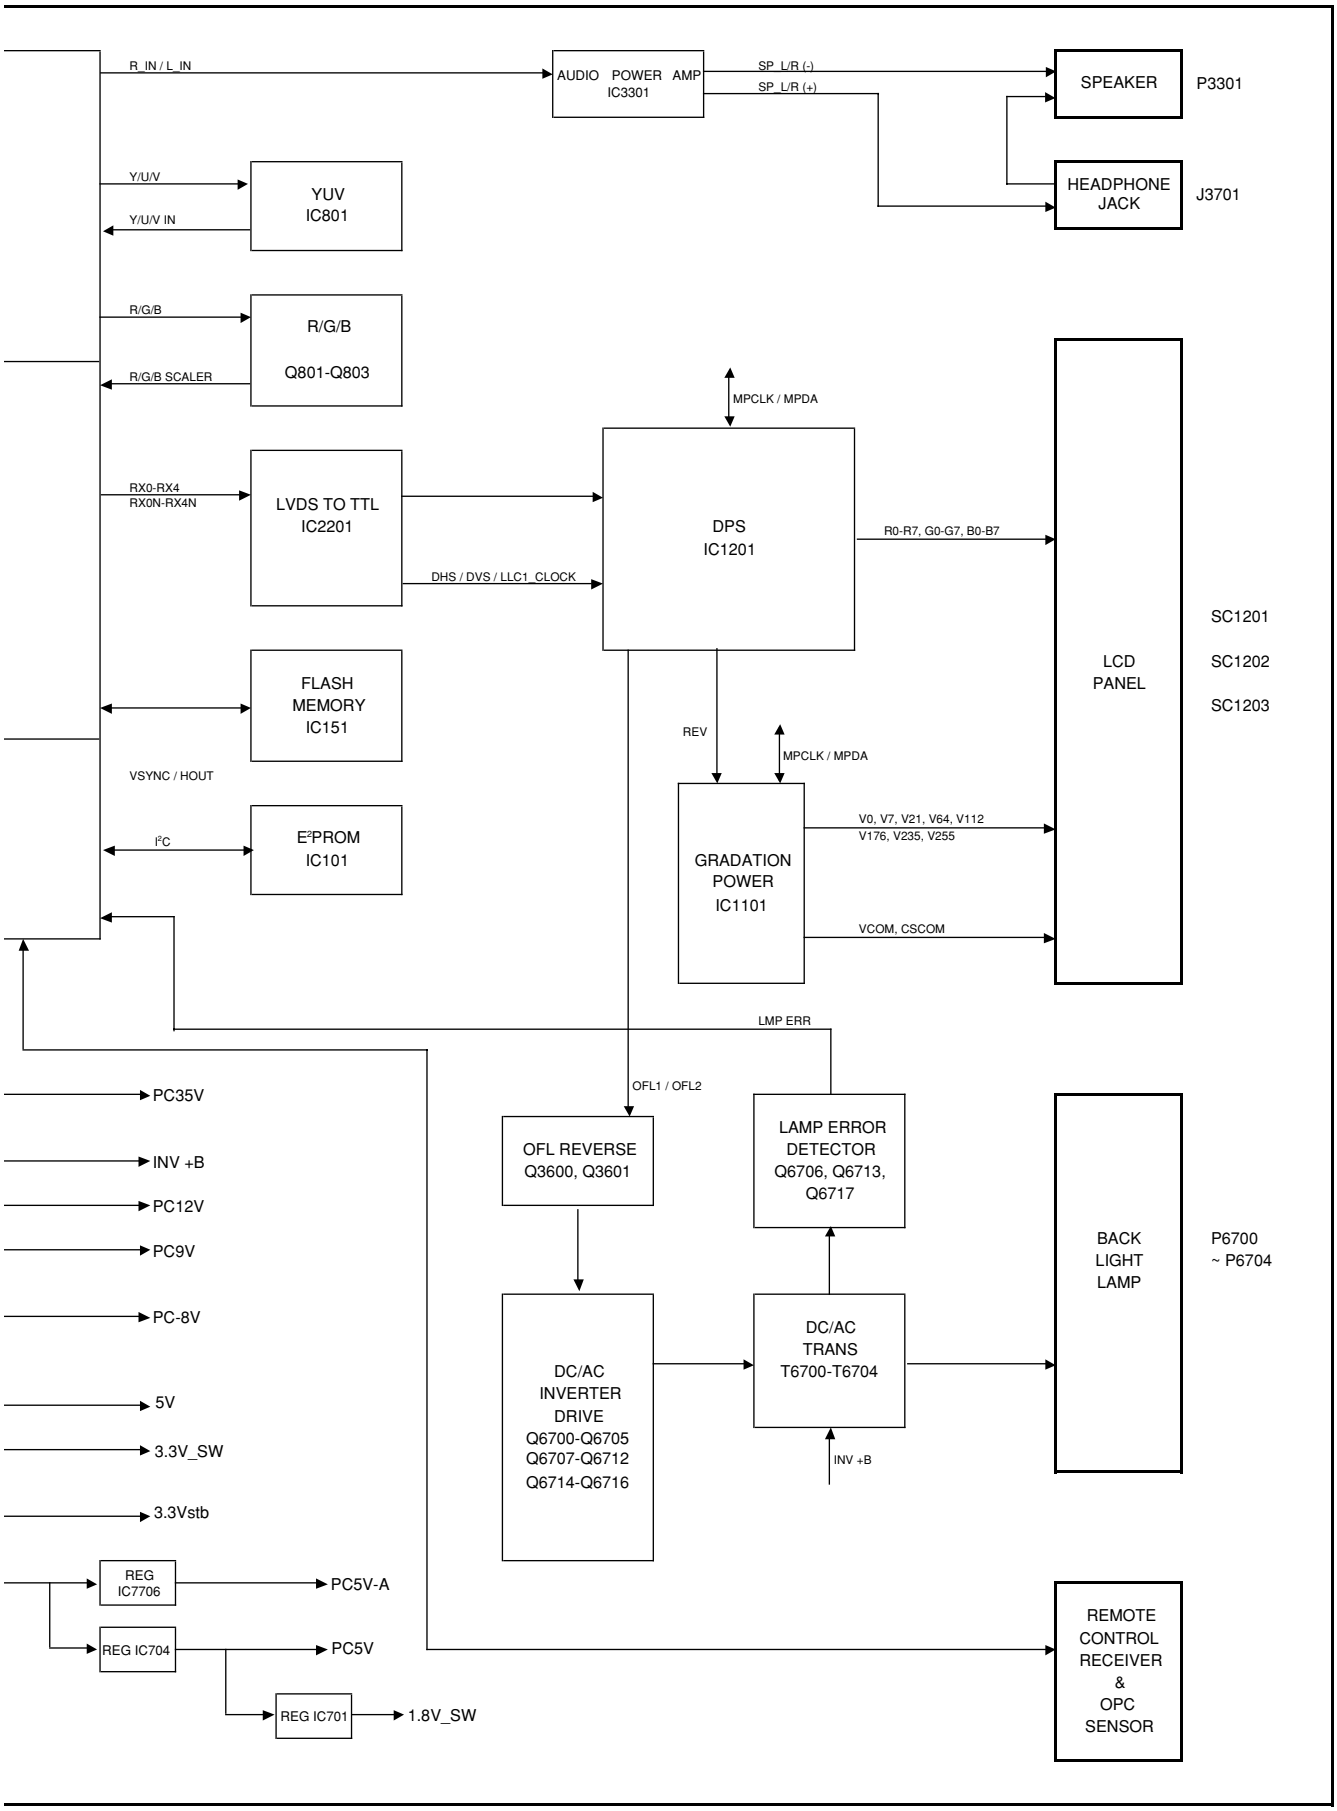

10	11	12	13	14	15	16	17	18	19

OVERALL WIRING DIAGRAM

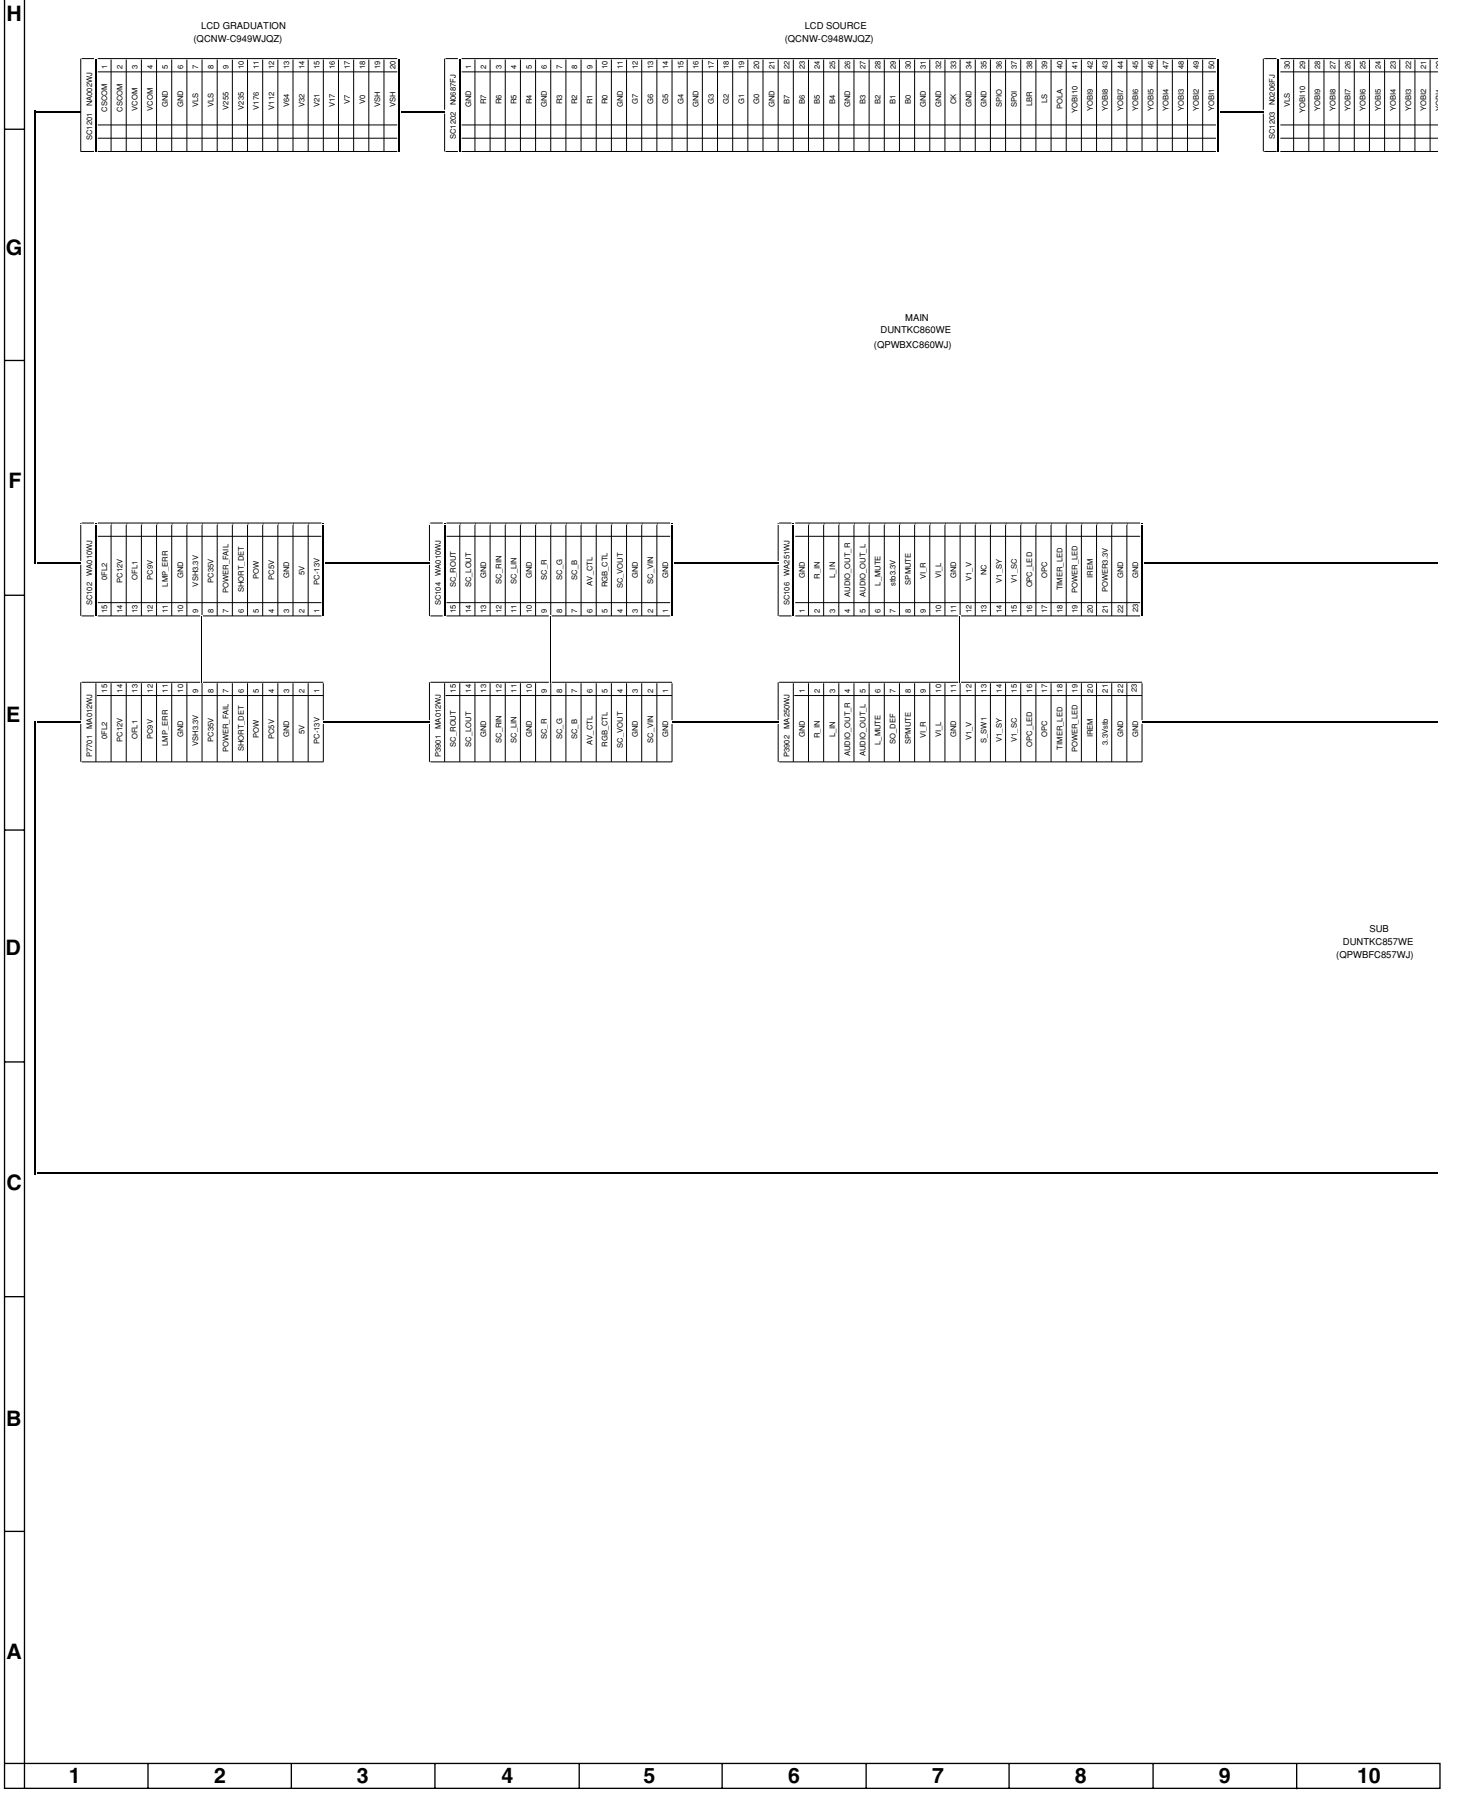

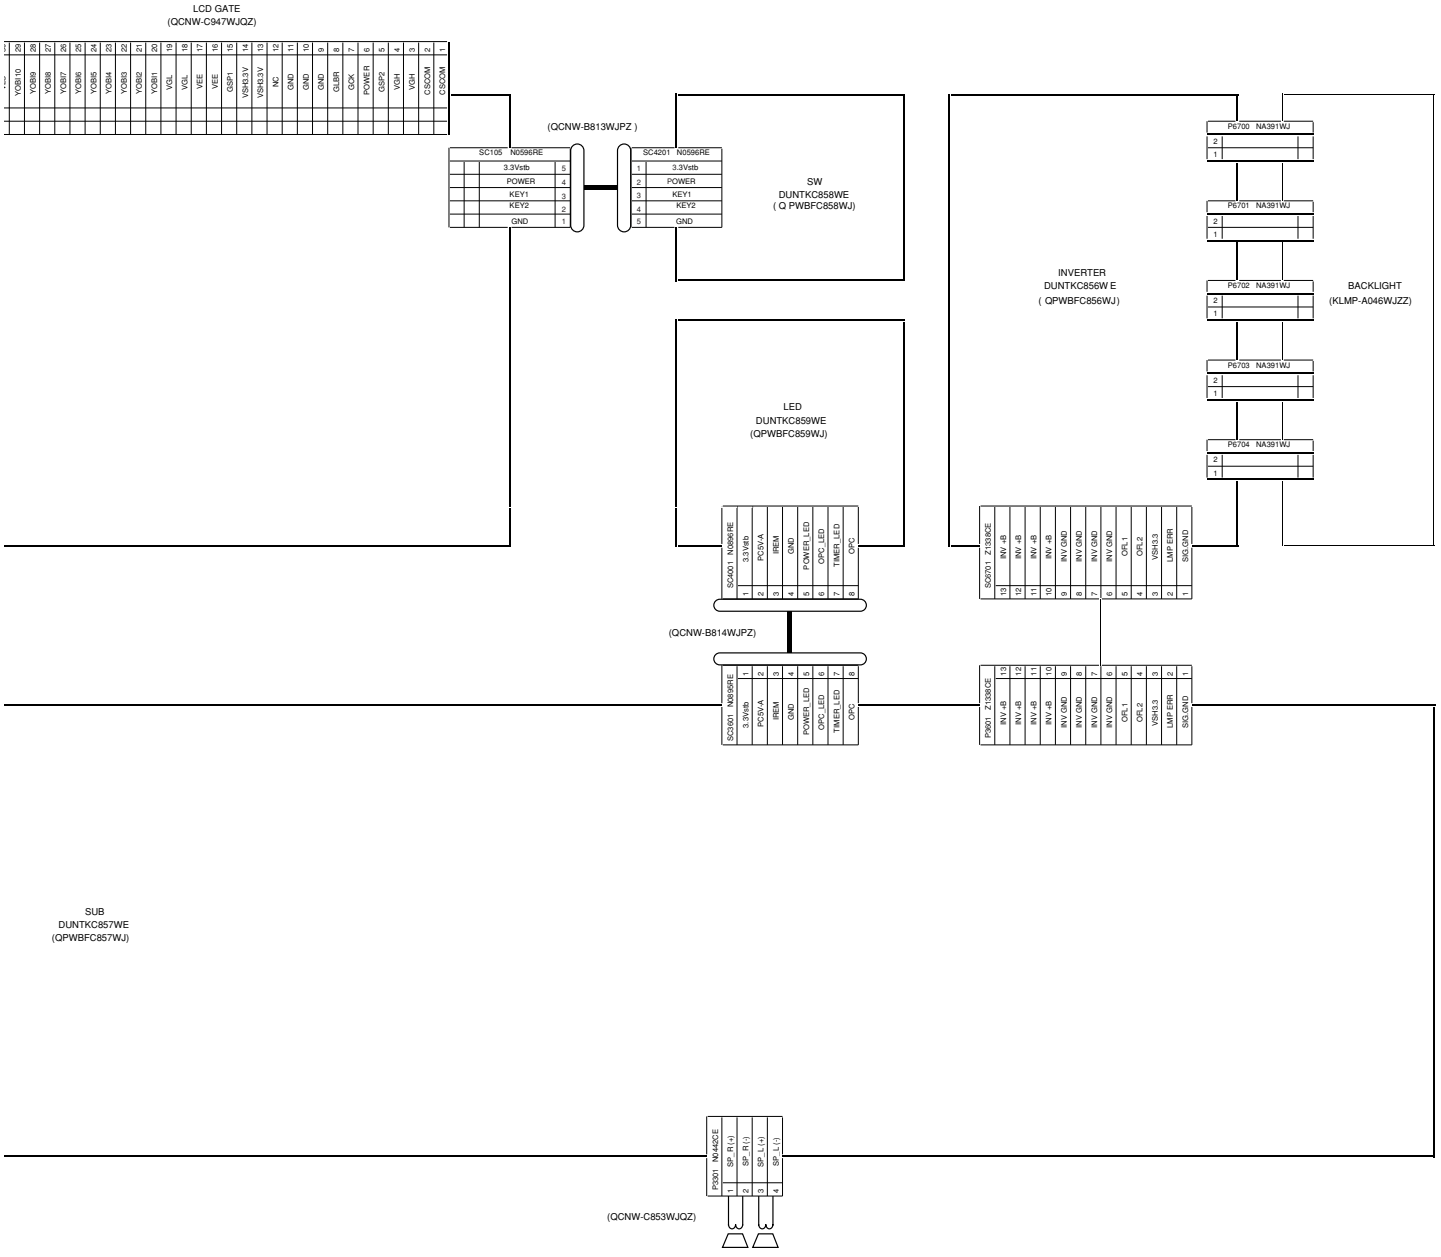
LCD GATE
(QCNW-C947WJQZ)
(QCNW-B813WJPZ)
SW
DUNTKC858WE
(Q PWBFC858WJ)
INVERTER
DUNTKC856W E
(QPWBFC856WJ)
BACKLIGHT
(KLMP-A046WJZZ)
LED
DUNTKC859WE
(QPWBFC859WJ)
(QCNW-B814WJPZ)
SUB
DUNTKC857WE
(QPWBFC857WJ)
(QCNW-C853WJQZ)

DESCRIPTION OF SCHEMATIC DIAGRAM

VOLTAGE MEASUREMENT CONDITION:

1. The voltages at test points are measured on the stable supply voltage of AC 220-240V. Signals are fed by a colour bar signal generator for servicing purpose and the above voltages are measured with a 20k ohm/V tester.

INDICATION OF RESISTOR & CAPACITOR:

RESISTOR

1. The unit of resistance "Ω" is omitted. (K=kΩ=1000 Ω, M=MΩ).
2. All resistors are ± 5%, unless otherwise noted. (J= ± 5%, F= ± 1%, D= ± 0.5%)
3. All resistors are 1/16W, unless otherwise noted.
4. All resistors are Carbon type, unless otherwise noted.
   Ⓒ: Solid Ⓦ: Cement
   Ⓢ: Oxide Film Ⓣ: Special
   Ⓝ: Metal Coating

CAPACITOR

1. All capacitors are μF, unless otherwise noted. (P=pF=μμF).
2. All capacitors are 50V, unless otherwise noted.
3. All capacitors are Ceramic type, unless otherwise noted.
   (ML): Mylar (TA): Tantalum
   (PF): Polypro Film (ST): Styrol

CAUTION:
This circuit diagram is original one, therefore there may be a slight difference from yours.

IMPORTANT SAFETY NOTICE:
PARTS MARKED WITH "⚠" ( ) ARE IMPORTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

SCHEMATIC DIAGRAM

■ INVERTER Unit

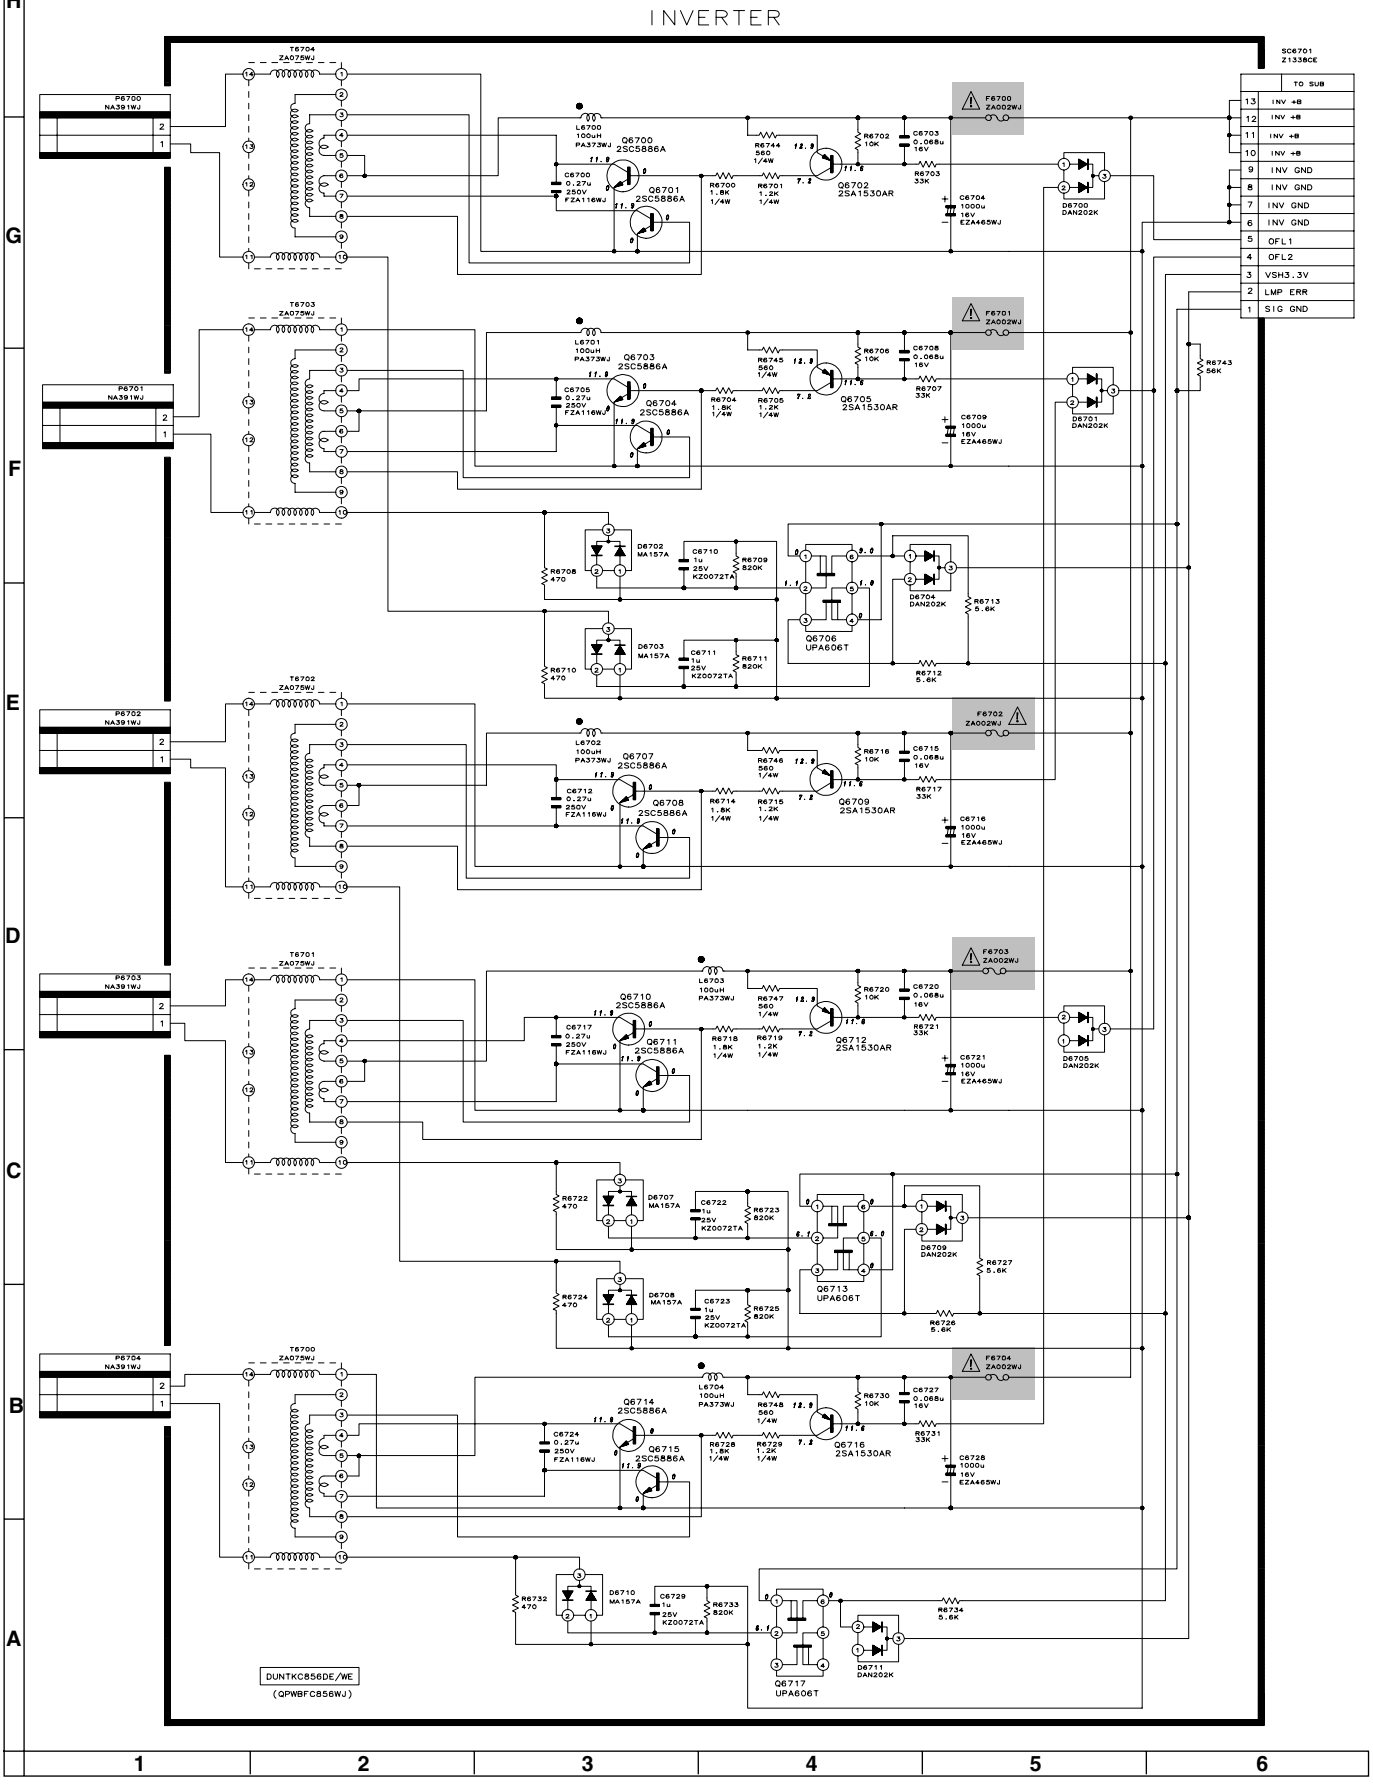

■ SUB Unit-1/2

SUB1 (AV_TERMINAL)

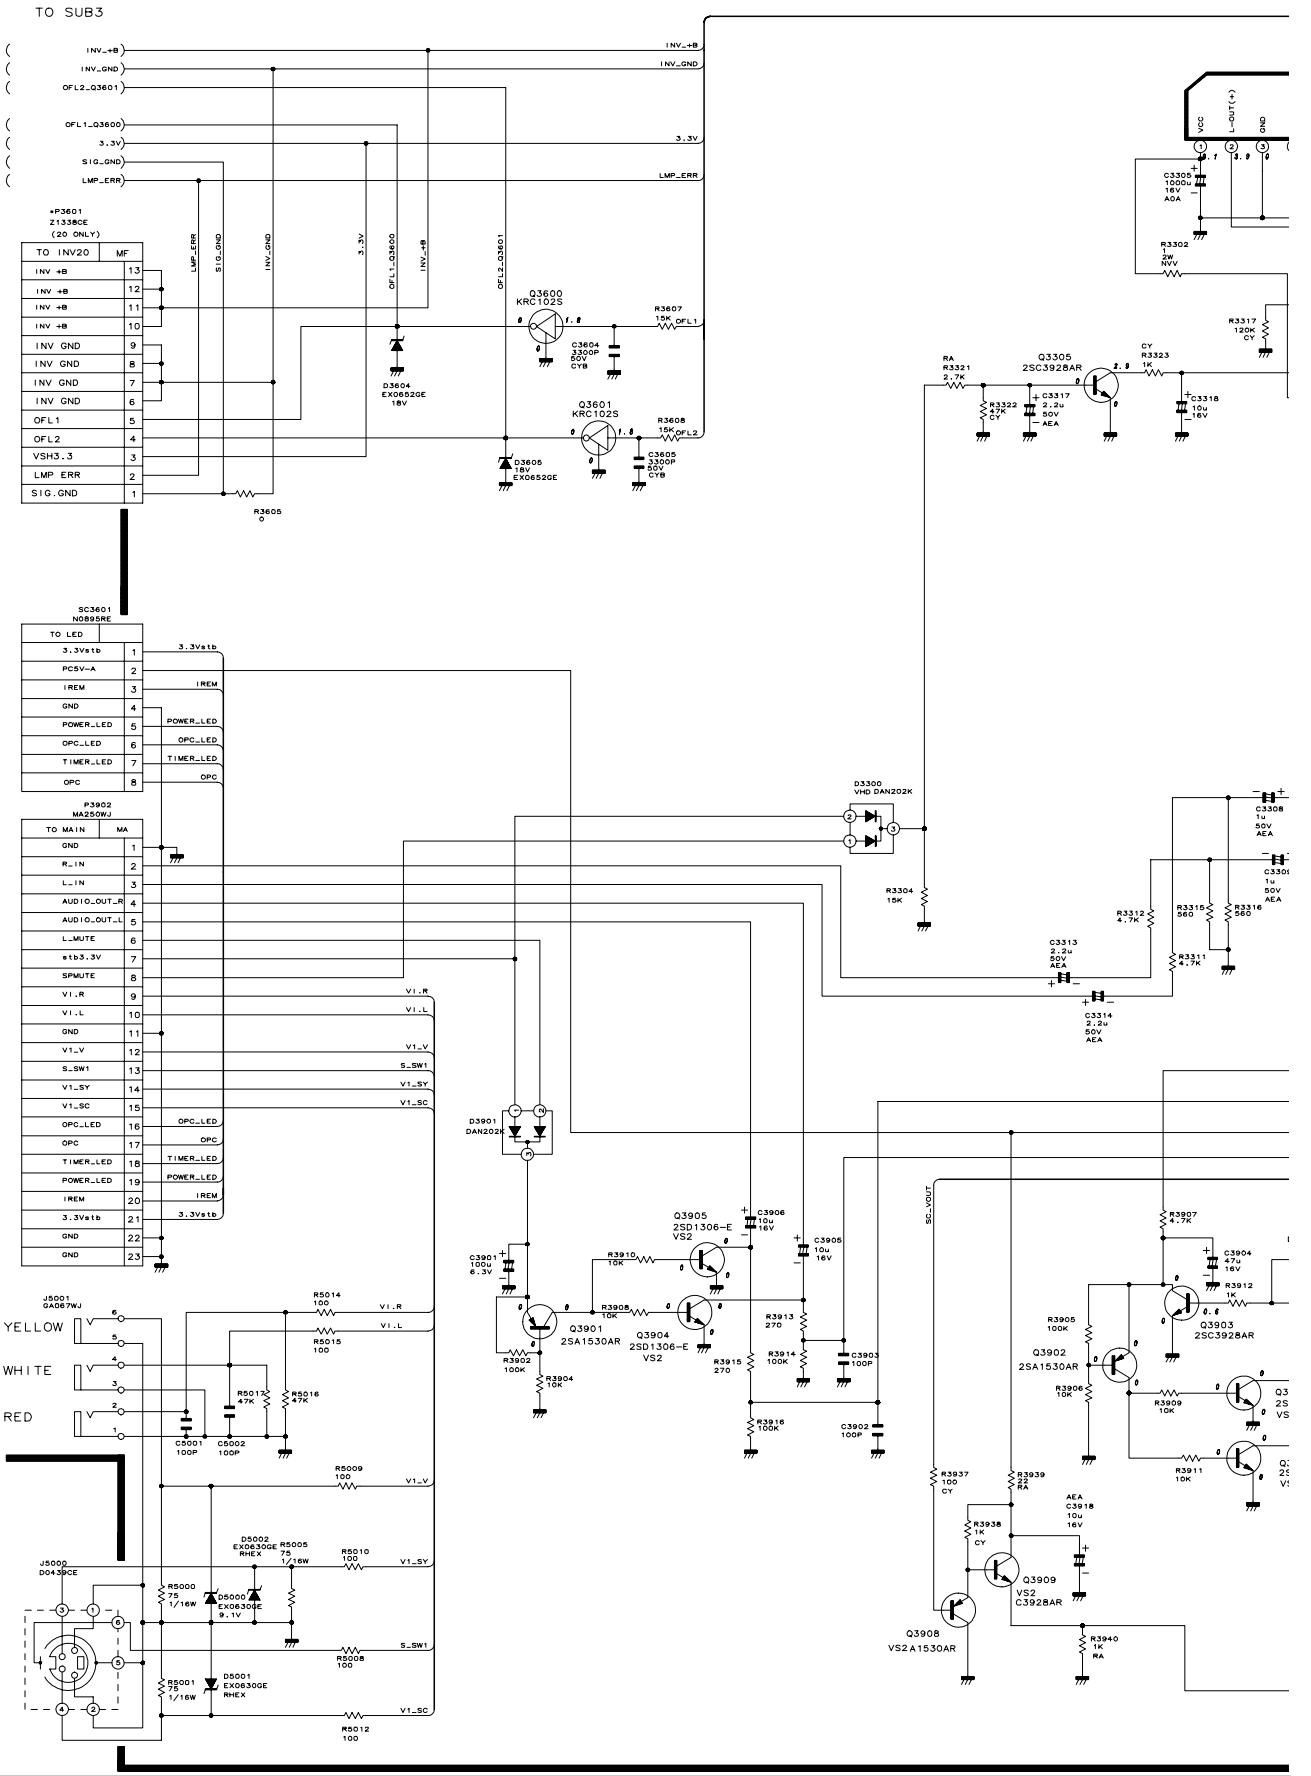

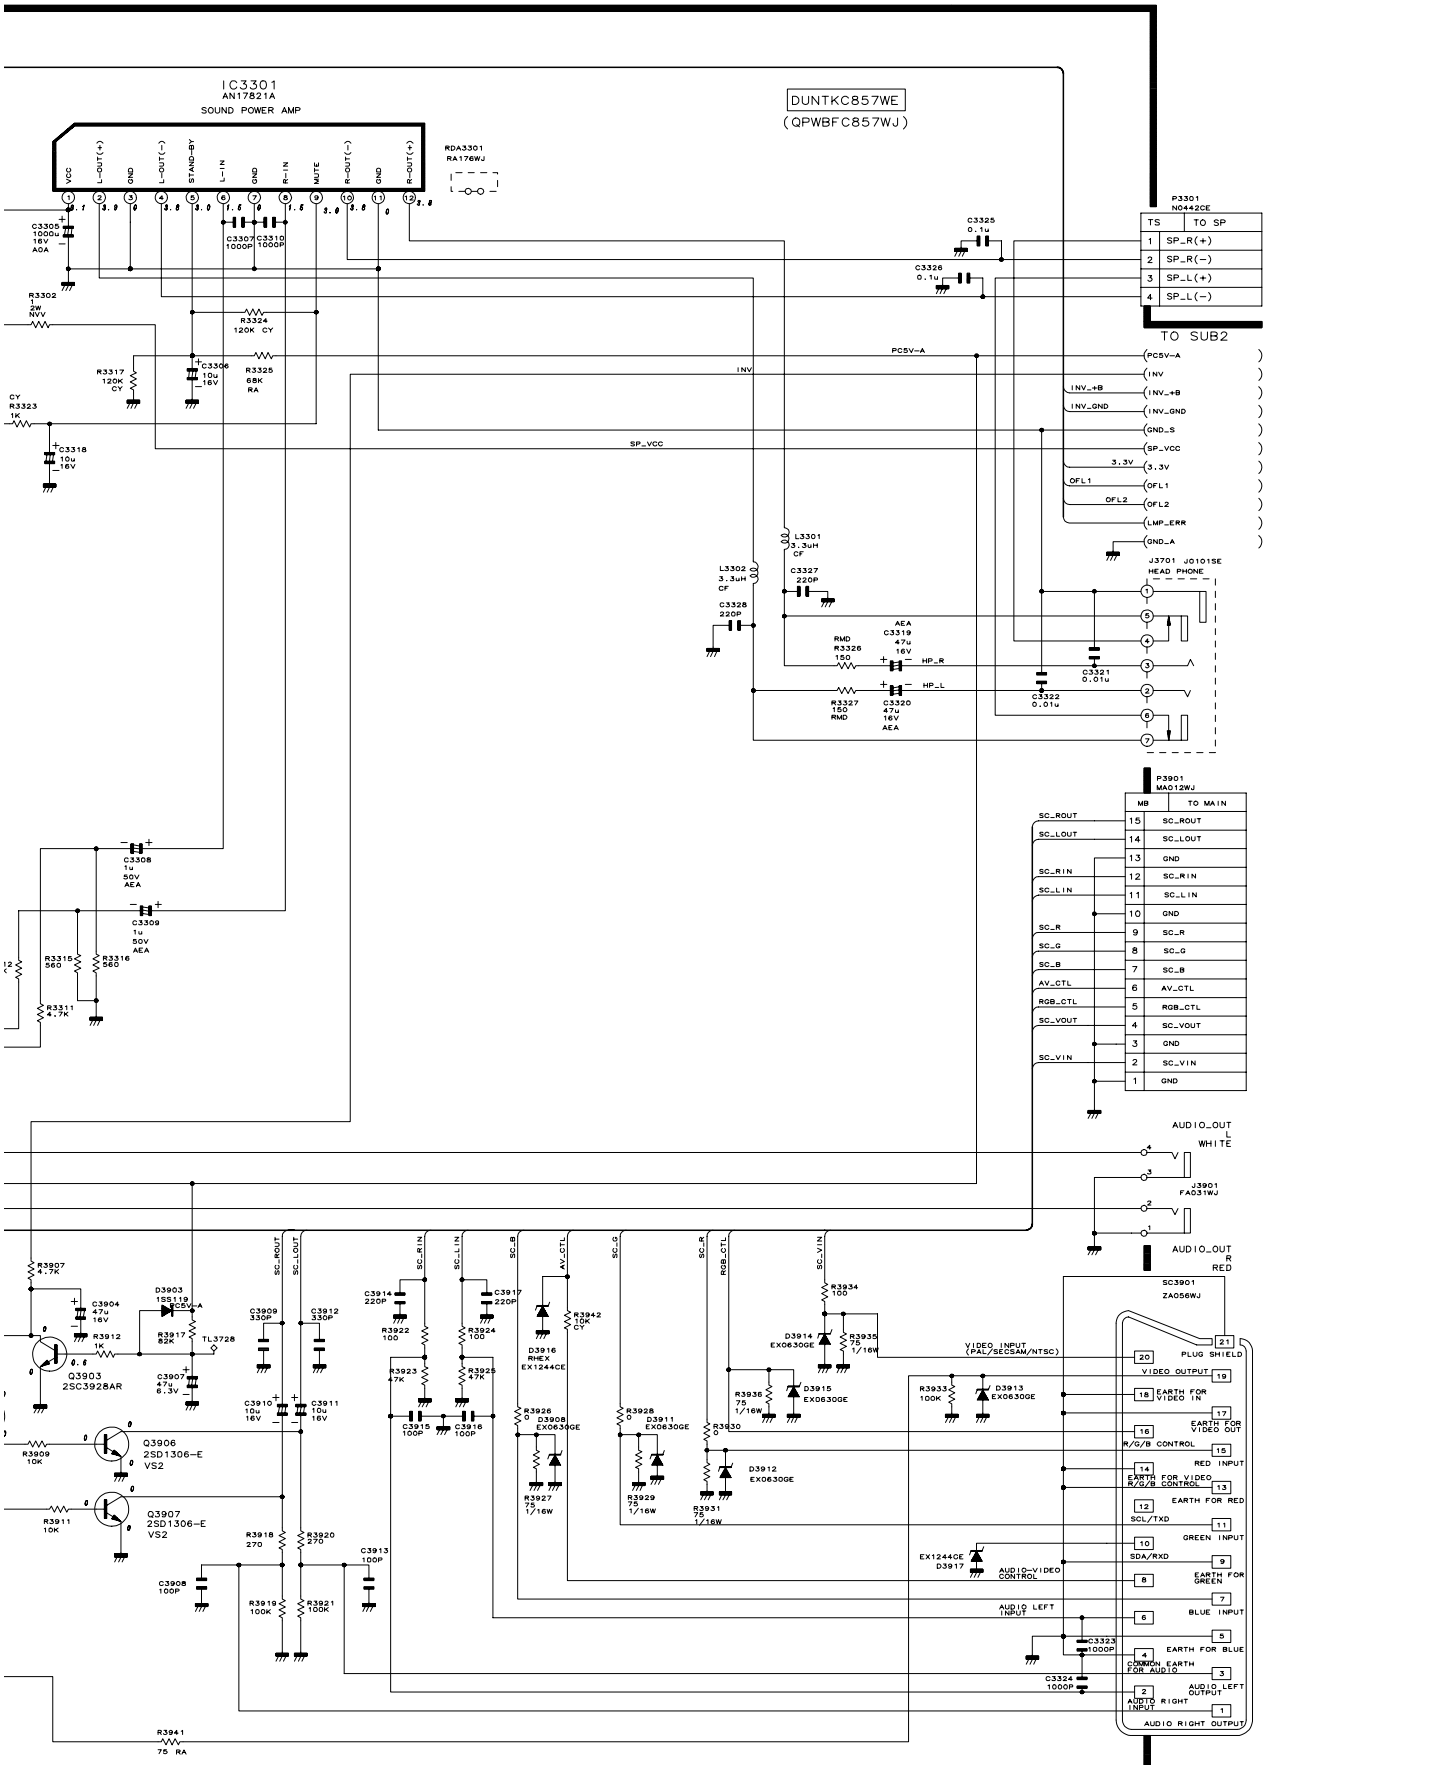

10	11	12	13	14	15	16	17	18	19

■ SUB Unit-2/2

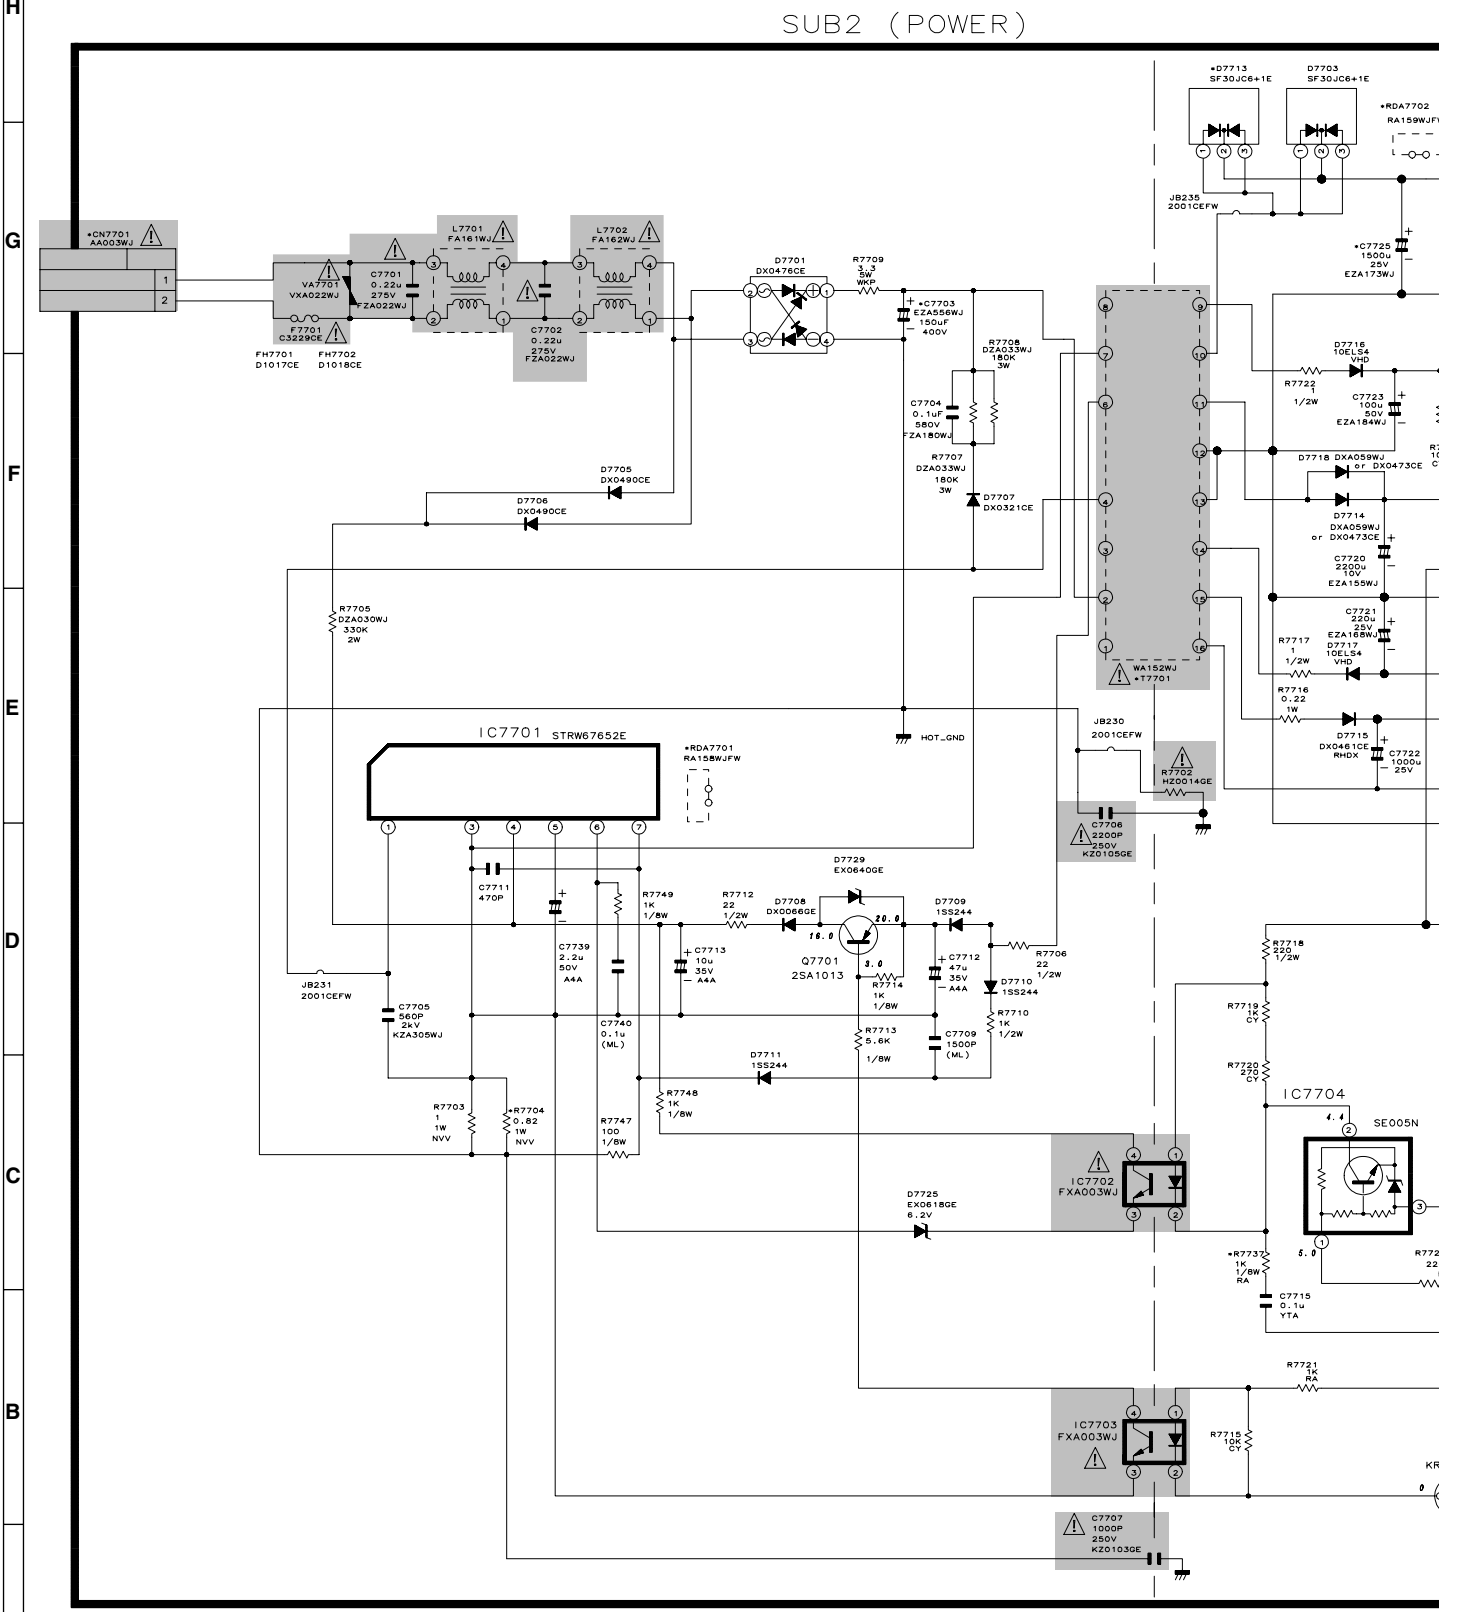
SUB2 (POWER)
IC7701 STRW67652E
Q7701 2SA1013
IC7704
SE005N
IC7702 FXA003WJ
IC7703 FXA003WJ
WA152WJ *T7701
HOT_GND
JB230 2001CEFW
JB231 2001CEFW
JB235 2001CEFW
*CN7701 AA003WJ
VA7701 VXA022WJ
F7701 C3229CE
FH7701 D1017CE
FH7702 D1018CE
L7701 FA161WJ
L7702 FA162WJ
C7701 0.22u 275V FZA022WJ
C7702 0.22u 275V FZA022WJ
*RDA7701 RA158WJFW
*RDA7702 RA159WJFW
*D7713 SF30JC6+1E
D7703 SF30JC6+1E
D7701 DX0476CE
D7705 DX0490CE
D7706 DX0490CE
D7707 DX0321CE
D7708 DX0066GE
D7709 1SS244
D7710 1SS244
D7711 1SS244
D7729 EX0640GE
D7725 EX0618GE 6.2V
D7715 DX0461CE RHDX
D7716 10ELS4 VHD
D7717 10ELS4 VHD
D7718 DXA059WJ or DX0473CE
D7714 DXA059WJ or DX0473CE
R7705 DZA030WJ 330K 2W
R7707 DZA033WJ 180K 3W
R7708 DZA033WJ 180K 3W
R7709 3.3 5W WKP
R7722 1 1/2W
R7717 1 1/2W
R7716 0.22 1W
R7702 HZ0014GE
R7703 1 1W NVV
*R7704 0.82 1W NVV
R7747 100 1/6W
R7748 1K 1/8W
R7749 1K 1/8W
R7712 22 1/2W
R7714 1K 1/8W
R7713 5.6K 1/8W
R7706 22 1/2W
R7710 1K 1/2W
R7718 220 1/2W
R7719 1K CY
R7720 270 CY
*R7733 1K 1/8W RA
R7721 1K RA
R7715 10K CY
C7704 0.1uF 50V FZA180WJ
*C7703 EZA556WJ 150uF 400V
*C7725 1500u 25V EZA173WJ
C7723 100u 50V EZA184WJ
C7720 2200u 10V EZA155WJ
C7721 220u 25V EZA168WJ
C7722 1000u 25V
C7706 2200P 250V KZ0105GE
C7707 1000P 250V KZ0103GE
C7711 470P
C7739 2.2u 50V A4A
C7740 0.1u (ML)
C7713 10u 35V A4A
C7712 47u 35V A4A
C7709 1500P (ML)
C7705 560P 2kV KZA305WJ
C7715 0.1u YTA

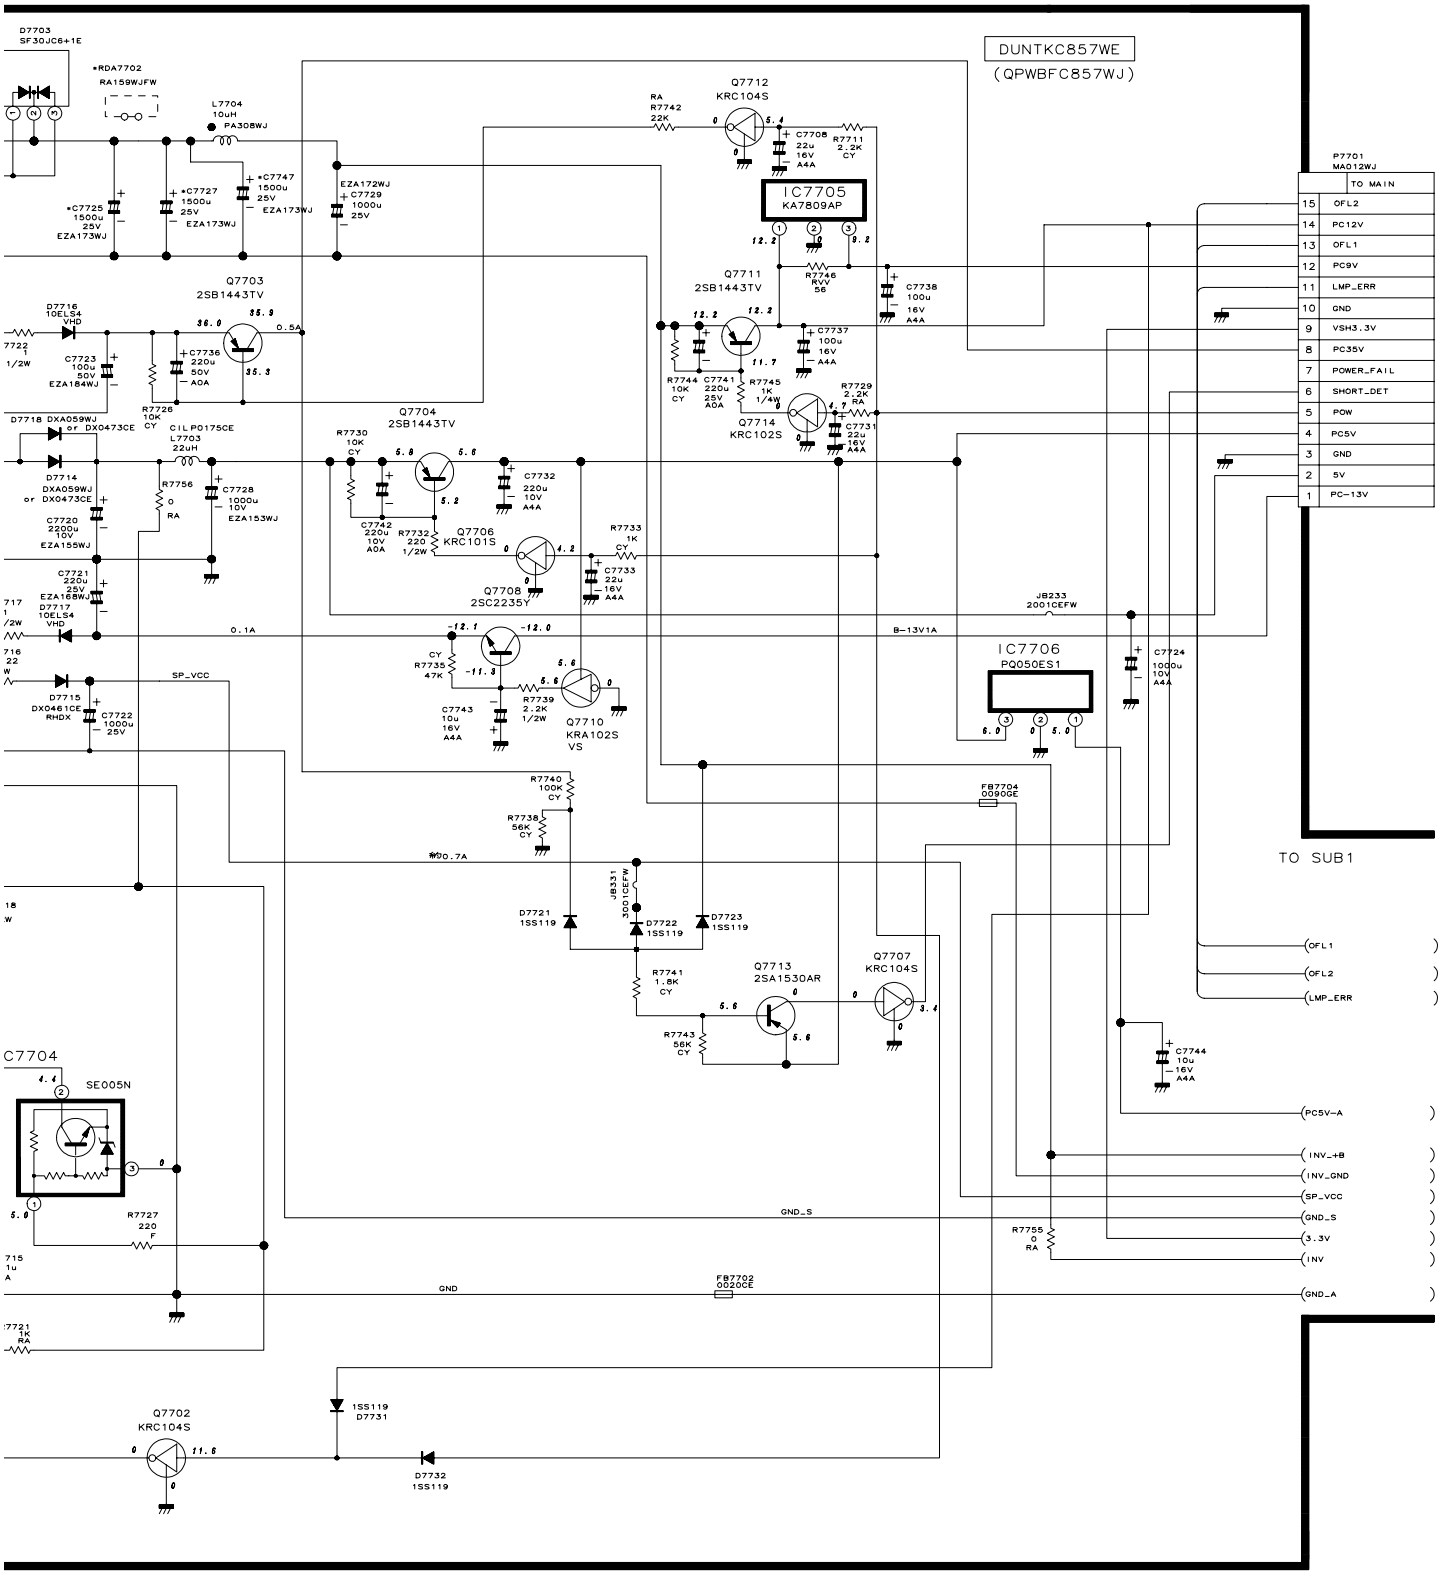

10	11	12	13	14	15	16	17	18	19

■ MAIN Unit-1/3

MAIN1(LOC)

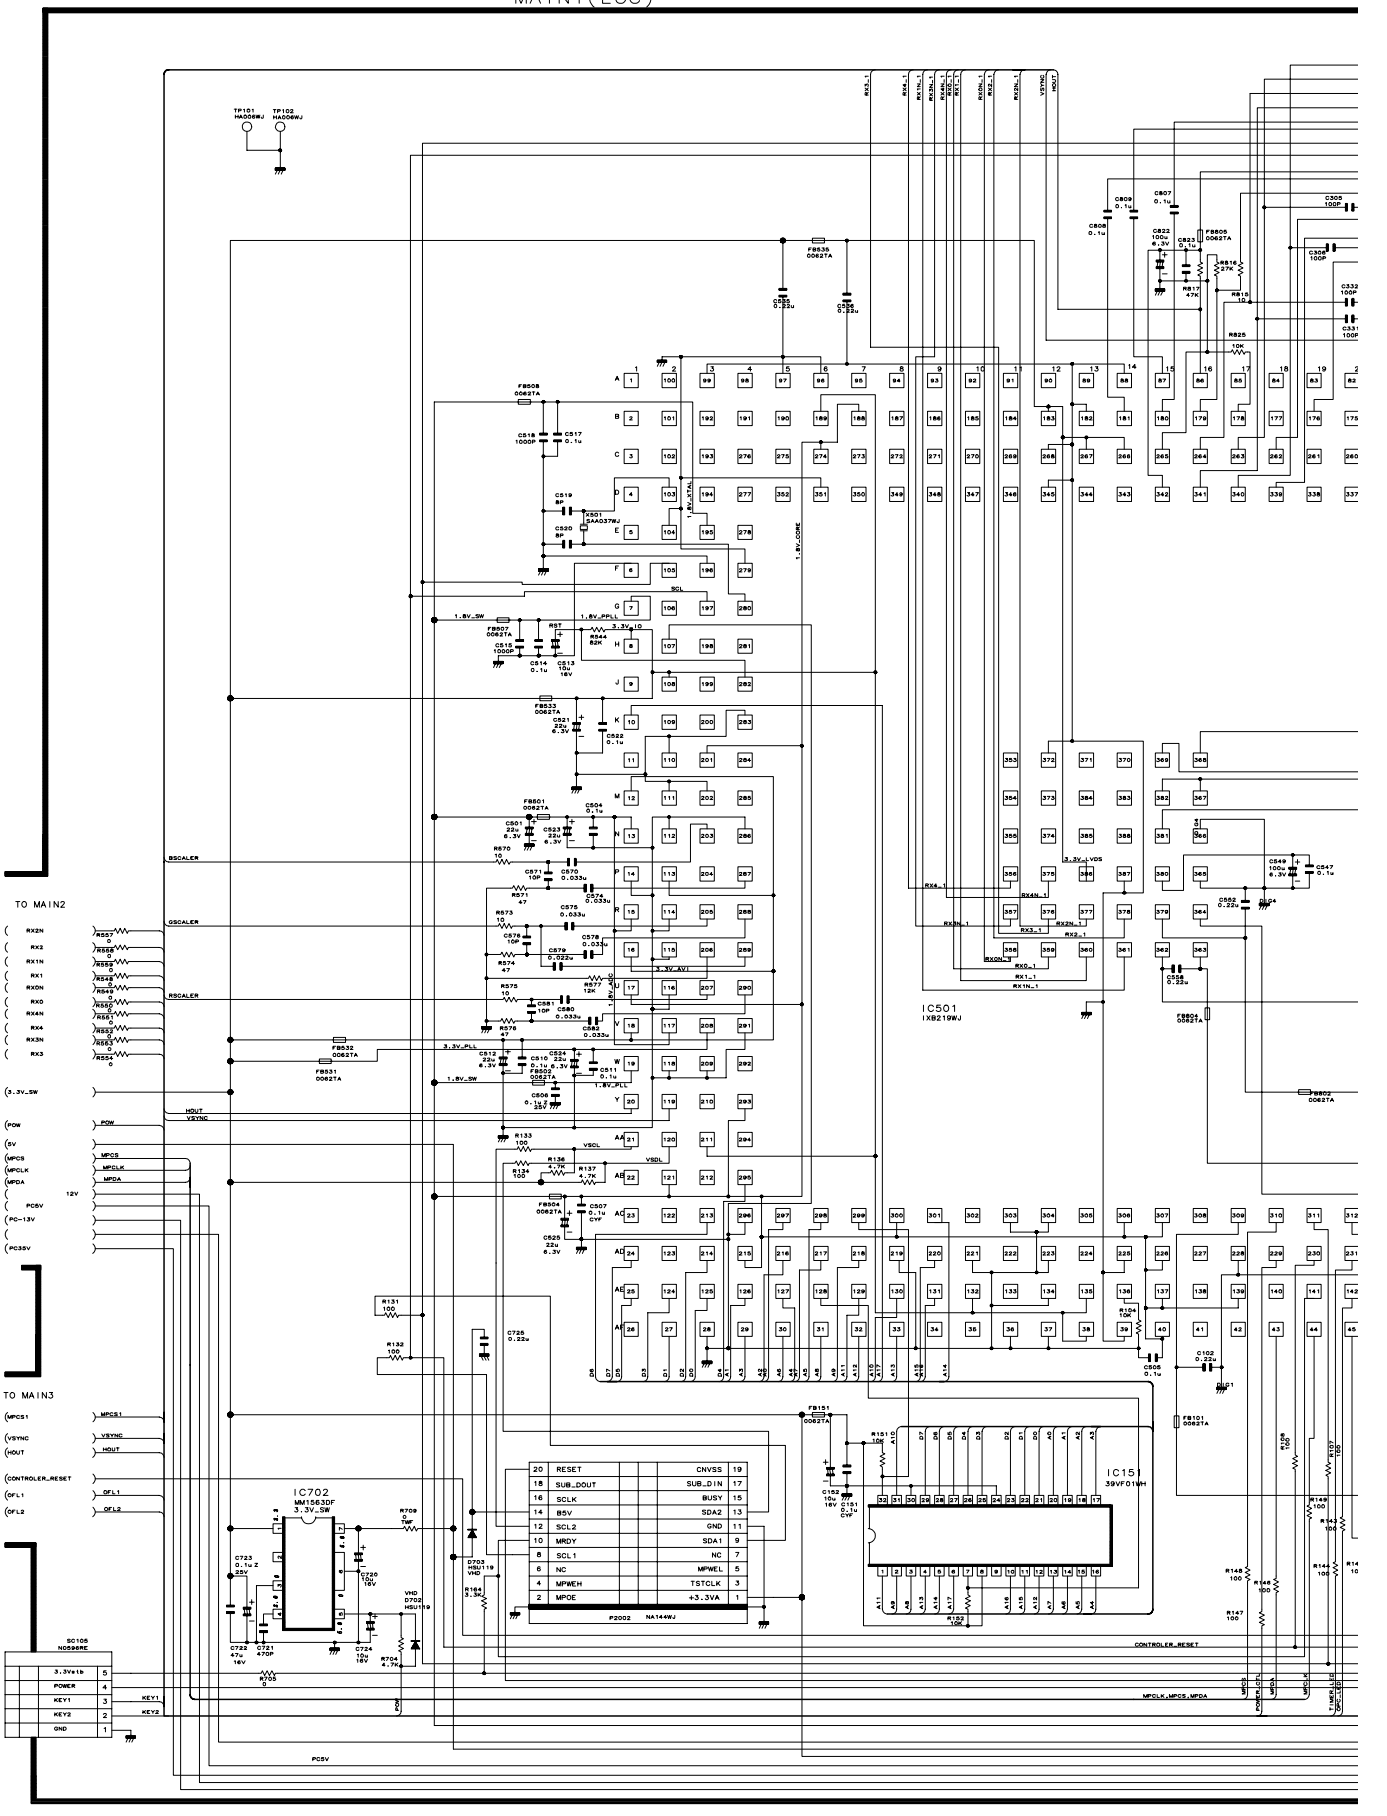

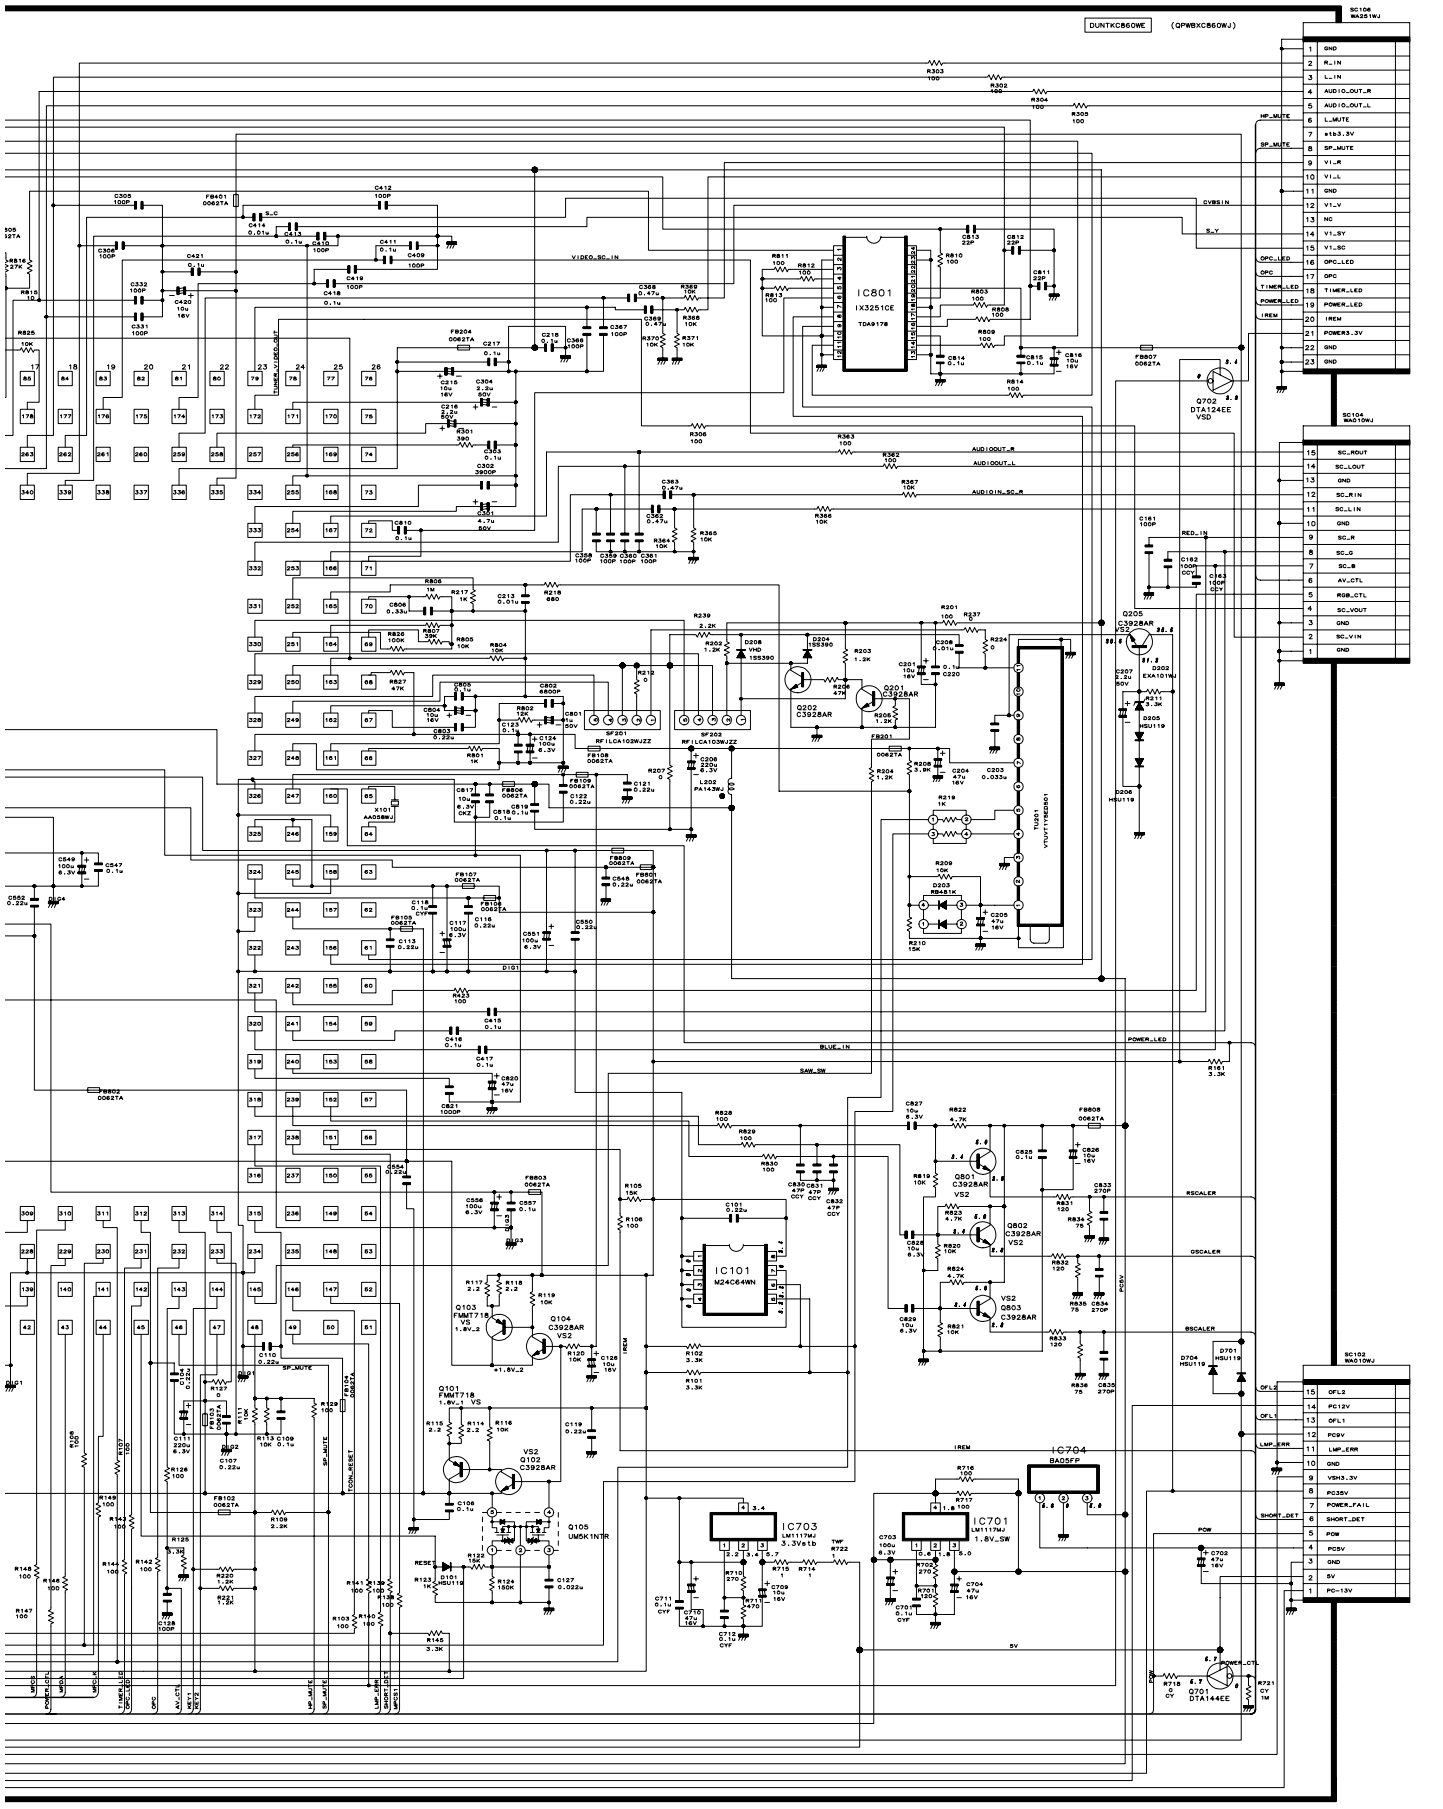

10	11	12	13	14	15	16	17	18	19

■ MAIN Unit-2/3

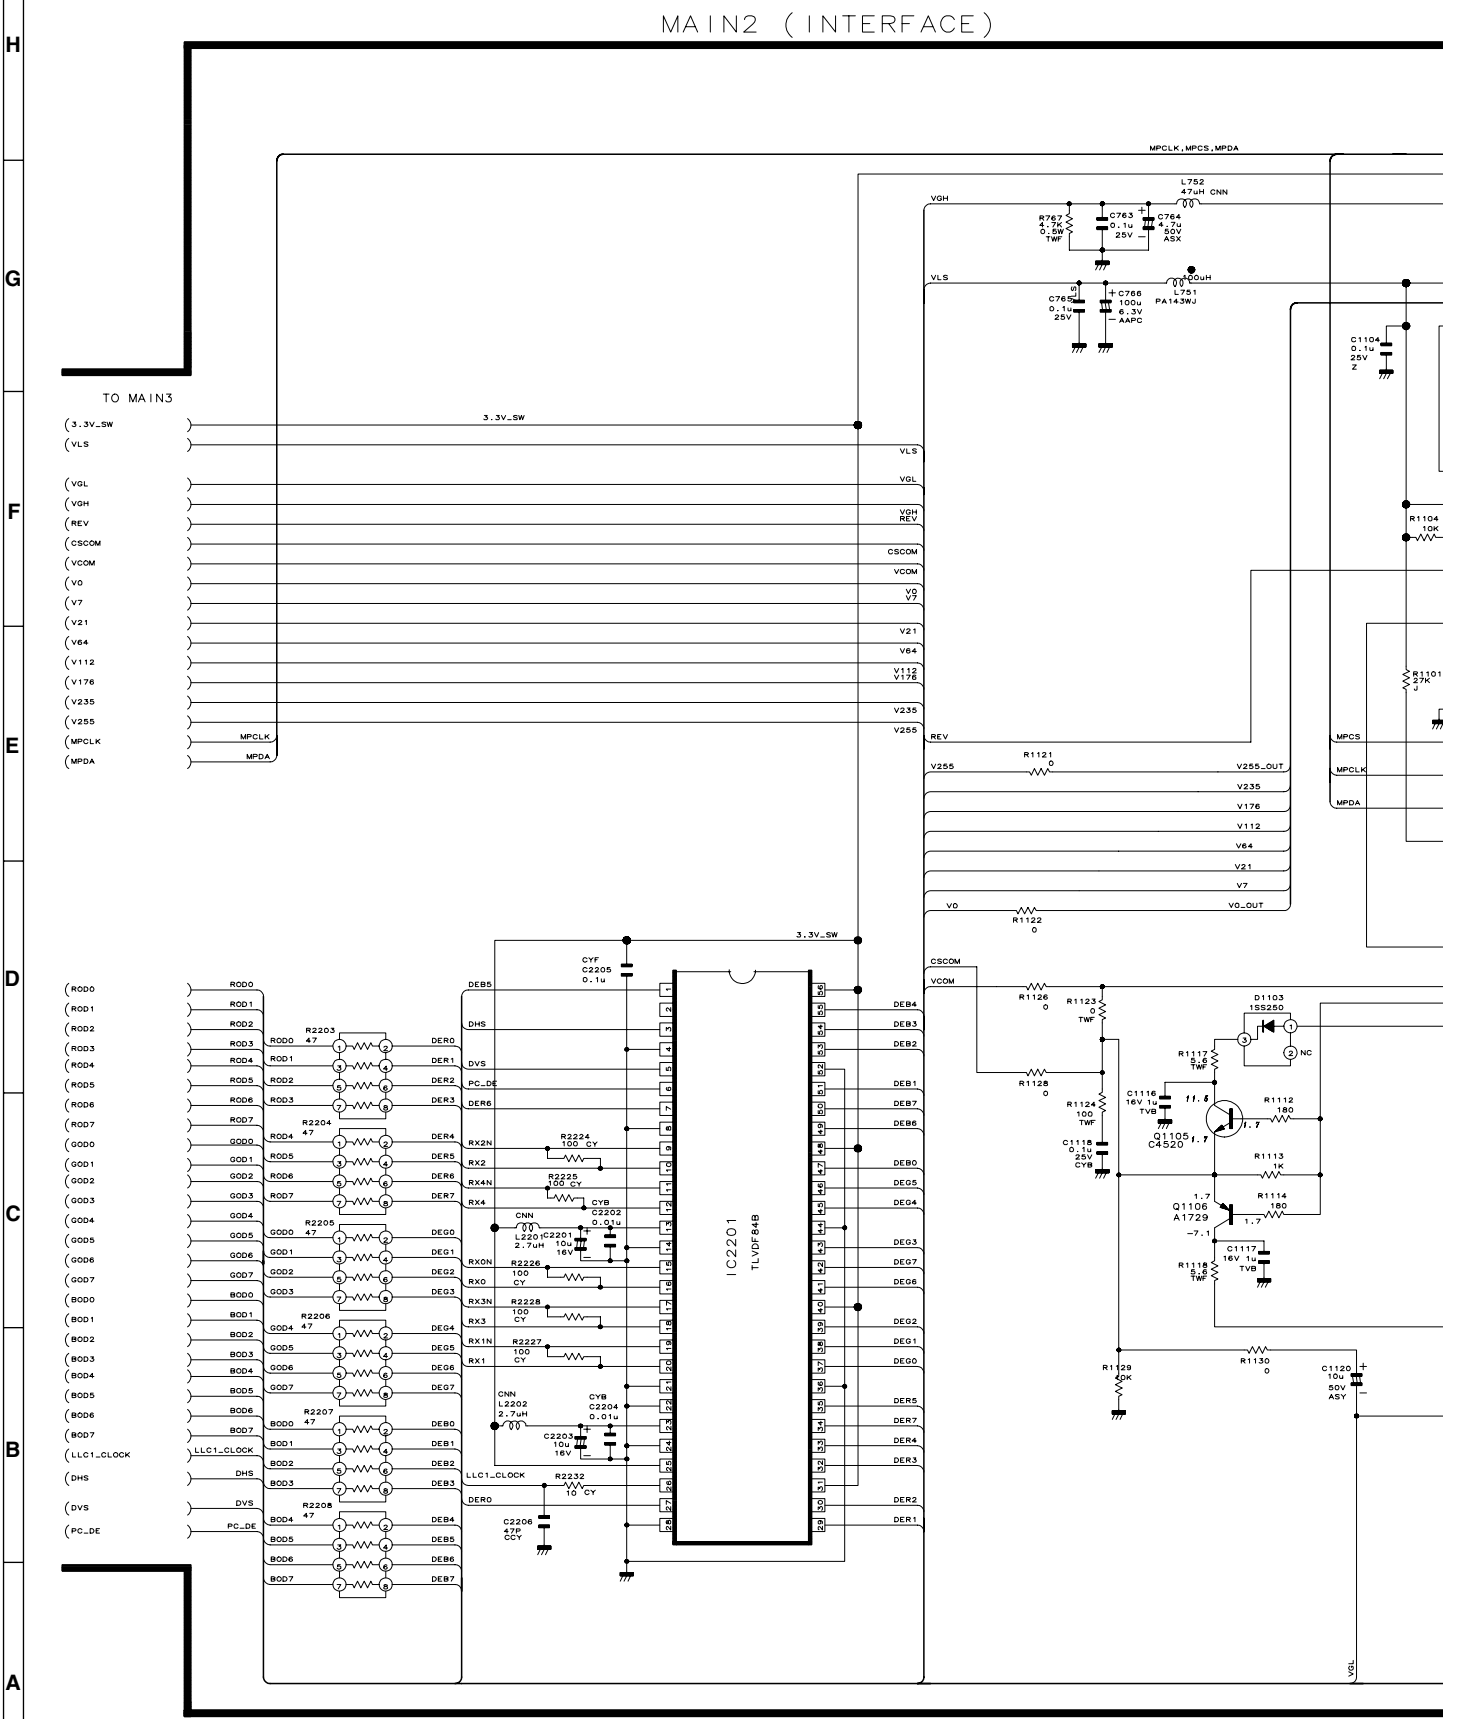
MAIN2 (INTERFACE)
TO MAIN3
3.3V_SW
VLS
VGL
VGH
REV
CSCOM
VCOM
V0
V7
V21
V64
V112
V176
V235
V255
MPCLK
MPDA
MPCS
V255_OUT
V0_OUT
IC2201
TLVDF84B
L752
47uH CNN
L751
PA143WJ
D1103
1SS250
Q1105
C4520
Q1106
A1729

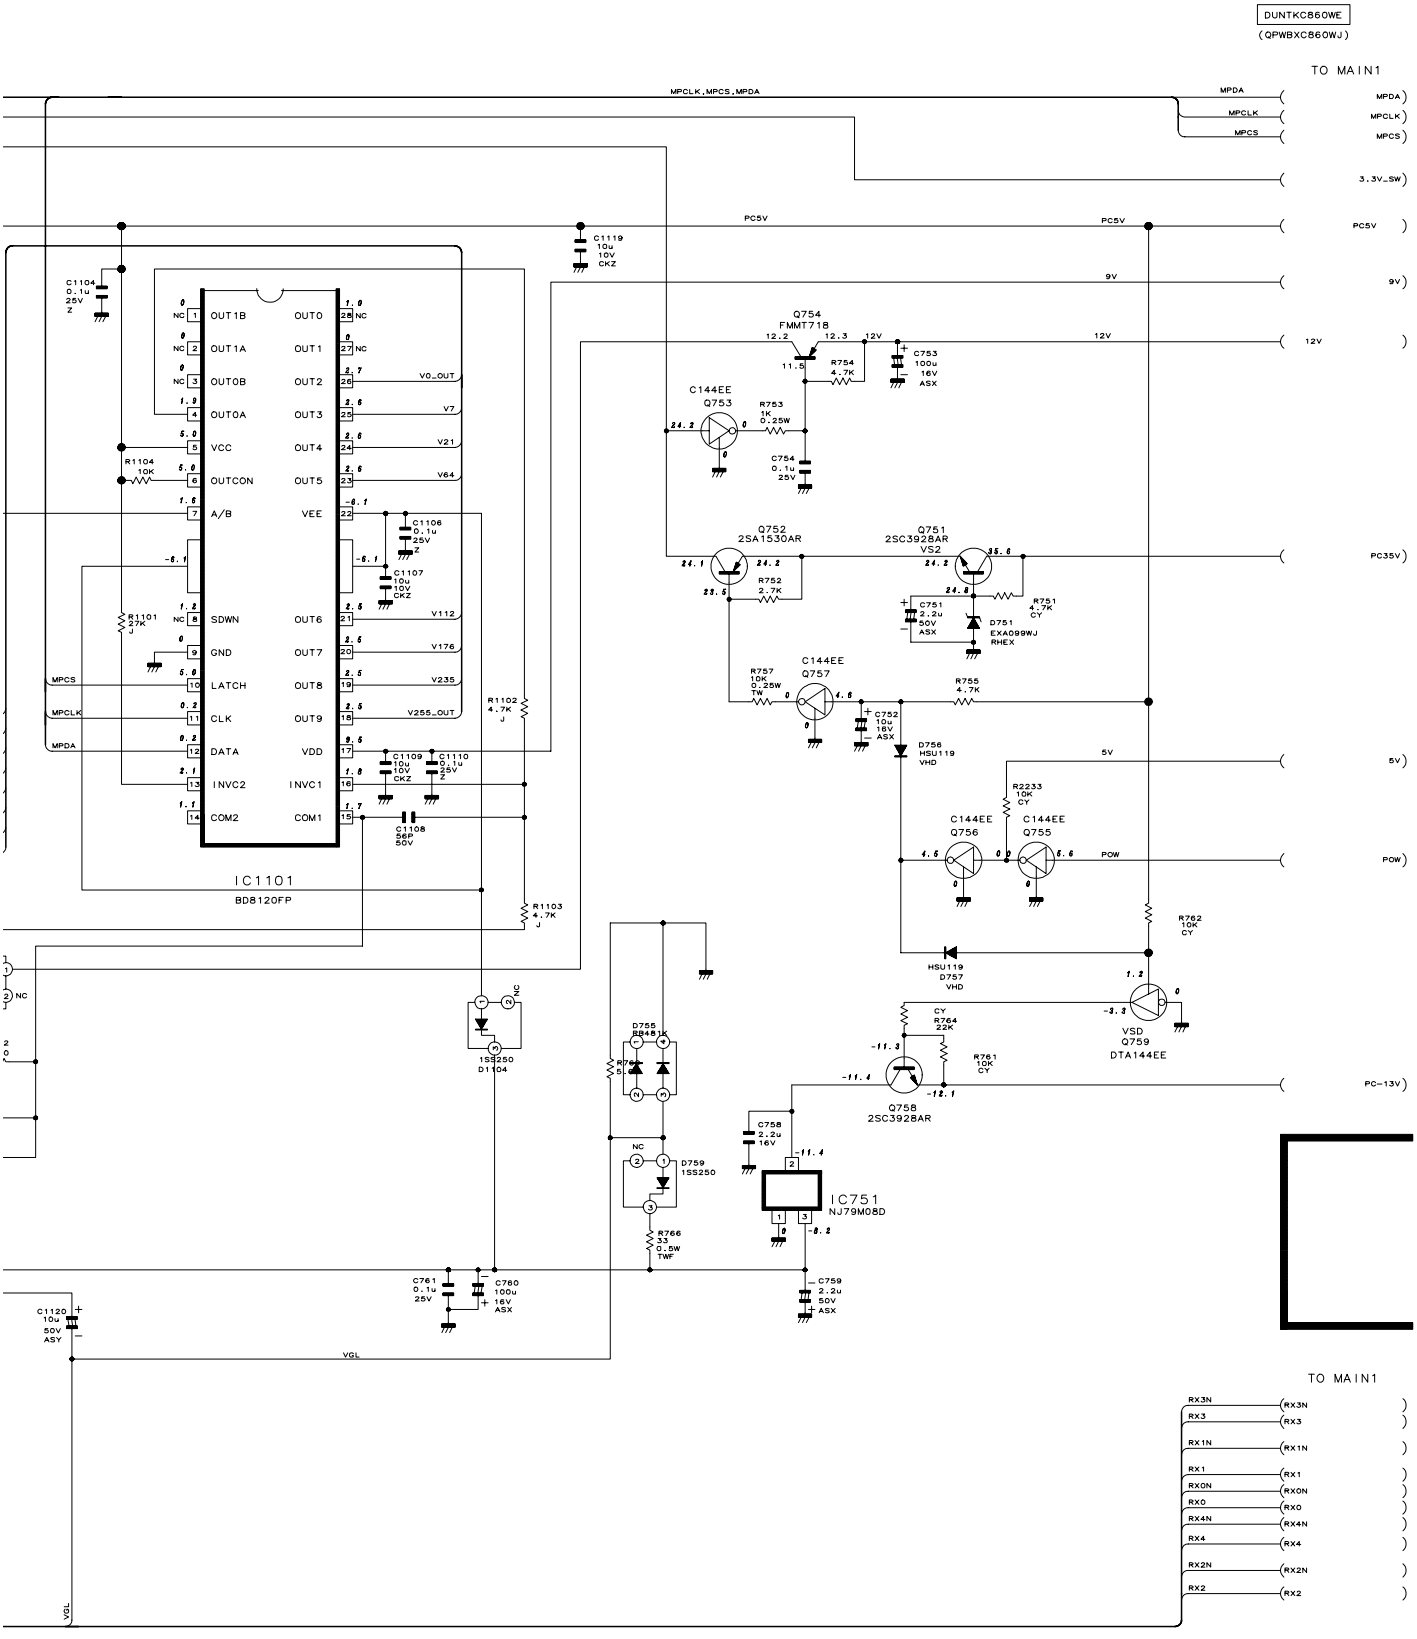

10	11	12	13	14	15	16	17	18	19

■ MAIN Unit-3/3

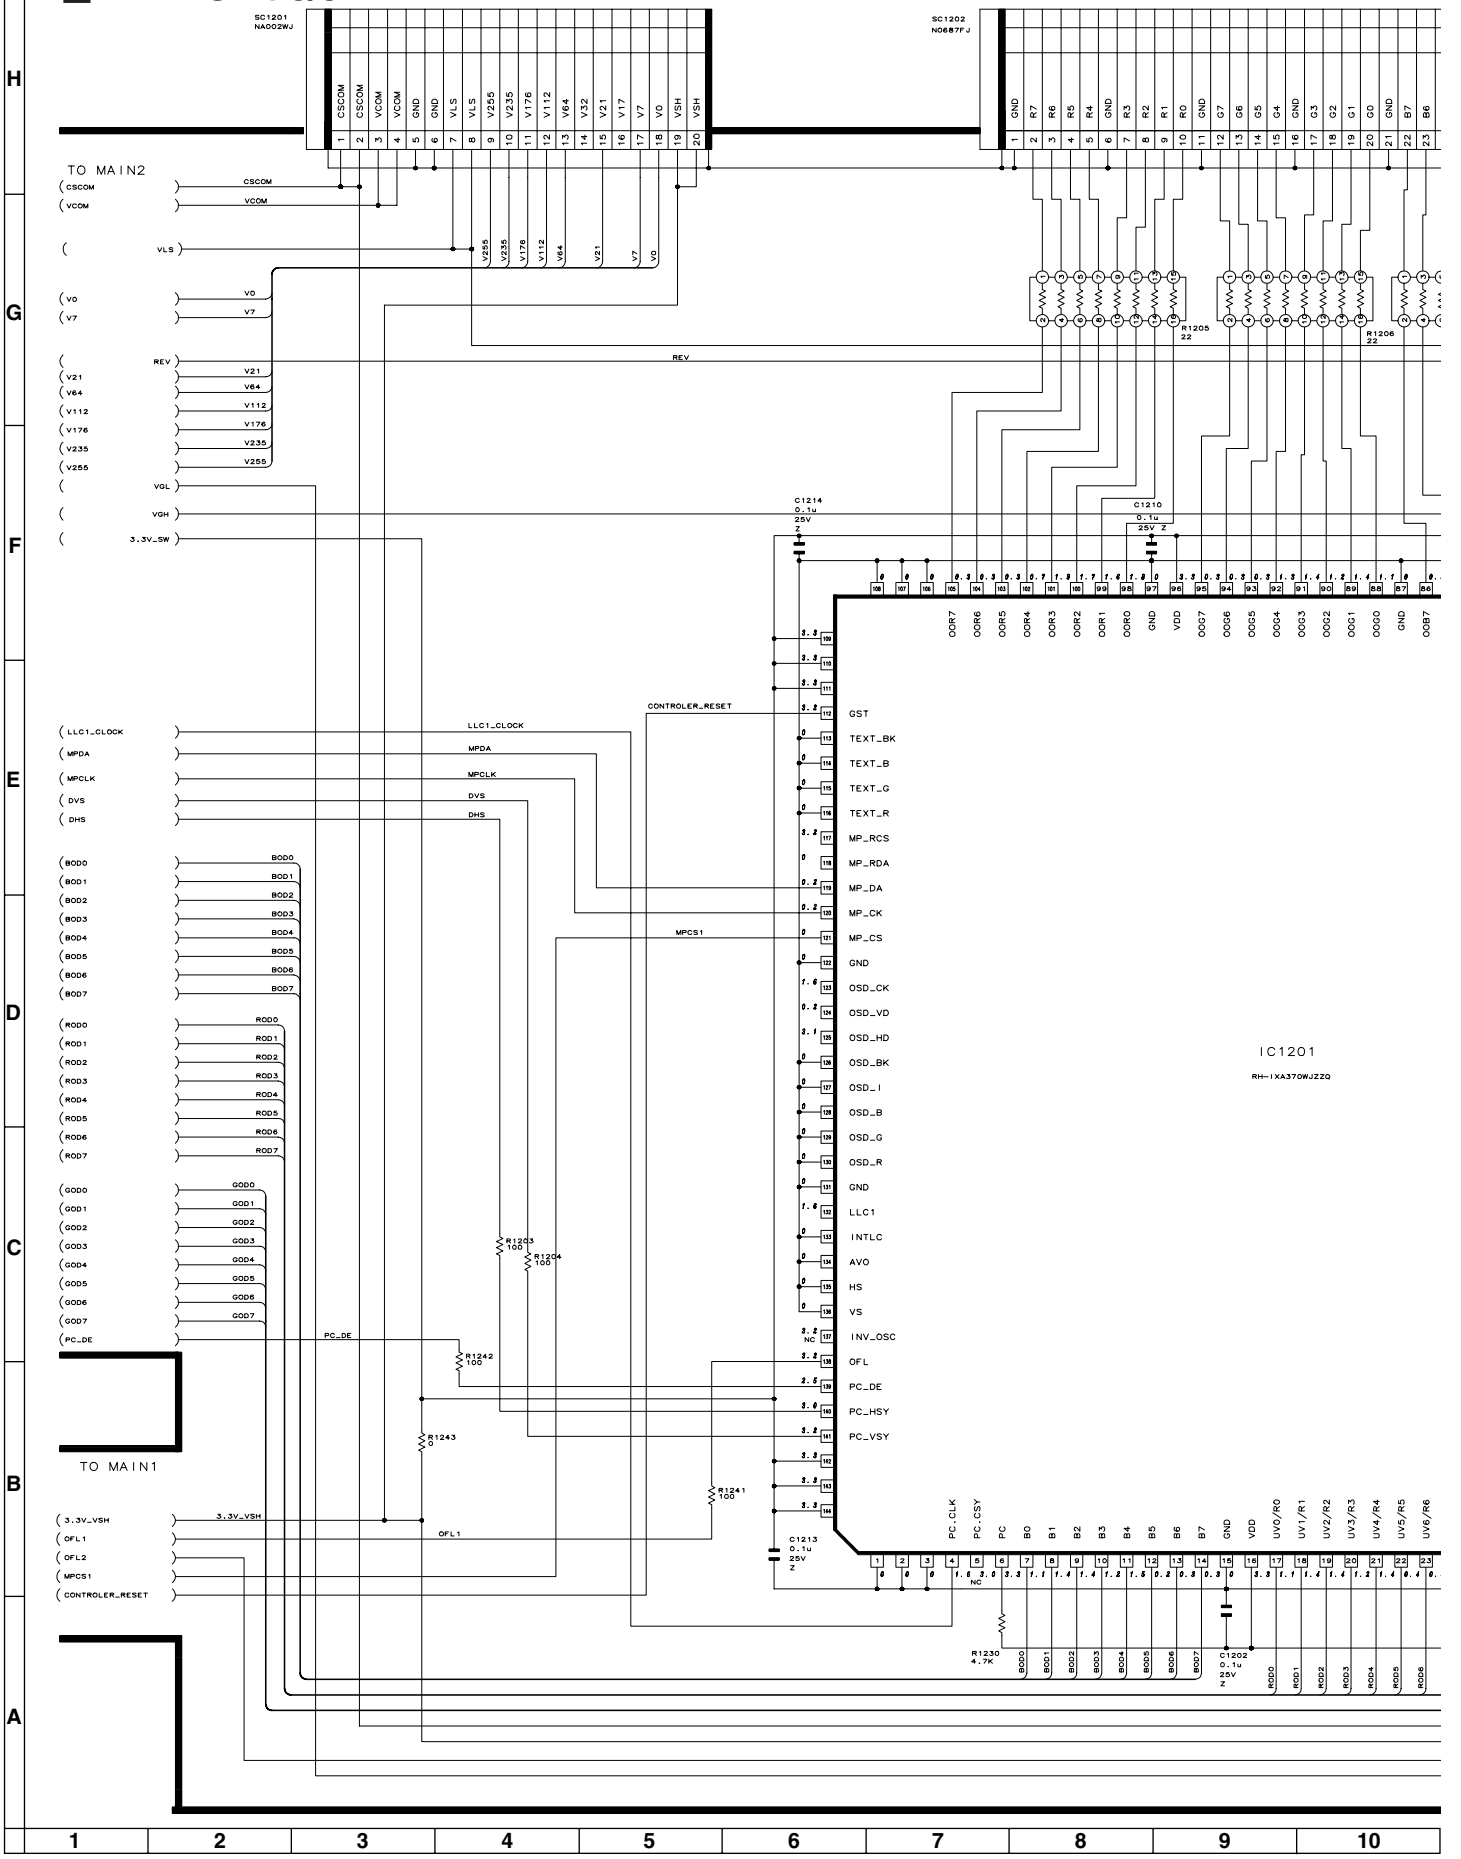
SC1201
NA002WJ
SC1202
N0687FJ
TO MAIN2
TO MAIN1
IC1201
RH-IXA370WJZZQ
CSCOM
VCOM
VLS
V0
V7
REV
V21
V64
V112
V176
V235
V255
VGL
VGH
3.3V_SW
C1214
0.1u
25V
Z
C1210
0.1u
25V Z
R1205
22
R1206
22
CONTROLER_RESET
LLC1_CLOCK
MPDA
MPCLK
DVS
DHS
MPCS1
BOD0
BOD1
BOD2
BOD3
BOD4
BOD5
BOD6
BOD7
ROD0
ROD1
ROD2
ROD3
ROD4
ROD5
ROD6
ROD7
GOD0
GOD1
GOD2
GOD3
GOD4
GOD5
GOD6
GOD7
PC_DE
R1203
100
R1204
100
R1242
100
R1243
0
R1241
100
3.3V_VSH
OFL1
OFL2
C1213
0.1u
25V
Z
R1230
4.7K
C1202
0.1u
25V
Z
GST
TEXT_BK
TEXT_B
TEXT_G
TEXT_R
MP_RCS
MP_RDA
MP_DA
MP_CK
MP_CS
GND
OSD_CK
OSD_VD
OSD_HD
OSD_BK
OSD_I
OSD_B
OSD_G
OSD_R
GND
LLC1
INTLC
AVO
HS
VS
INV_OSC
OFL
PC_DE
PC_HSY
PC_VSY
OOR7
OOR6
OOR5
OOR4
OOR3
OOR2
OOR1
OOR0
GND
VDD
OOG7
OOG6
OOG5
OOG4
OOG3
OOG2
OOG1
OOG0
GND
OOB7
PC_CLK
PC_CSY
PC
BO
B1
B2
B3
B4
B5
B6
B7
GND
VDD
UV0/R0
UV1/R1
UV2/R2
UV3/R3
UV4/R4
UV5/R5
UV6/R6

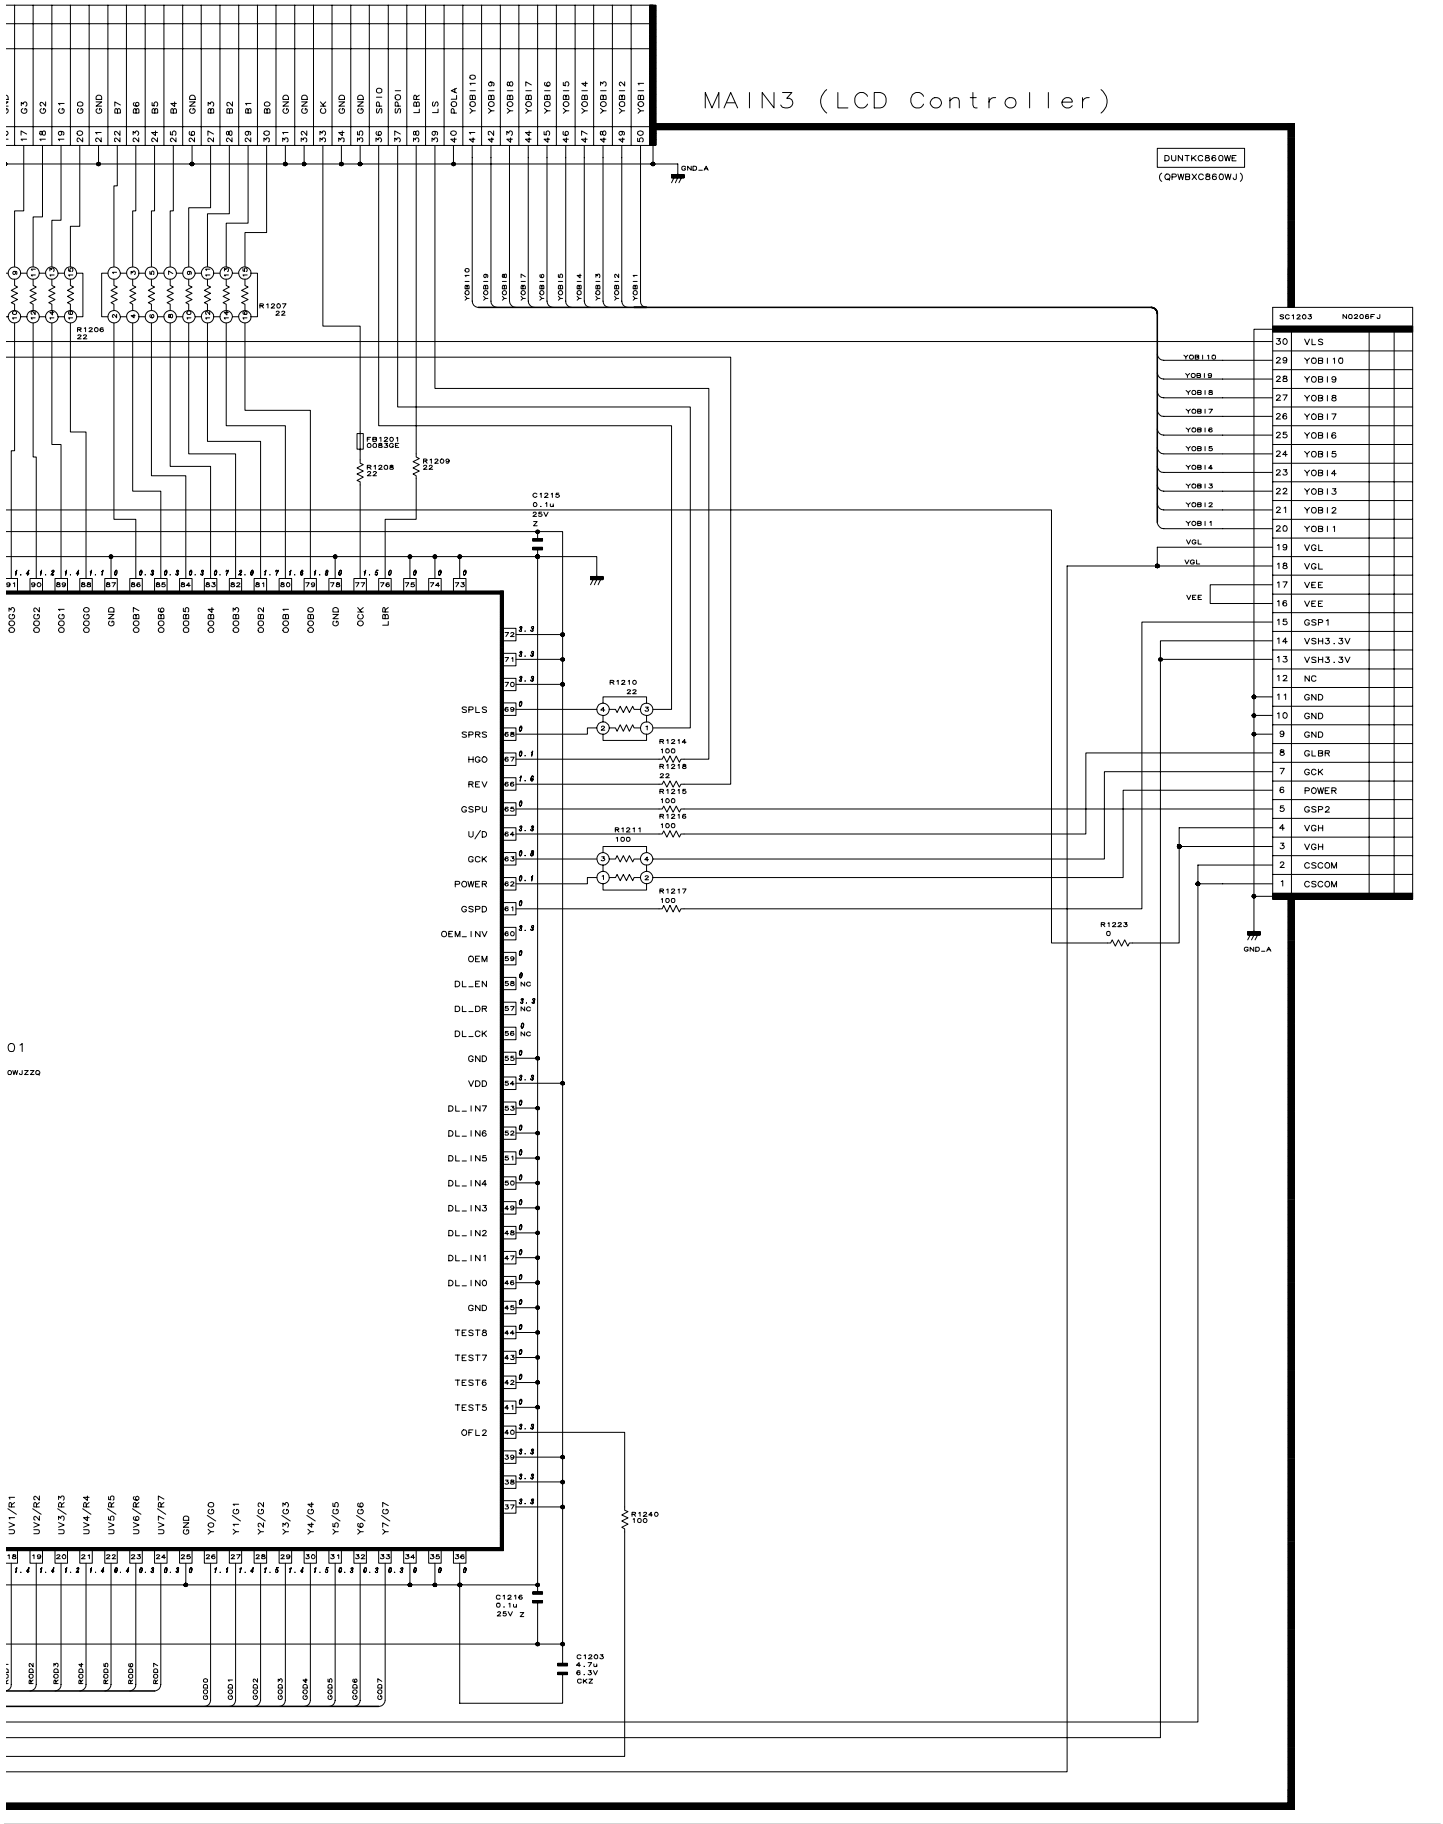
MAIN3 (LCD Controller)
DUNTKC860WE
(QPWBXC860WJ)
SC1203 N0206FJ
GND_A
R1207 22
R1206 22
FB1201 0GB3GE
R1208 22
R1209 22
C1215 0.1u 25V Z
R1210 22
R1214 100
R1218 22
R1215 100
R1216 100
R1211 100
R1217 100
R1223 0
R1240 100
C1216 0.1u 25V Z
C1203 4.7u 6.3V CKZ
SPLS
SPRS
HGO
REV
GSPU
U/D
GCK
POWER
GSPD
OEM_INV
OEM
DL_EN
DL_DR
DL_CK
GND
VDD
DL_IN7
DL_IN6
DL_IN5
DL_IN4
DL_IN3
DL_IN2
DL_IN1
DL_IN0
TEST8
TEST7
TEST6
TEST5
OFL2
VLS
VGL
VEE
GSP1
VSH3.3V
NC
GLBR
GCK
POWER
GSP2
VGH
CSCOM

■ OPERATION Unit

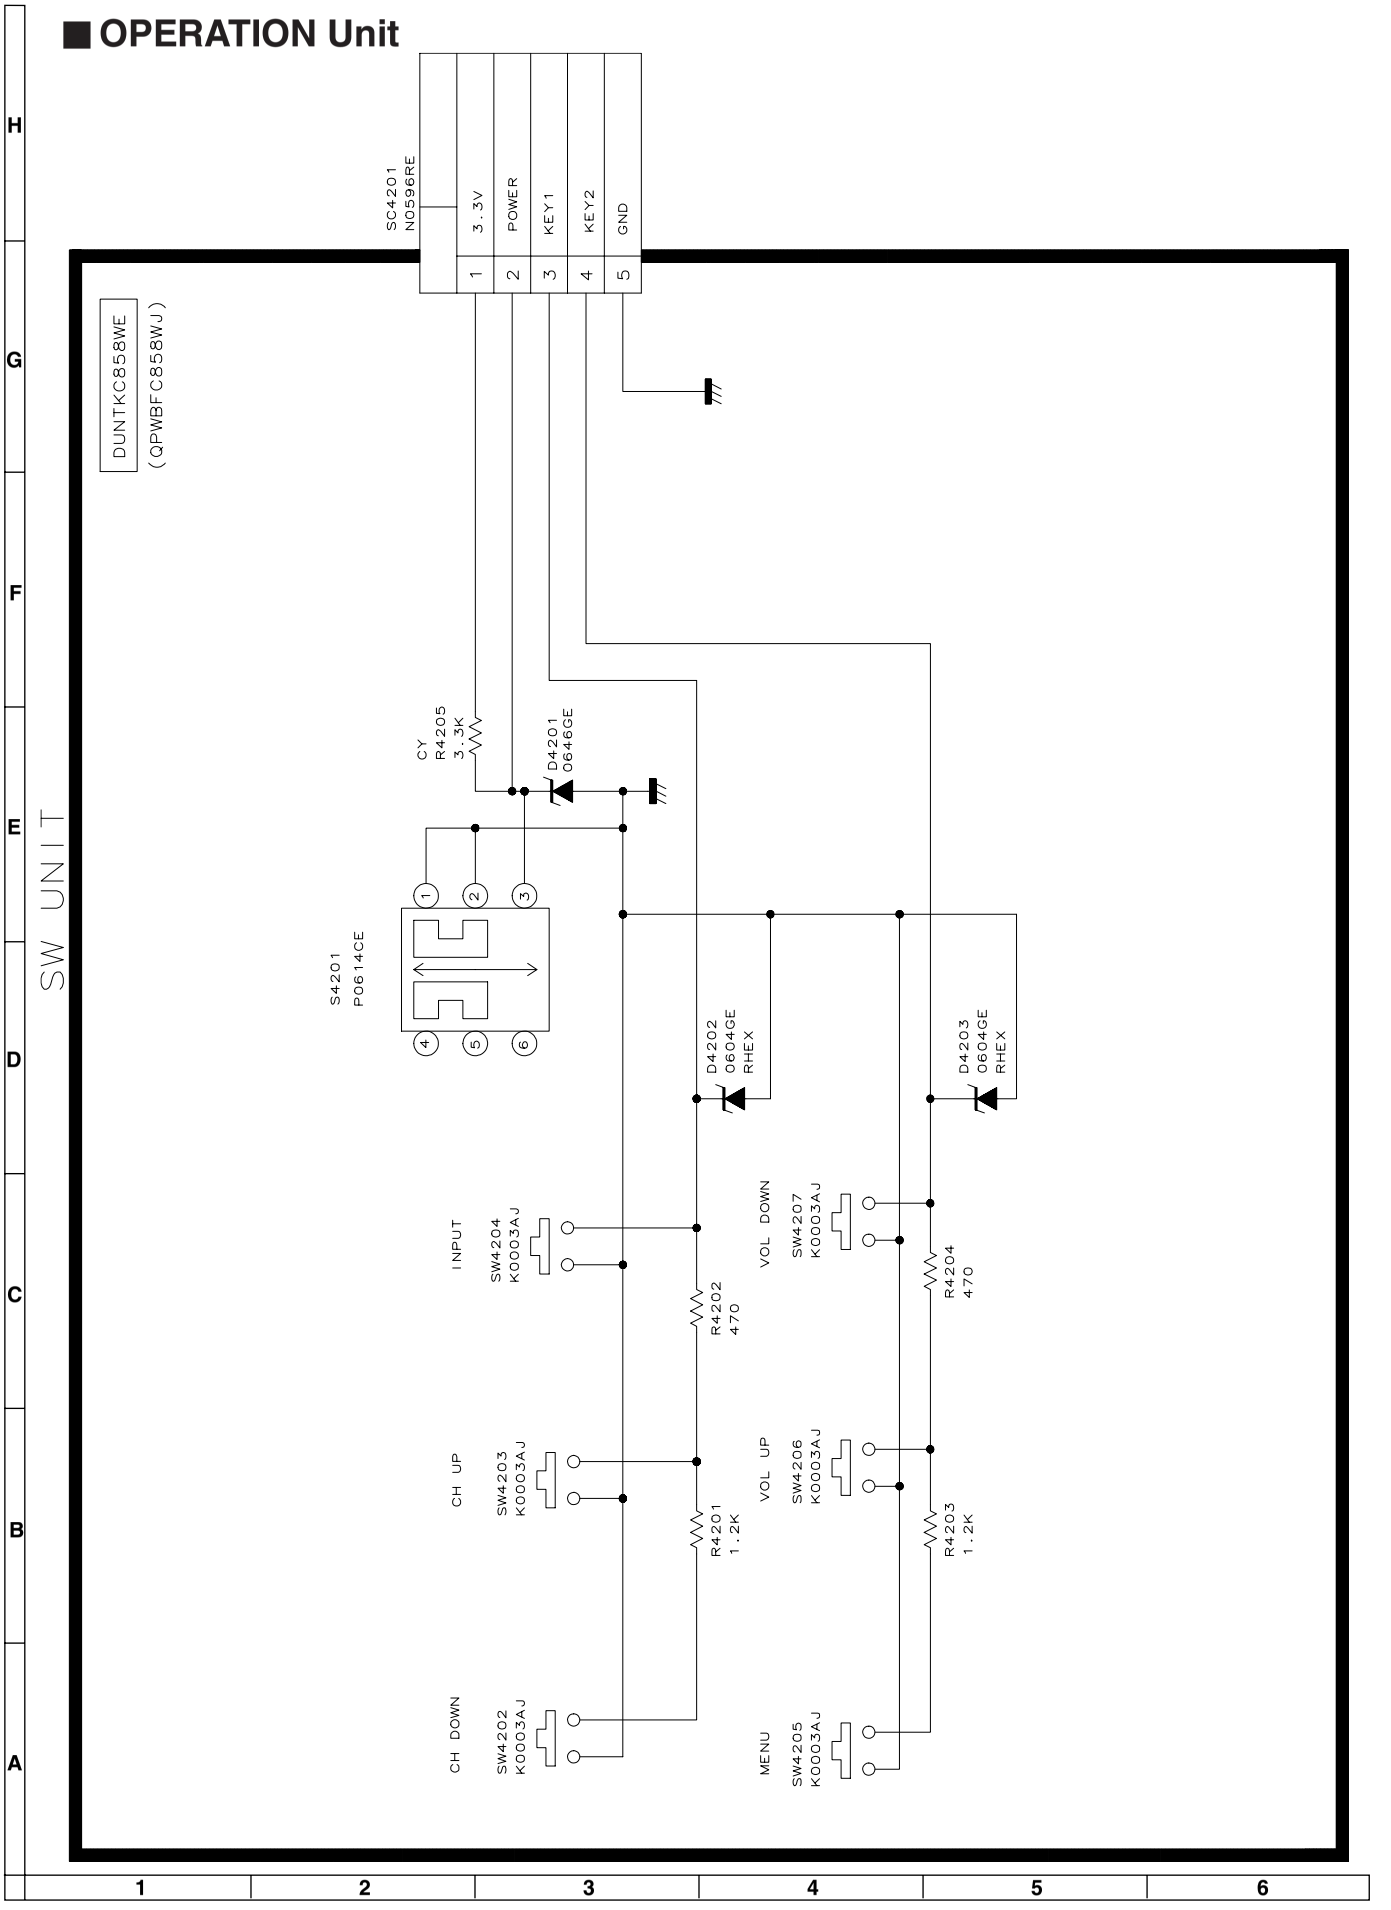

■ R/C, LED Unit

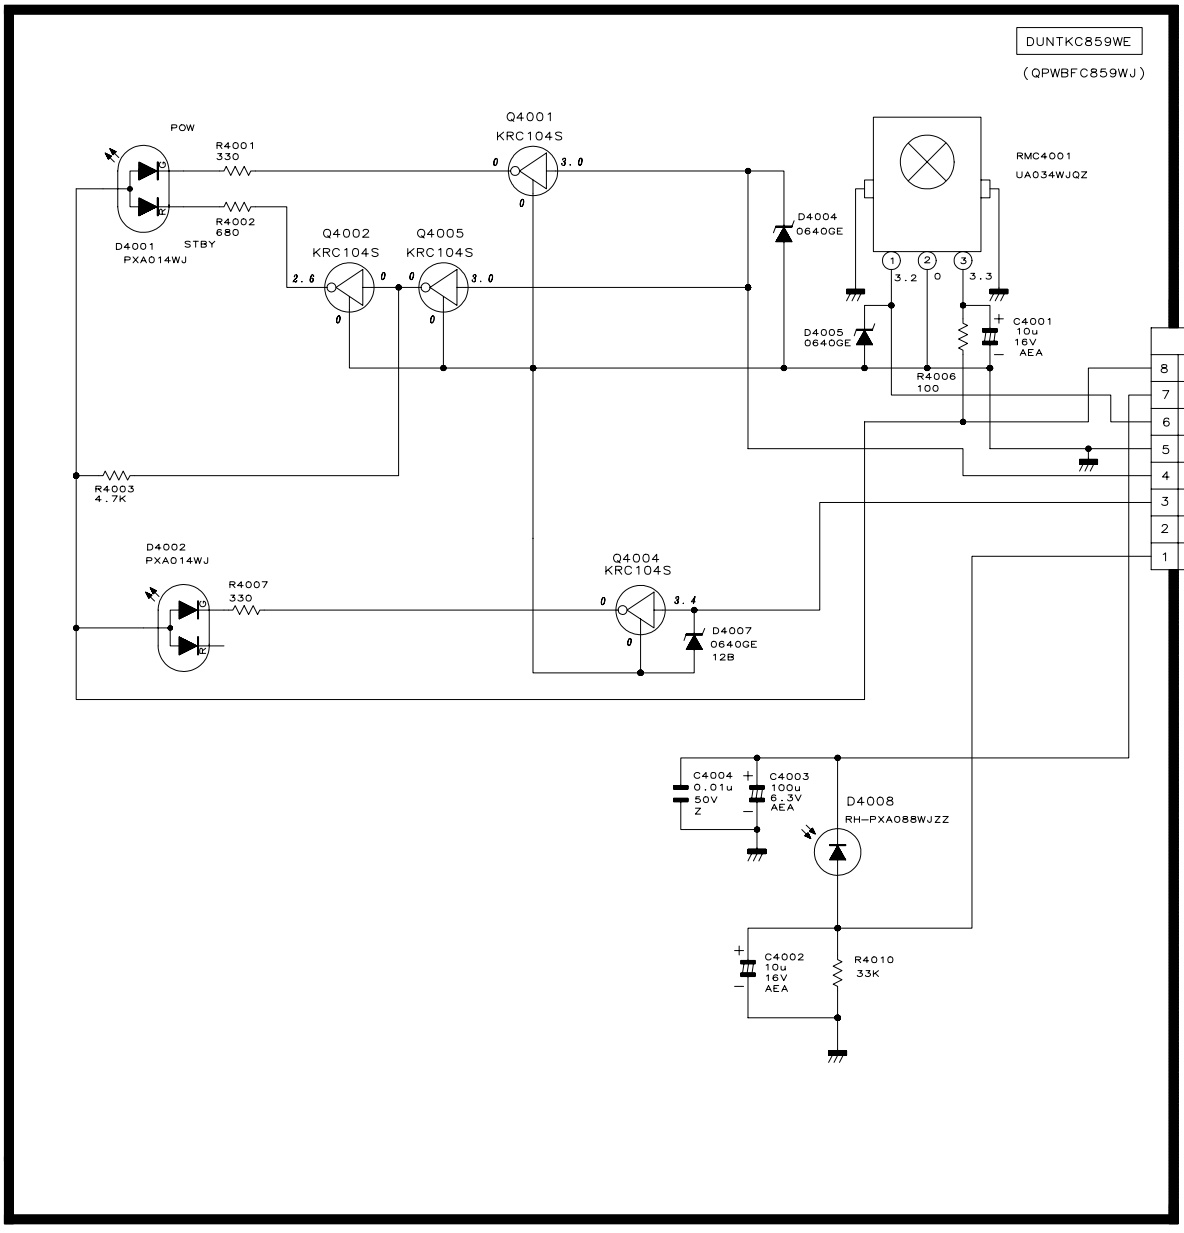
LED UNIT
DUNTKC859WE
(QPWBFC859WJ)
POW
R4001
330
R4002
680
STBY
D4001
PXA014WJ
Q4001
KRC104S
Q4002
KRC104S
Q4005
KRC104S
D4004
0640GE
RMC4001
UA034WJQZ
D4005
0640GE
C4001
10u
16V
AEA
R4006
100
SC4001
N0896RE
8 3.3Vstb
7 PC5V-A
6 IREM
5 GND
4 POWER_LED
3 OPC_LED
2 TIMER_LED
1 OPC
R4003
4.7K
D4002
PXA014WJ
R4007
330
Q4004
KRC104S
D4007
0640GE
12B
C4004
0.01u
50V
Z
C4003
100u
6.3V
AEA
D4008
RH-PXA088WJZZ
C4002
10u
16V
AEA
R4010
33K

PRINTED WIRING BOARD ASSEMBLIES

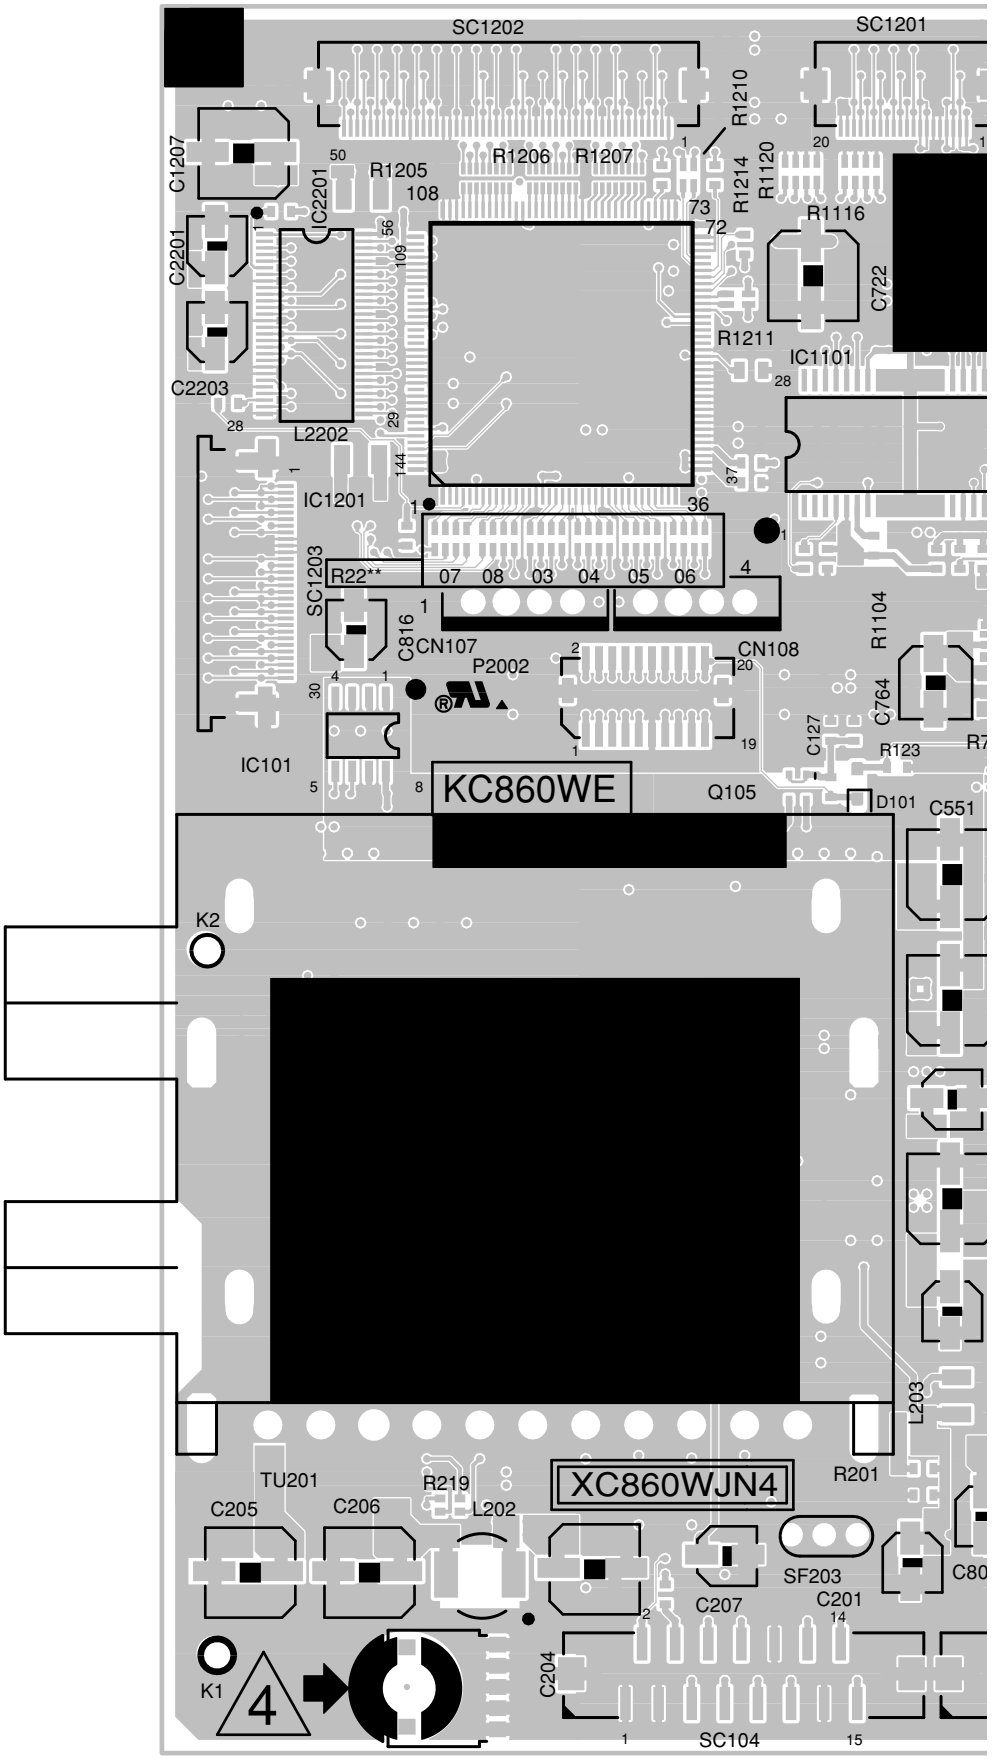

MAIN Unit (Side-A)

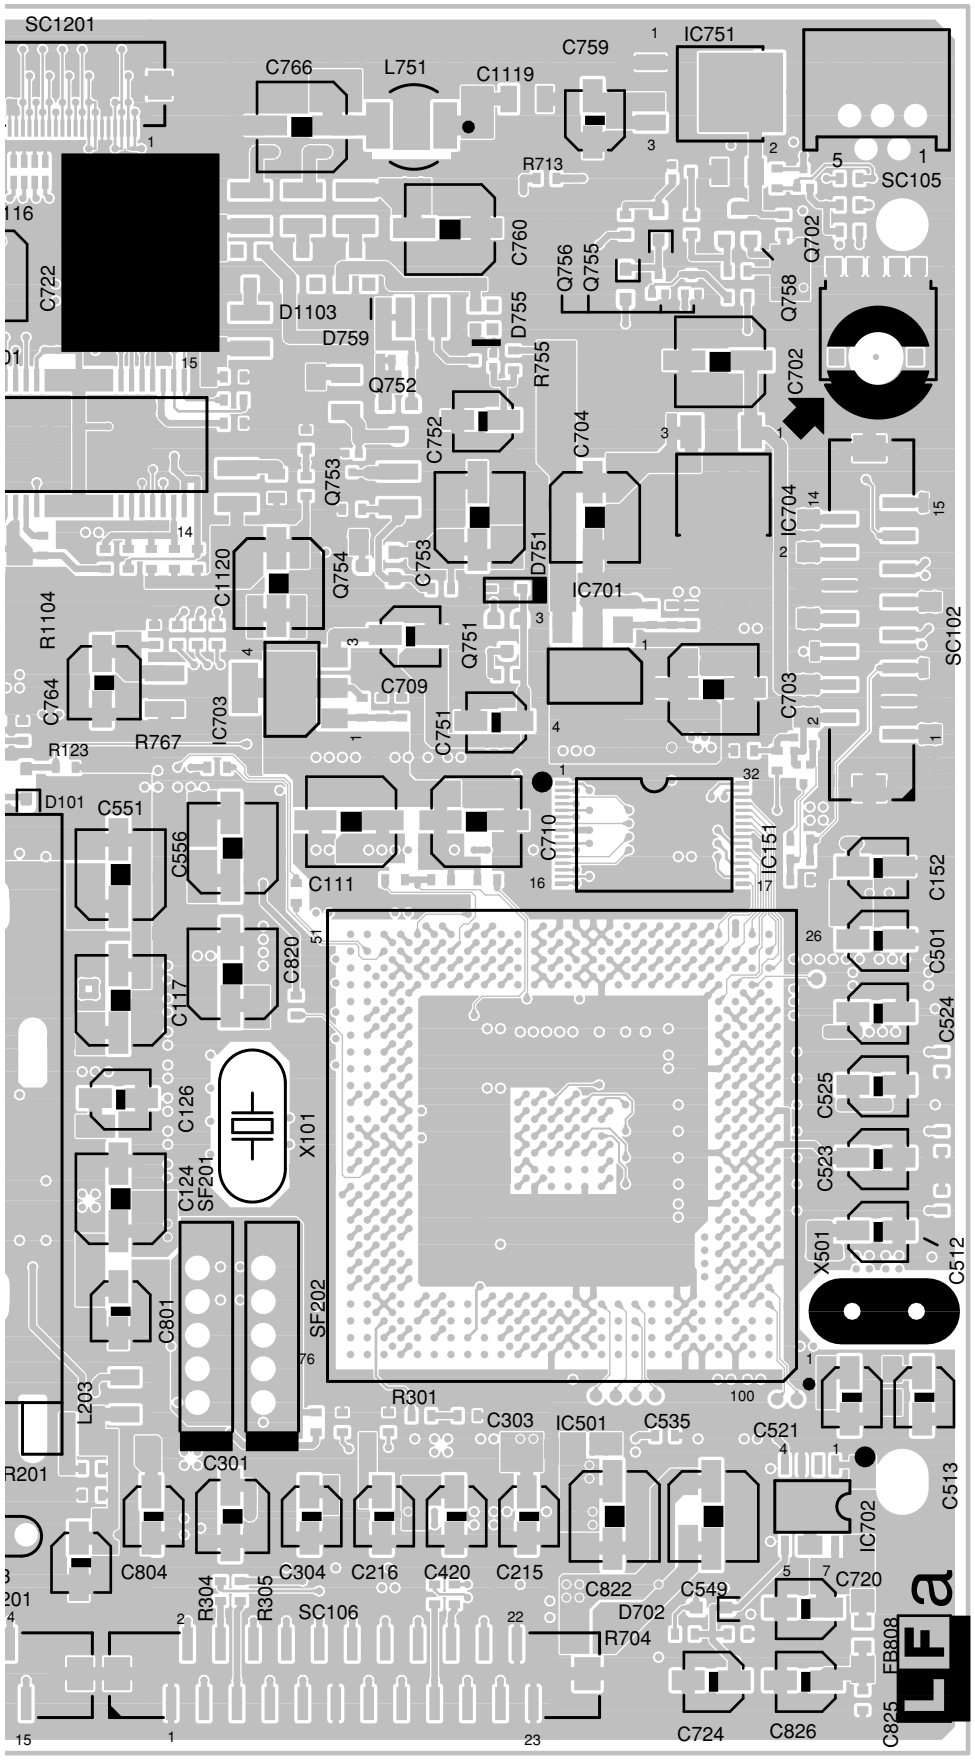

10	11	12	13	14	15	16	17	18	19

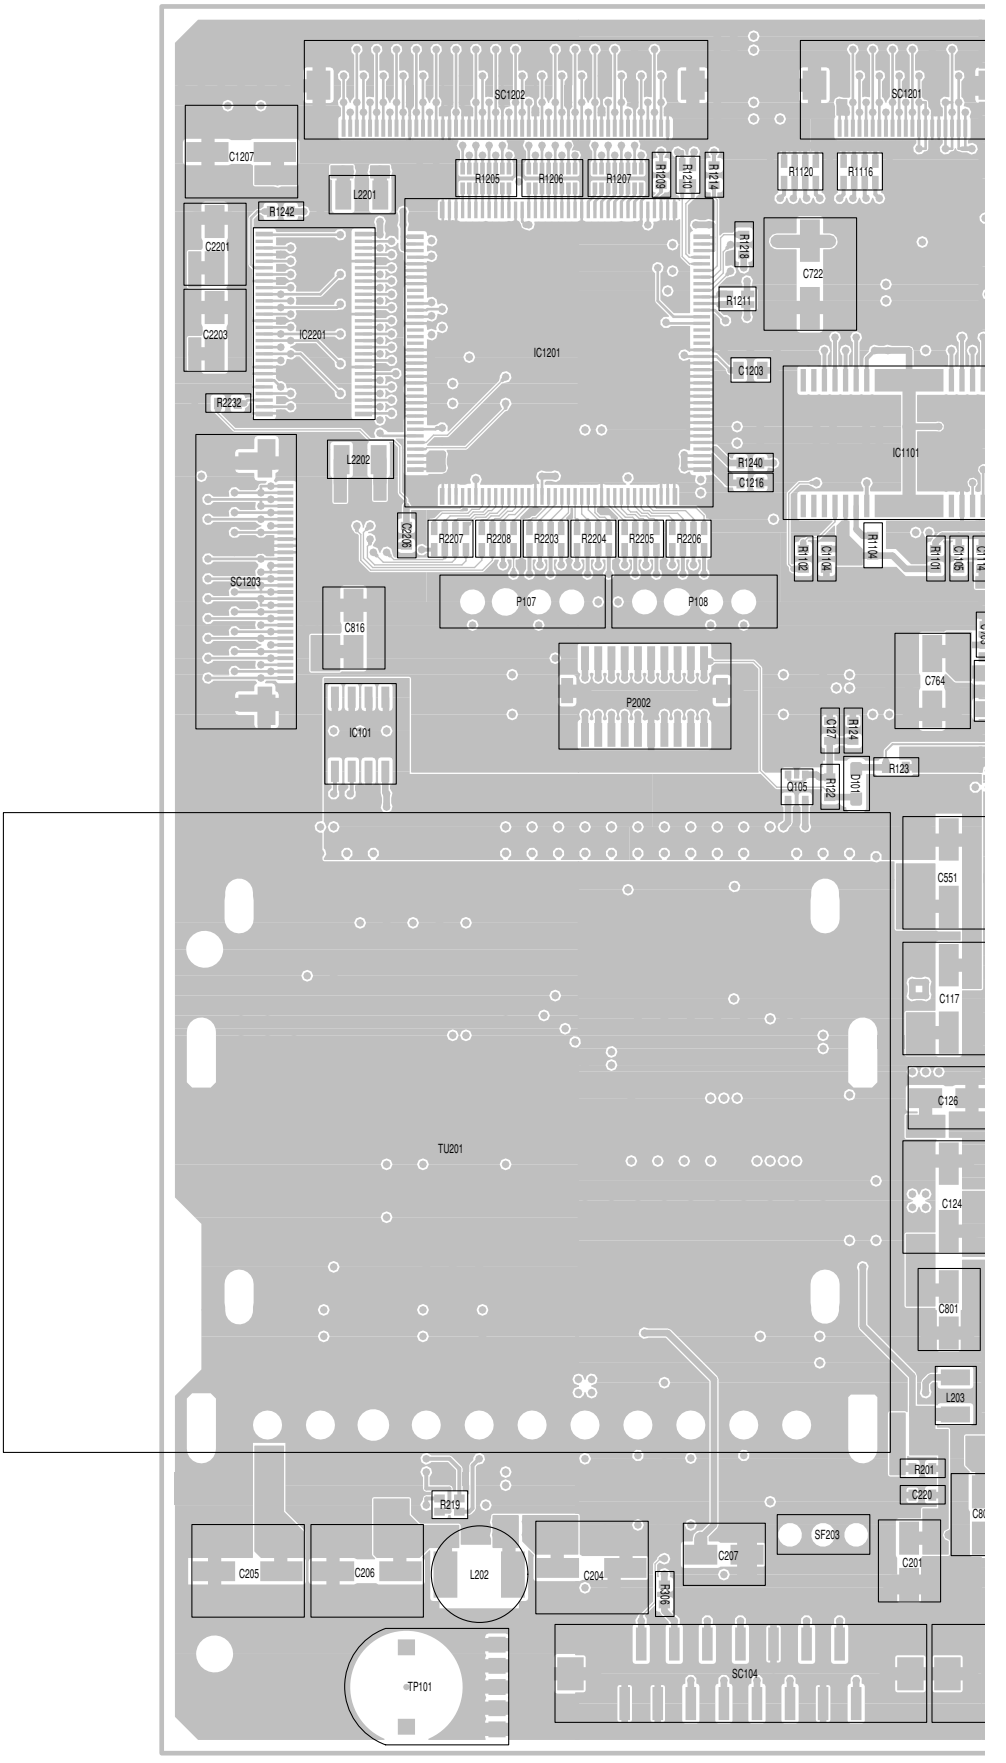

MAIN Unit (Chip Parts Side-A)

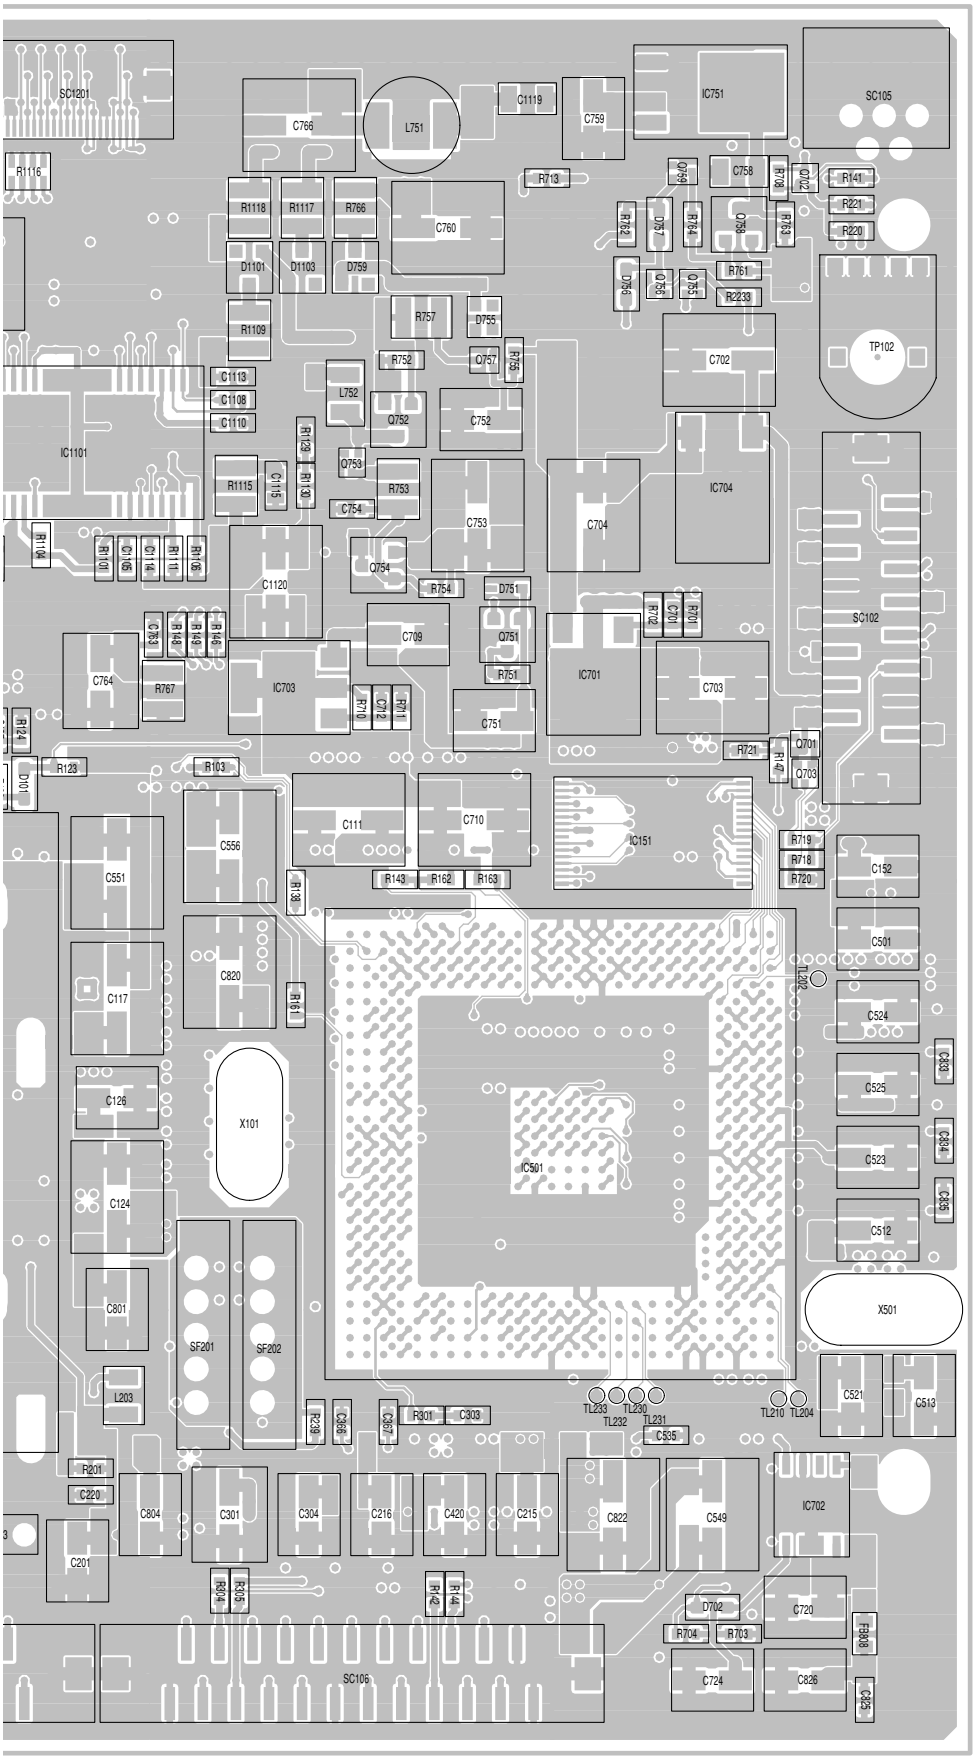

10	11	12	13	14	15	16	17	18	19

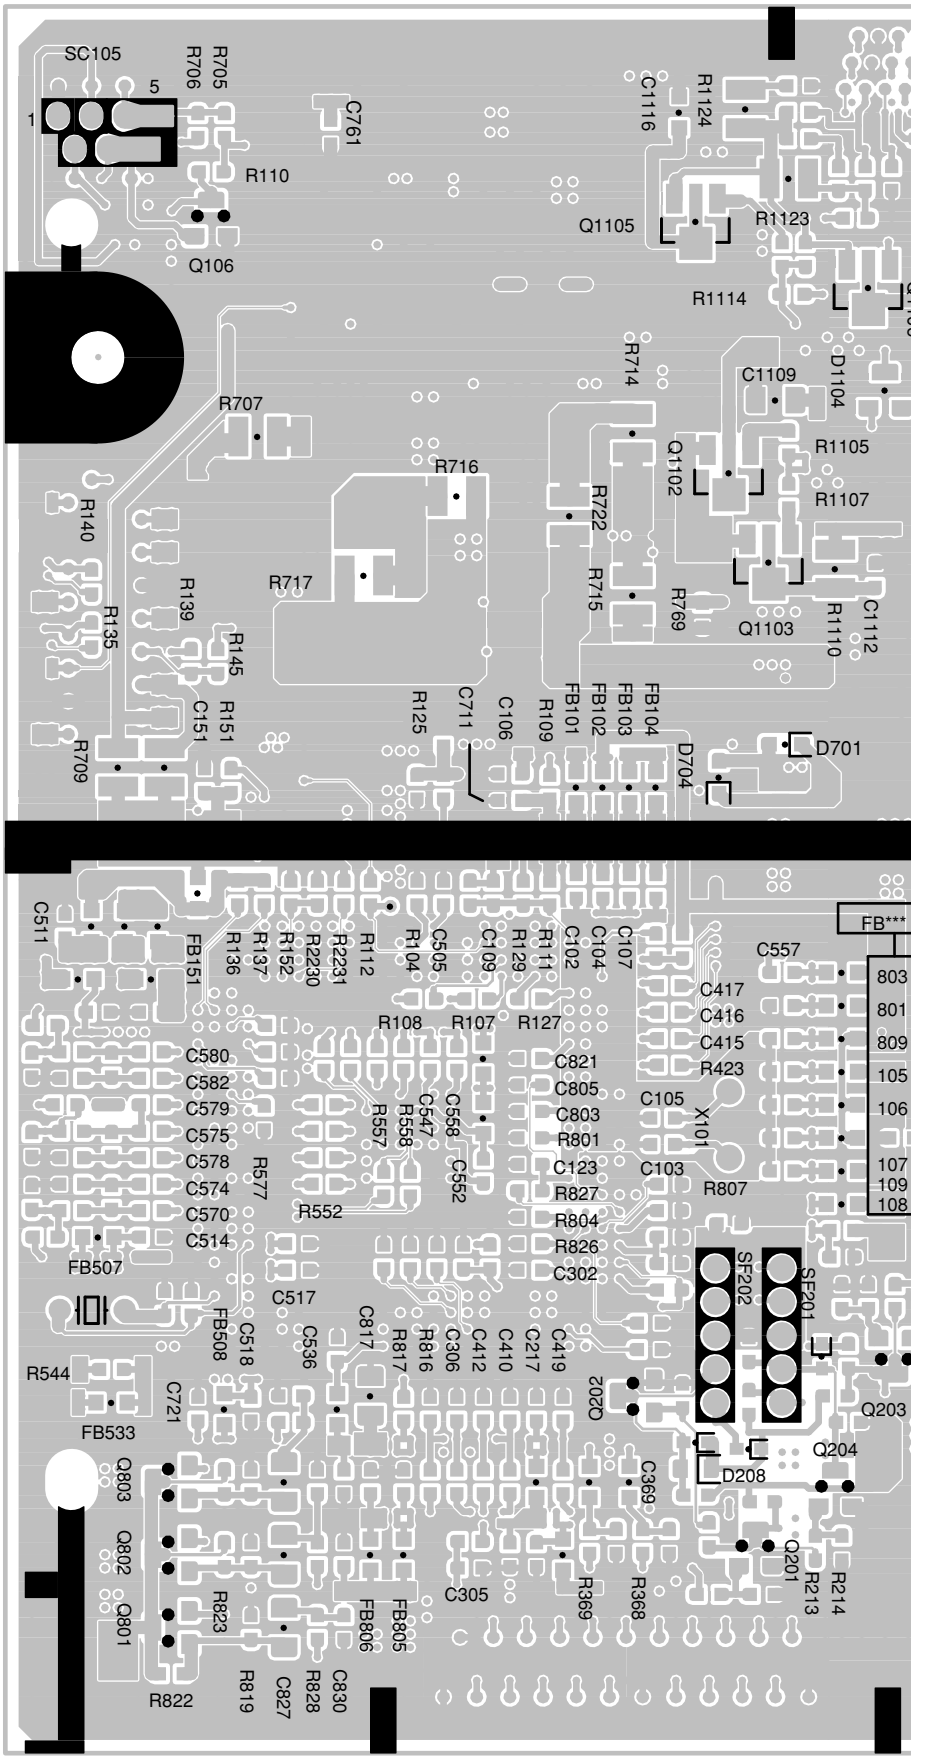

MAIN Unit (Side-B)

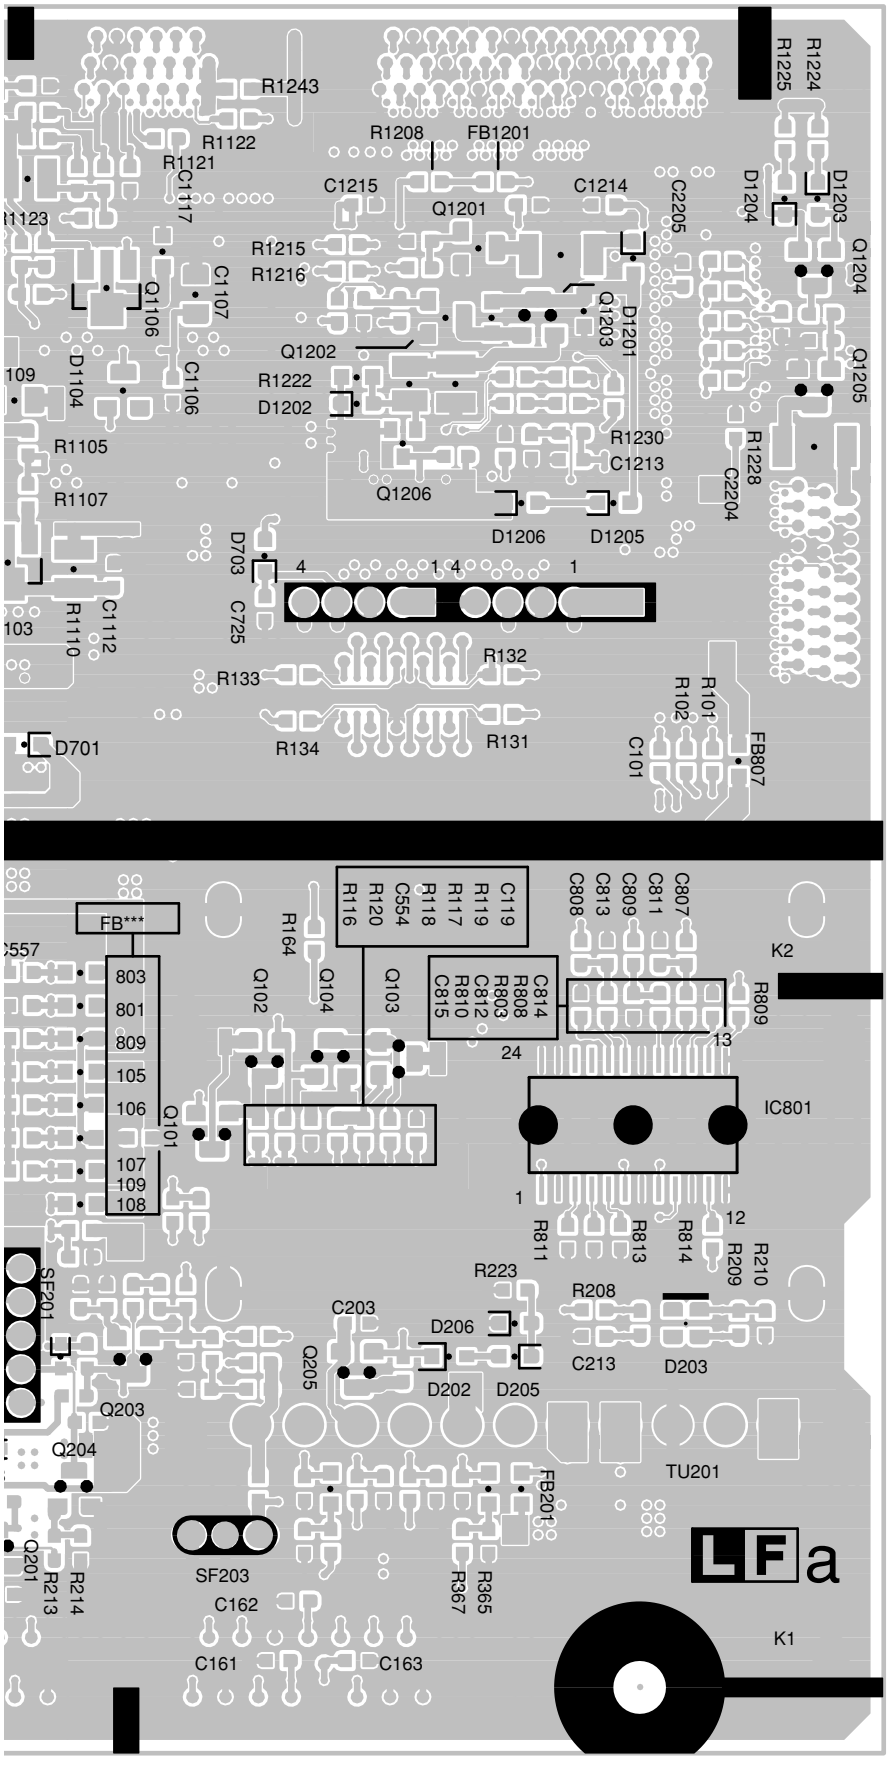

10	11	12	13	14	15	16	17	18	19

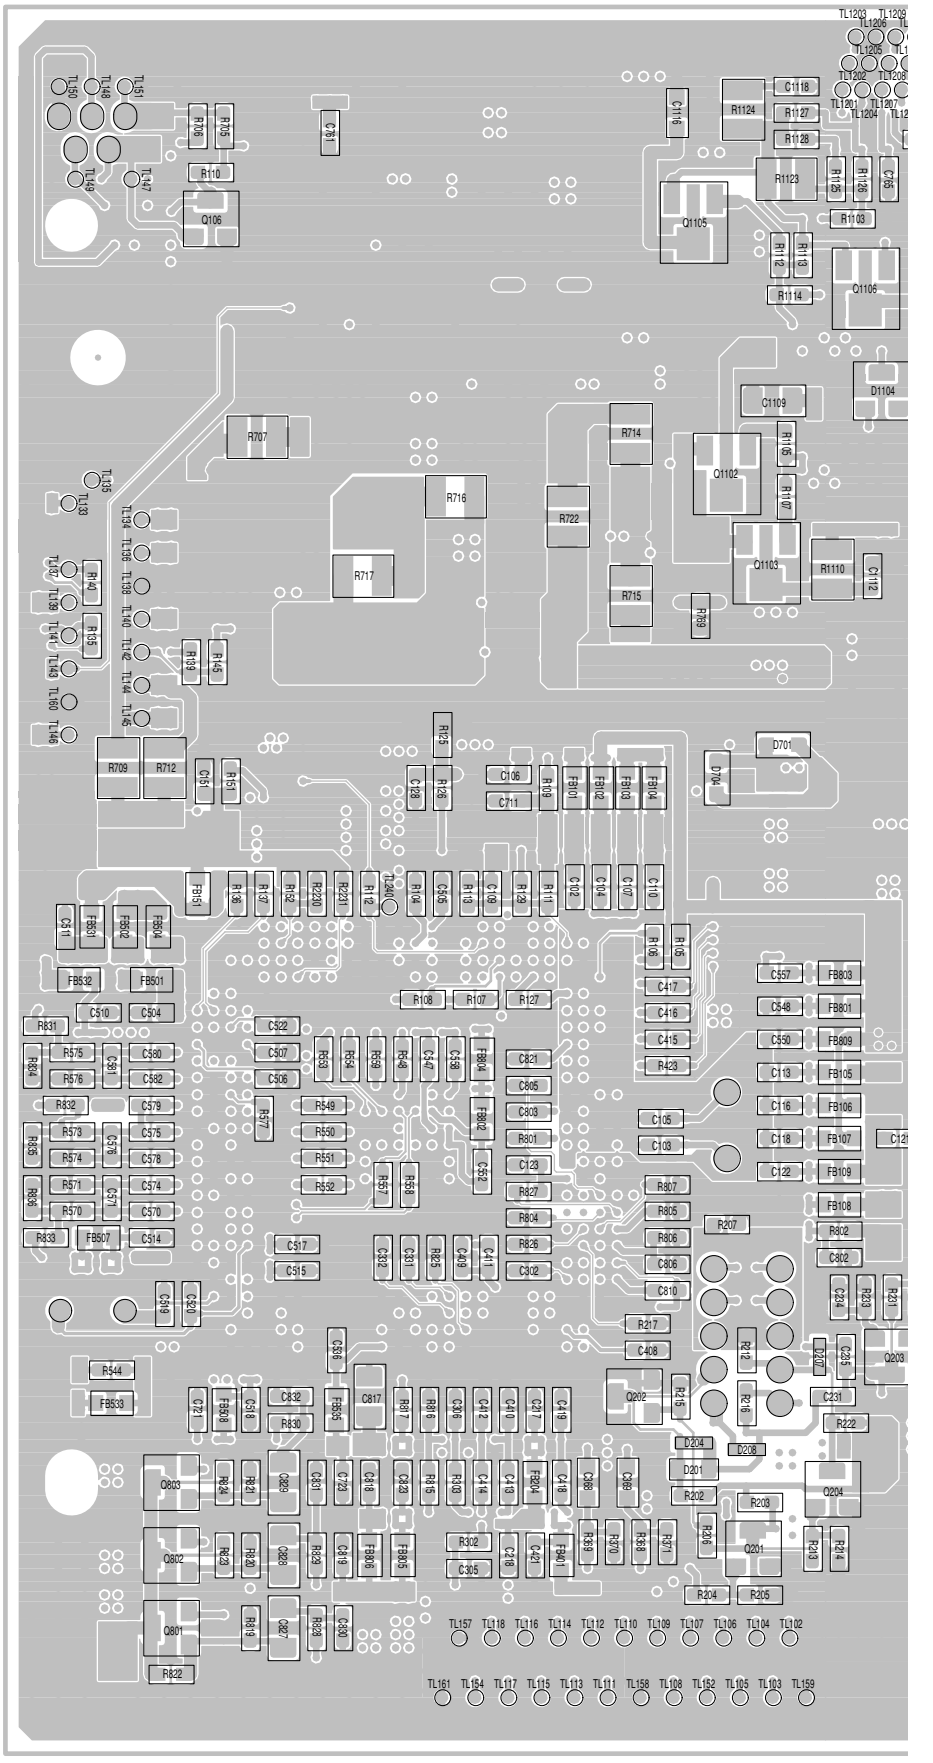

MAIN Unit (Chip Parts Side-B)

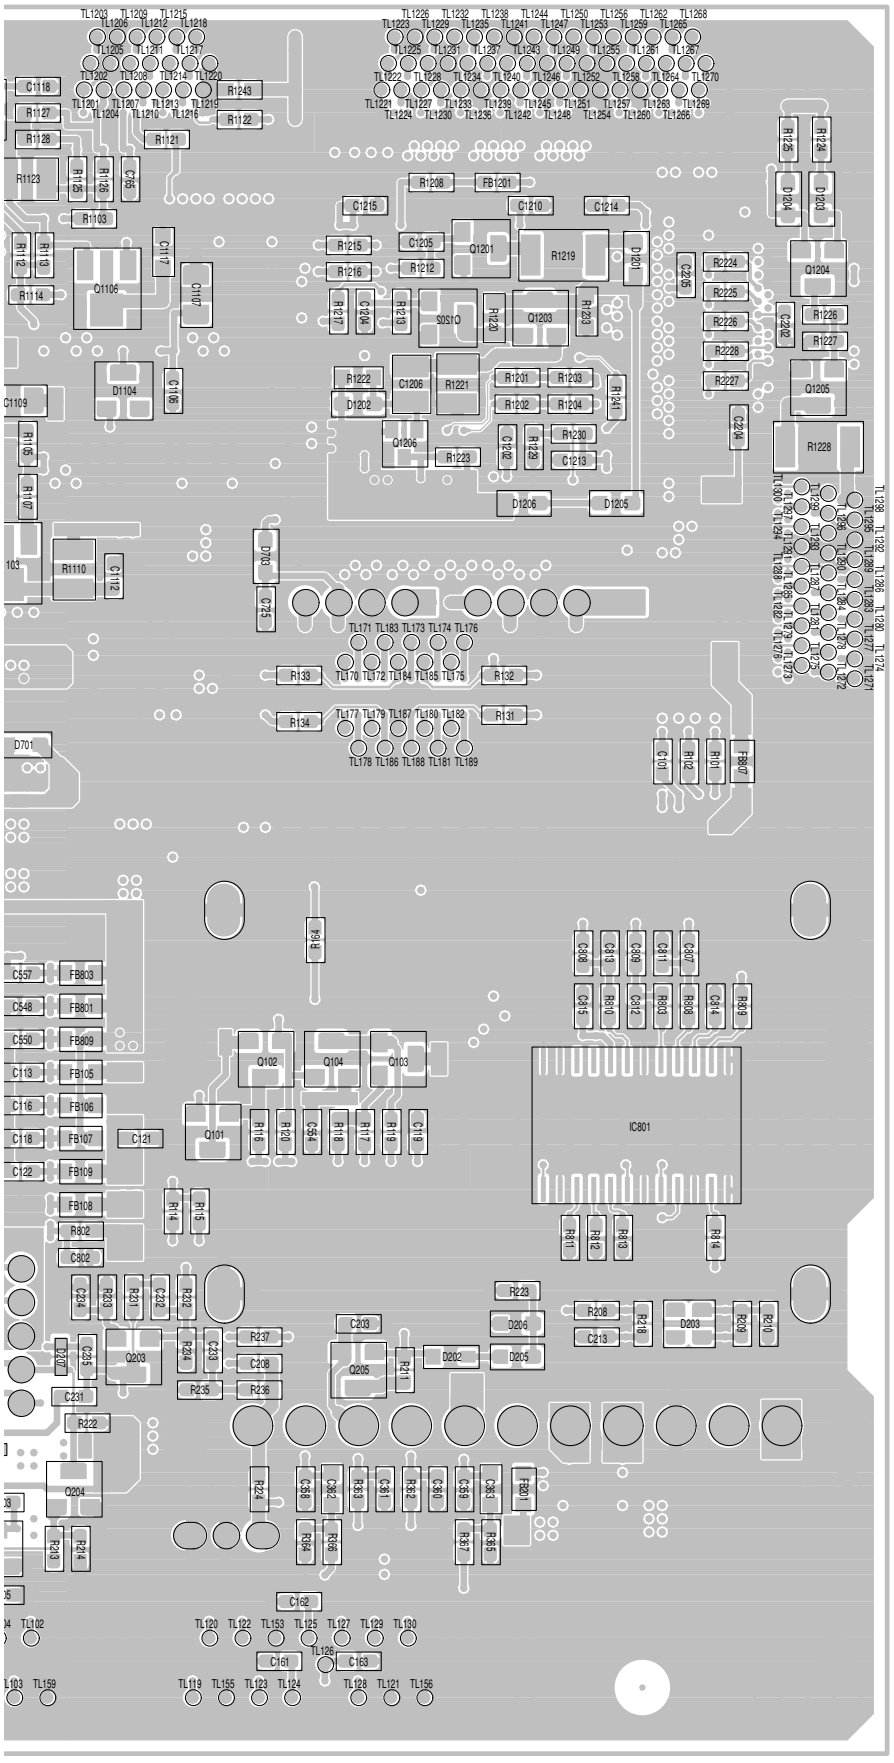

10	11	12	13	14	15	16	17	18	19

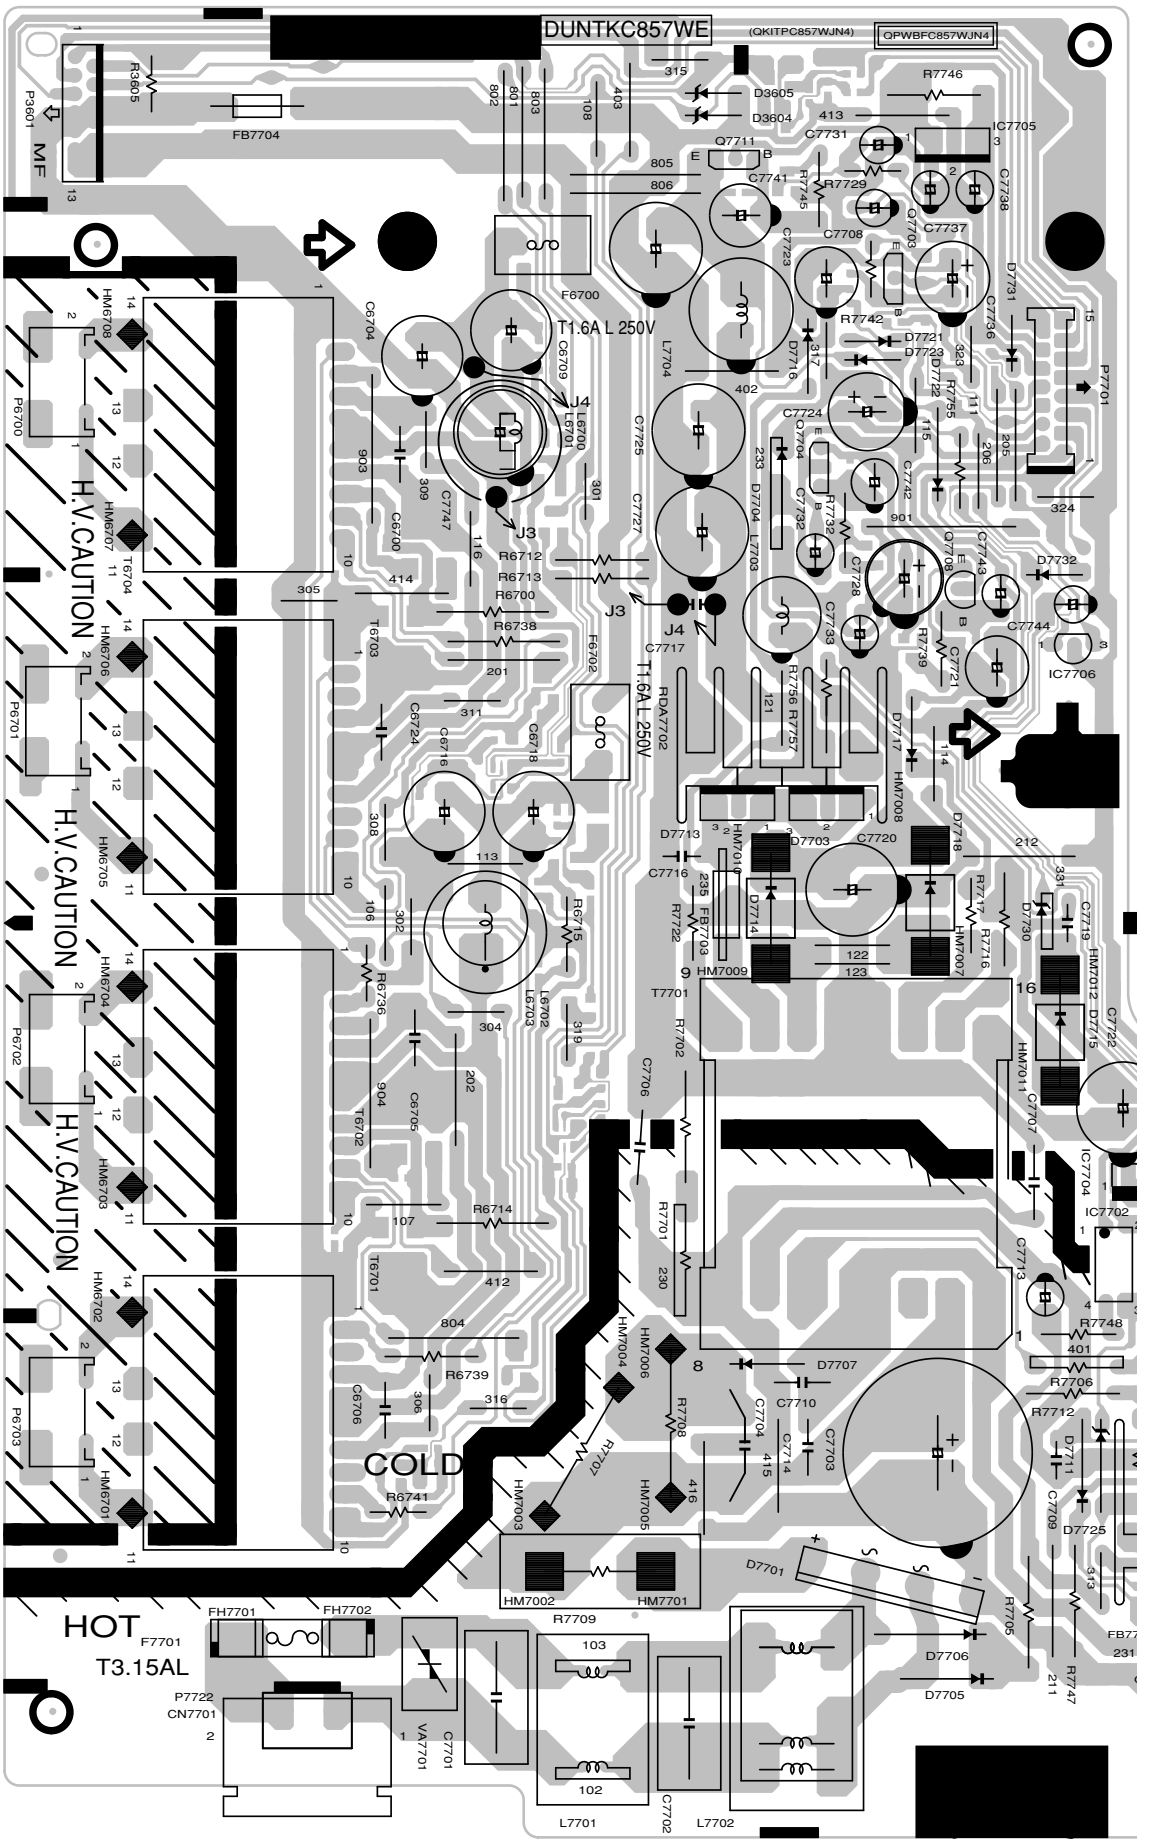
DUNTKC857WE
(QKITPC857WJN4)
QPWBFC857WJN4
H.V.CAUTION
H.V.CAUTION
H.V.CAUTION
COLD
HOT
T1.6A L 250V
T1.6A L 250V
T3.15AL
F7701
P3601
MF
R3605
FB7704
F6700
J4
J3
J3
J4
F6702
RDA7702
T7701
T6704
T6703
T6702
T6701
P6700
P6701
P6702
P6703
HM6708
HM6707
HM6706
HM6705
HM6704
HM6703
HM6702
HM6701
HM7001
HM7002
HM7003
HM7004
HM7005
HM7006
HM7007
HM7008
HM7009
HM7010
HM7011
HM7012
IC7705
IC7706
IC7704
IC7702
FH7701
FH7702
P7722
CN7701
VA7701
C7701
C7702
L7701
L7702
D7701
D7705
D7706
P7701
D3605
D3604
Q7711
F6704
L7704
L7703
L6700
L6701
L6702
L6703
L7705
L7706
L7707
L7708
L7709
L7710
L7711
L7712
L7713
L7714
L7715
L7716
L7717
L7718
L7719
L7720
L7721
L7722
L7723
L7724
L7725
L7726
L7727
L7728
L7729
L7730
L7731
L7732
L7733
L7734
L7735
L7736
L7737
L7738
L7739
L7740
L7741
L7742
L7743
L7744
L7745
L7746
L7747
L7748
L7749
L7750
L7751
L7752
L7753
L7754
L7755
L7756
L7757
L7758
L7759
L7760
L7761
L7762
L7763
L7764
L7765
L7766
L7767
L7768
L7769
L7770
L7771
L7772
L7773
L7774
L7775
L7776
L7777
L7778
L7779
L7780
L7781
L7782
L7783
L7784
L7785
L7786
L7787
L7788
L7789
L7790
L7791
L7792
L7793
L7794
L7795
L7796
L7797
L7798
L7799
L7800
L7801
L7802
L7803
L7804
L7805
L7806
L7807
L7808
L7809
L7810
L7811
L7812
L7813
L7814
L7815
L7816
L7817
L7818
L7819
L7820
L7821
L7822
L7823
L7824
L7825
L7826
L7827
L7828
L7829
L7830
L7831
L7832
L7833
L7834
L7835
L7836
L7837
L7838
L7839
L7840
L7841
L7842
L7843
L7844
L7845
L7846
L7847
L7848
L7849
L7850
L7851
L7852
L7853
L7854
L7855
L7856
L7857
L7858
L7859
L7860
L7861
L7862
L7863
L7864
L7865
L7866
L7867
L7868
L7869
L7870
L7871
L7872
L7873
L7874
L7875
L7876
L7877
L7878
L7879
L7880
L7881
L7882
L7883
L7884
L7885
L7886
L7887
L7888
L7889
L7890
L7891
L7892
L7893
L7894
L7895
L7896
L7897
L7898
L7899
L7900
L7901
L7902
L7903
L7904
L7905
L7906
L7907
L7908
L7909
L7910
L7911
L7912
L7913
L7914
L7915
L7916
L7917
L7918
L7919
L7920
L7921
L7922
L7923
L7924
L7925
L7926
L7927
L7928
L7929
L7930
L7931
L7932
L7933
L7934
L7935
L7936
L7937
L7938
L7939
L7940
L7941
L7942
L7943
L7944
L7945
L7946
L7947
L7948
L7949
L7950
L7951
L7952
L7953
L7954
L7955
L7956
L7957
L7958
L7959
L7960
L7961
L7962
L7963
L7964
L7965
L7966
L7967
L7968
L7969
L7970
L7971
L7972
L7973
L7974
L7975
L7976
L7977
L7978
L7979
L7980
L7981
L7982
L7983
L7984
L7985
L7986
L7987
L7988
L7989
L7990
L7991
L7992
L7993
L7994
L7995
L7996
L7997
L7998
L7999
L8000
L8001
L8002
L8003
L8004
L8005
L8006
L8007
L8008
L8009
L8010
L8011
L8012
L8013
L8014
L8015
L8016
L8017
L8018
L8019
L8020
L8021
L8022
L8023
L8024
L8025
L8026
L8027
L8028
L8029
L8030
L8031
L8032
L8033
L8034
L8035
L8036
L8037
L8038
L8039
L8040
L8041
L8042
L8043
L8044
L8045
L8046
L8047
L8048
L8049
L8050
L8051
L8052
L8053
L8054
L8055
L8056
L8057
L8058
L8059
L8060
L8061
L8062
L8063
L8064
L8065
L8066
L8067
L8068
L8069
L8070
L8071
L8072
L8073
L8074
L8075
L8076
L8077
L8078
L8079
L8080
L8081
L8082
L8083
L8084
L8085
L8086
L8087
L8088
L8089
L8090
L8091
L8092
L8093
L8094
L8095
L8096
L8097
L8098
L8099
L8100
L8101
L8102
L8103
L8104
L8105
L8106
L8107
L8108
L8109
L8110
L8111
L8112
L8113
L8114
L8115
L8116
L8117
L8118
L8119
L8120
L8121
L8122
L8123
L8124
L8125
L8126
L8127
L8128
L8129
L8130
L8131
L8132
L8133
L8134
L8135
L8136
L8137
L8138
L8139
L8140
L8141
L8142
L8143
L8144
L8145
L8146
L8147
L8148
L8149
L8150
L8151
L8152
L8153
L8154
L8155
L8156
L8157
L8158
L8159
L8160
L8161
L8162
L8163
L8164
L8165
L8166
L8167
L8168
L8169
L8170
L8171
L8172
L8173
L8174
L8175
L8176
L8177
L8178
L8179
L8180
L8181
L8182
L8183
L8184
L8185
L8186
L8187
L8188
L8189
L8190
L8191
L8192
L8193
L8194
L8195
L8196
L8197
L8198
L8199
L8200
L8201
L8202
L8203
L8204
L8205
L8206
L8207
L8208
L8209
L8210
L8211
L8212
L8213
L8214
L8215
L8216
L8217
L8218
L8219
L8220
L8221
L8222
L8223
L8224
L8225
L8226
L8227
L8228
L8229
L8230
L8231
L8232
L8233
L8234
L8235
L8236
L8237
L8238
L8239
L8240
L8241
L8242
L8243
L8244
L8245
L8246
L8247
L8248
L8249
L8250
L8251
L8252
L8253
L8254
L8255
L8256
L8257
L8258
L8259
L8260
L8261
L8262
L8263
L8264
L8265
L8266
L8267
L8268
L8269
L8270
L8271
L8272
L8273
L8274
L8275
L8276
L8277
L8278
L8279
L8280
L8281
L8282
L8283
L8284
L8285
L8286
L8287
L8288
L8289
L8290
L8291
L8292
L8293
L8294
L8295
L8296
L8297
L8298
L8299
L8300
L8301
L8302
L8303
L8304
L8305
L8306
L8307
L8308
L8309
L8310
L8311
L8312
L8313
L8314
L8315
L8316
L8317
L8318
L8319
L8320
L8321
L8322
L8323
L8324
L8325
L8326
L8327
L8328
L8329
L8330
L8331
L8332
L8333
L8334
L8335
L8336
L8337
L8338
L8339
L8340
L8341
L8342
L8343
L8344
L8345
L8346
L8347
L8348
L8349
L8350
L8351
L8352
L8353
L8354
L8355
L8356
L8357
L8358
L8359
L8360
L8361
L8362
L8363
L8364
L8365
L8366
L8367
L8368
L8369
L8370
L8371
L8372
L8373
L8374
L8375
L8376
L8377
L8378
L8379
L8380
L8381
L8382
L8383
L8384
L8385
L8386
L8387
L8388
L8389
L8390
L8391
L8392
L8393
L8394
L8395
L8396
L8397
L8398
L8399
L8400
L8401
L8402
L8403
L8404
L8405
L8406
L8407
L8408
L8409
L8410
L8411
L8412
L8413
L8414
L8415
L8416
L8417
L8418
L8419
L8420
L8421
L8422
L8423
L8424
L8425
L8426
L8427
L8428
L8429
L8430
L8431
L8432
L8433
L8434
L8435
L8436
L8437
L8438
L8439
L8440
L8441
L8442
L8443
L8444
L8445
L8446
L8447
L8448
L8449
L8450
L8451
L8452
L8453
L8454
L8455
L8456
L8457
L8458
L8459
L8460
L8461
L8462
L8463
L8464
L8465
L8466
L8467
L8468
L8469
L8470
L8471
L8472
L8473
L8474
L8475
L8476
L8477
L8478
L8479
L8480
L8481
L8482
L8483
L8484
L8485
L8486
L8487
L8488
L8489
L8490
L8491
L8492
L8493
L8494
L8495
L8496
L8497
L8498
L8499
L8500
L8501
L8502
L8503
L8504
L8505
L8506
L8507
L8508
L8509
L8510
L8511
L8512
L8513
L8514
L8515
L8516
L8517
L8518
L8519
L8520
L8521
L8522
L8523
L8524
L8525
L8526
L8527
L8528
L8529
L8530
L8531
L8532
L8533
L8534
L8535
L8536
L8537
L8538
L8539
L8540
L8541
L8542
L8543
L8544
L8545
L8546
L8547
L8548
L8549
L8550
L8551
L8552
L8553
L8554
L8555
L8556
L8557
L8558
L8559
L8560
L8561
L8562
L8563
L8564
L8565
L8566
L8567
L8568
L8569
L8570
L8571
L8572
L8573
L8574
L8575
L8576
L8577
L8578
L8579
L8580
L8581
L8582
L8583
L8584
L8585
L8586
L8587
L8588
L8589
L8590
L8591
L8592
L8593
L8594
L8595
L8596
L8597
L8598
L8599
L8600
L8601
L8602
L8603
L8604
L8605
L8606
L8607
L8608
L8609
L8610
L8611
L8612
L8613
L8614
L8615
L8616
L8617
L8618
L8619
L8620
L8621
L8622
L8623
L8624
L8625
L8626
L8627
L8628
L8629
L8630
L8631
L8632
L8633
L8634
L8635
L8636
L8637
L8638
L8639
L8640
L8641
L8642
L8643
L8644
L8645
L8646
L8647
L8648
L8649
L8650
L8651
L8652
L8653
L8654
L8655
L8656
L8657
L8658
L8659
L8660
L8661
L8662
L8663
L8664
L8665
L8666
L8667
L8668
L8669
L8670
L8671
L8672
L8673
L8674
L8675
L8676
L8677
L8678
L8679
L8680
L8681
L8682
L8683
L8684
L8685
L8686
L8687
L8688
L8689
L8690
L8691
L8692
L8693
L8694
L8695
L8696
L8697
L8698
L8699
L8700
L8701
L8702
L8703
L8704
L8705
L8706
L8707
L8708
L8709
L8710
L8711
L8712
L8713
L8714
L8715
L8716
L8717
L8718
L8719
L8720
L8721
L8722
L8723
L8724
L8725
L8726
L8727
L8728
L8729
L8730
L8731
L8732
L8733
L8734
L8735
L8736
L8737
L8738
L8739
L8740
L8741
L8742
L8743
L8744
L8745
L8746
L8747
L8748
L8749
L8750
L8751
L8752
L8753
L8754
L8755
L8756
L8757
L8758
L8759
L8760
L8761
L8762
L8763
L8764
L8765
L8766
L8767
L8768
L8769
L8770
L8771
L8772
L8773
L8774
L8775
L8776
L8777
L8778
L8779
L8780
L8781
L8782
L8783
L8784
L8785
L8786
L8787
L8788
L8789
L8790
L8791
L8792
L8793
L8794
L8795
L8796
L8797
L8798
L8799
L8800
L8801
L8802
L8803
L8804
L8805
L8806
L8807
L8808
L8809
L8810
L8811
L8812
L8813
L8814
L8815
L8816
L8817
L8818
L8819
L8820
L8821
L8822
L8823
L8824
L8825
L8826
L8827
L8828
L8829
L8830
L8831
L8832
L8833
L8834
L8835
L8836
L8837
L8838
L8839
L8840
L8841
L8842
L8843
L8844
L8845
L8846
L8847
L8848
L8849
L8850
L8851
L8852
L8853
L8854
L8855
L8856
L8857
L8858
L8859
L8860
L8861
L8862
L8863
L8864
L8865
L8866
L8867
L8868
L8869
L8870
L8871
L8872
L8873
L8874
L8875
L8876
L8877
L8878
L8879
L8880
L8881
L8882
L8883
L8884
L8885
L8886
L8887
L8888
L8889
L8890
L8891
L8892
L8893
L8894
L8895
L8896
L8897
L8898
L8899
L8900
L8901
L8902
L8903
L8904
L8905
L8906
L8907
L8908
L8909
L8910
L8911
L8912
L8913
L8914
L8915
L8916
L8917
L8918
L8919
L8920
L8921
L8922
L8923
L8924
L8925
L8926
L8927
L8928
L8929
L8930
L8931
L8932
L8933
L8934
L8935
L8936
L8937
L8938
L8939
L8940
L8941
L8942
L8943
L8944
L8945
L8946
L8947
L8948
L8949
L8950
L8951
L8952
L8953
L8954
L8955
L8956
L8957
L8958
L8959
L8960
L8961
L8962
L8963
L8964
L8965
L8966
L8967
L8968
L8969
L8970
L8971
L8972
L8973
L8974
L8975
L8976
L8977
L8978
L8979
L8980
L8981
L8982
L8983
L8984
L8985
L8986
L8987
L8988
L8989
L8990
L8991
L8992
L8993
L8994
L8995
L8996
L8997
L8998
L8999
L9000
L9001
L9002
L9003
L9004
L9005
L9006
L9007
L9008
L9009
L9010
L9011
L9012
L9013
L9014
L9015
L9016
L9017
L9018
L9019
L9020
L9021
L9022
L9023
L9024
L9025
L9026
L9027
L9028
L9029
L9030
L9031
L9032
L9033
L9034
L9035
L9036
L9037
L9038
L9039
L9040
L9041
L9042
L9043
L9044
L9045
L9046
L9047
L9048
L9049
L9050
L9051
L9052
L9053
L9054
L9055
L9056
L9057
L9058
L9059
L9060
L9061
L9062
L9063
L9064
L9065
L9066
L9067
L9068
L9069
L9070
L9071
L9072
L9073
L9074
L9075
L9076
L9077
L9078
L9079
L9080
L9081
L9082
L9083
L9084
L9085
L9086
L9087
L9088
L9089
L9090
L9091
L9092
L9093
L9094
L9095
L9096
L9097
L9098
L9099
L9100
L9101
L9102
L9103
L9104
L9105
L9106
L9107
L9108
L9109
L9110
L9111
L9112
L9113
L9114
L9115
L9116
L9117
L9118
L9119
L9120
L9121
L9122
L9123
L9124
L9125
L9126
L9127
L9128
L9129
L9130
L9131
L9132
L9133
L9134
L9135
L9136
L9137
L9138
L9139
L9140
L9141
L9142
L9143
L9144
L9145
L9146
L9147
L9148
L9149
L9150
L9151
L9152
L9153
L9154
L9155
L9156
L9157
L9158
L9159
L9160
L9161
L9162
L9163
L9164
L9165
L9166
L9167
L9168
L9169
L9170
L9171
L9172
L9173
L9174
L9175
L9176
L9177
L9178
L9179
L9180
L9181
L9182
L9183
L9184
L9185
L9186
L9187
L9188
L9189
L9190
L9191
L9192
L9193
L9194
L9195
L9196
L9197
L9198
L9199
L9200
L9201
L9202
L9203
L9204
L9205
L9206
L9207
L9208
L9209
L9210
L9211
L9212
L9213
L9214
L9215
L9216
L9217
L9218
L9219
L9220
L9221
L9222
L9223
L9224
L9225
L9226
L9227
L9228
L9229
L9230
L9231
L9232
L9233
L9234
L9235
L9236
L9237
L9238
L9239
L9240
L9241
L9242
L9243
L9244
L9245
L9246
L9247
L9248
L9249
L9250
L9251
L9252
L9253
L9254
L9255
L9256
L9257
L9258
L9259
L9260
L9261
L9262
L9263
L9264
L9265
L9266
L9267
L9268
L9269
L9270
L9271
L9272
L9273
L9274
L9275
L9276
L9277
L9278
L9279
L9280
L9281
L9282
L9283
L9284
L9285
L9286
L9287
L9288
L9289
L9290
L9291
L9292
L9293
L9294
L9295
L9296
L9297
L9298
L9299
L9300
L9301
L9302
L9303
L9304
L9305
L9306
L9307
L9308
L9309
L9310
L9311
L9312
L9313
L9314
L9315
L9316
L9317
L9318
L9319
L9320
L9321
L9322
L9323
L9324
L9325
L9326
L9327
L9328
L9329
L9330
L9331
L9332
L9333
L9334
L9335
L9336
L9337
L9338
L9339
L9340
L9341
L9342
L9343
L9344
L9345
L9346
L9347
L9348
L9349
L9350
L9351
L9352
L9353
L9354
L9355
L9356
L9357
L9358
L9359
L9360
L9361
L9362
L9363
L9364
L9365
L9366
L9367
L9368
L9369
L9370
L9371
L9372
L9373
L9374
L9375
L9376
L9377
L9378
L9379
L9380
L9381
L9382
L9383
L9384
L9385
L9386
L9387
L9388
L9389
L9390
L9391
L9392
L9393
L9394
L9395
L9396
L9397
L9398
L9399
L9400
L9401
L9402
L9403
L9404
L9405
L9406
L9407
L9408
L9409
L9410
L9411
L9412
L9413
L9414
L9415
L9416
L9417
L9418
L9419
L9420
L9421
L9422
L9423
L9424
L9425
L9426
L9427
L9428
L9429
L9430
L9431
L9432
L9433
L9434
L9435
L9436
L9437
L9438
L9439
L9440
L9441
L9442
L9443
L9444
L9445
L9446
L9447
L9448
L9449
L9450
L9451
L9452
L9453
L9454
L9455
L9456
L9457
L9458
L9459
L9460
L9461
L9462
L9463
L9464
L9465
L9466
L9467
L9468
L9469
L9470
L9471
L9472
L9473
L9474
L9475
L9476
L9477
L9478
L9479
L9480
L9481
L9482
L9483
L9484
L9485
L9486
L9487
L9488
L9489
L9490
L9491
L9492
L9493
L9494
L9495
L9496
L9497
L9498
L9499
L9500
L9501
L9502
L9503
L9504
L9505
L9506
L9507
L9508
L9509
L9510
L9511
L9512
L9513
L9514
L9515
L9516
L9517
L9518
L9519
L9520
L9521
L9522
L9523
L9524
L9525
L9526
L9527
L9528
L9529
L9530
L9531
L9532
L9533
L9534
L9535
L9536
L9537
L9538
L9539
L9540
L9541
L9542
L9543
L9544
L9545
L9546
L9547
L9548
L9549
L9550
L9551
L9552
L9553
L9554
L9555
L9556
L9557
L9558
L9559
L9560
L9561
L9562
L9563
L9564
L9565
L9566
L9567
L9568
L9569
L9570
L9571
L9572
L9573
L9574
L9575
L9576
L9577
L9578
L9579
L9580
L9581
L9582
L9583
L9584
L9585
L9586
L9587
L9588
L9589
L9590
L9591
L9592
L9593
L9594
L9595
L9596
L9597
L9598
L9599
L9600
L9601
L9602
L9603
L9604
L9605
L9606
L9607
L9608
L9609
L9610
L9611
L9612
L9613
L9614
L9615
L9616
L9617
L9618
L9619
L9620
L9621
L9622
L9623
L9624
L9625
L9626
L9627
L9628
L9629
L9630
L9631
L9632
L9633
L9634
L9635
L9636
L9637
L9638
L9639
L9640
L9641
L9642
L9643
L9644
L9645
L9646
L9647
L9648
L9649
L9650
L9651
L9652
L9653
L9654
L9655
L9656
L9657
L9658
L9659
L9660
L9661
L9662
L9663
L9664
L9665
L9666
L9667
L9668
L9669
L9670
L9671
L9672
L9673
L9674
L9675
L9676
L9677
L9678
L9679
L9680
L9681
L9682
L9683
L9684
L9685
L9686
L9687
L9688
L9689
L9690
L9691
L9692
L9693
L9694
L9695
L9696
L9697
L9698
L9699
L9700
L9701
L9702
L9703
L9704
L9705
L9706
L9707
L9708
L9709
L9710
L9711
L9712
L9713
L9714
L9715
L9716
L9717
L9718
L9719
L9720
L9721
L9722
L9723
L9724
L9725
L9726
L9727
L9728
L9729
L9730
L9731
L9732
L9733
L9734
L9735
L9736
L9737
L9738
L9739
L9740
L9741
L9742
L9743
L9744
L9745
L9746
L9747
L9748
L9749
L9750
L9751
L9752
L9753
L9754
L9755
L9756
L9757
L9758
L9759
L9760
L9761
L9762
L9763
L9764
L9765
L9766
L9767
L9768
L9769
L9770
L9771
L9772
L9773
L9774
L9775
L9776
L9777
L9778
L9779
L9780
L9781
L9782
L9783
L9784
L9785
L9786
L9787
L9788
L9789
L9790
L9791
L9792
L9793
L9794
L9795
L9796
L9797
L9798
L9799
L9800
L9801
L9802
L9803
L9804
L9805
L9806
L9807
L9808
L9809
L9810
L9811
L9812
L9813
L9814
L9815
L9816
L9817
L9818
L9819
L9820
L9821
L9822
L9823
L9824
L9825
L9826
L9827
L9828
L9829
L9830
L9831
L9832
L9833
L9834
L9835
L9836
L9837
L9838
L9839
L9840
L9841
L9842
L9843
L9844
L9845
L9846
L9847
L9848
L9849
L9850
L9851
L9852
L9853
L9854
L9855
L9856
L9857
L9858
L9859
L9860
L9861
L9862
L9863
L9864
L9865
L9866
L9867
L9868
L9869
L9870
L9871
L9872
L9873
L9874
L9875
L9876
L9877
L9878
L9879
L9880
L9881
L9882
L9883
L9884
L9885
L9886
L9887
L9888
L9889
L9890
L9891
L9892
L9893
L9894
L9895
L9896
L9897
L9898
L9899
L9900
L9901
L9902
L9903
L9904
L9905
L9906
L9907
L9908
L9909
L9910
L9911
L9912
L9913
L9914
L9915
L9916
L9917
L9918
L9919
L9920
L9921
L9922
L9923
L9924
L9925
L9926
L9927
L9928
L9929
L9930
L9931
L9932
L9933
L9934
L9935
L9936
L9937
L9938
L9939
L9940
L9941
L9942
L9943
L9944
L9945
L9946
L9947
L9948
L9949
L9950
L9951
L9952
L9953
L9954
L9955
L9956
L9957
L9958
L9959
L9960
L9961
L9962
L9963
L9964
L9965
L9966
L9967
L9968
L9969
L9970
L9971
L9972
L9973
L9974
L9975
L9976
L9977
L9978
L9979
L9980
L9981
L9982
L9983
L9984
L9985
L9986
L9987
L9988
L9989
L9990
L9991
L9992
L9993
L9994
L9995
L9996
L9997
L9998
L9999
L10000

SUB Unit (Wiring Side)

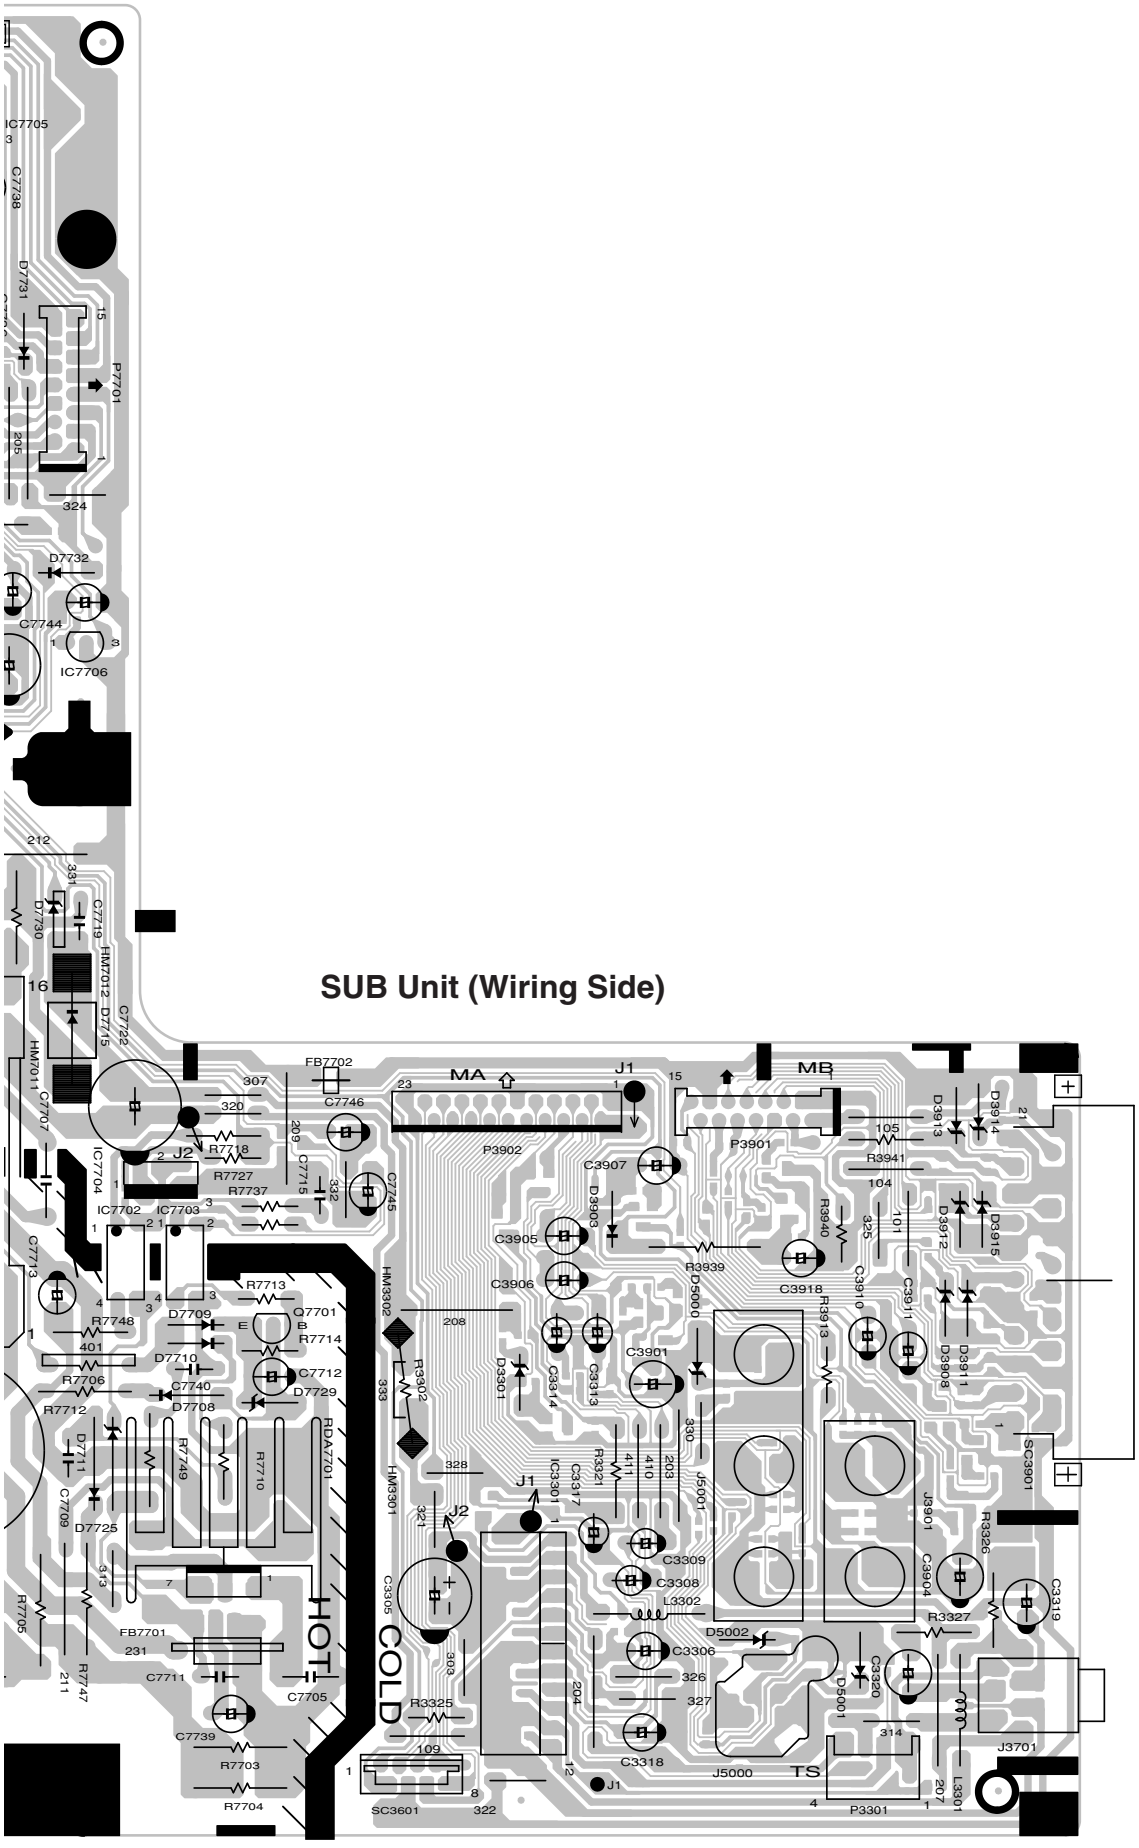

10	11	12	13	14	15	16	17	18	19

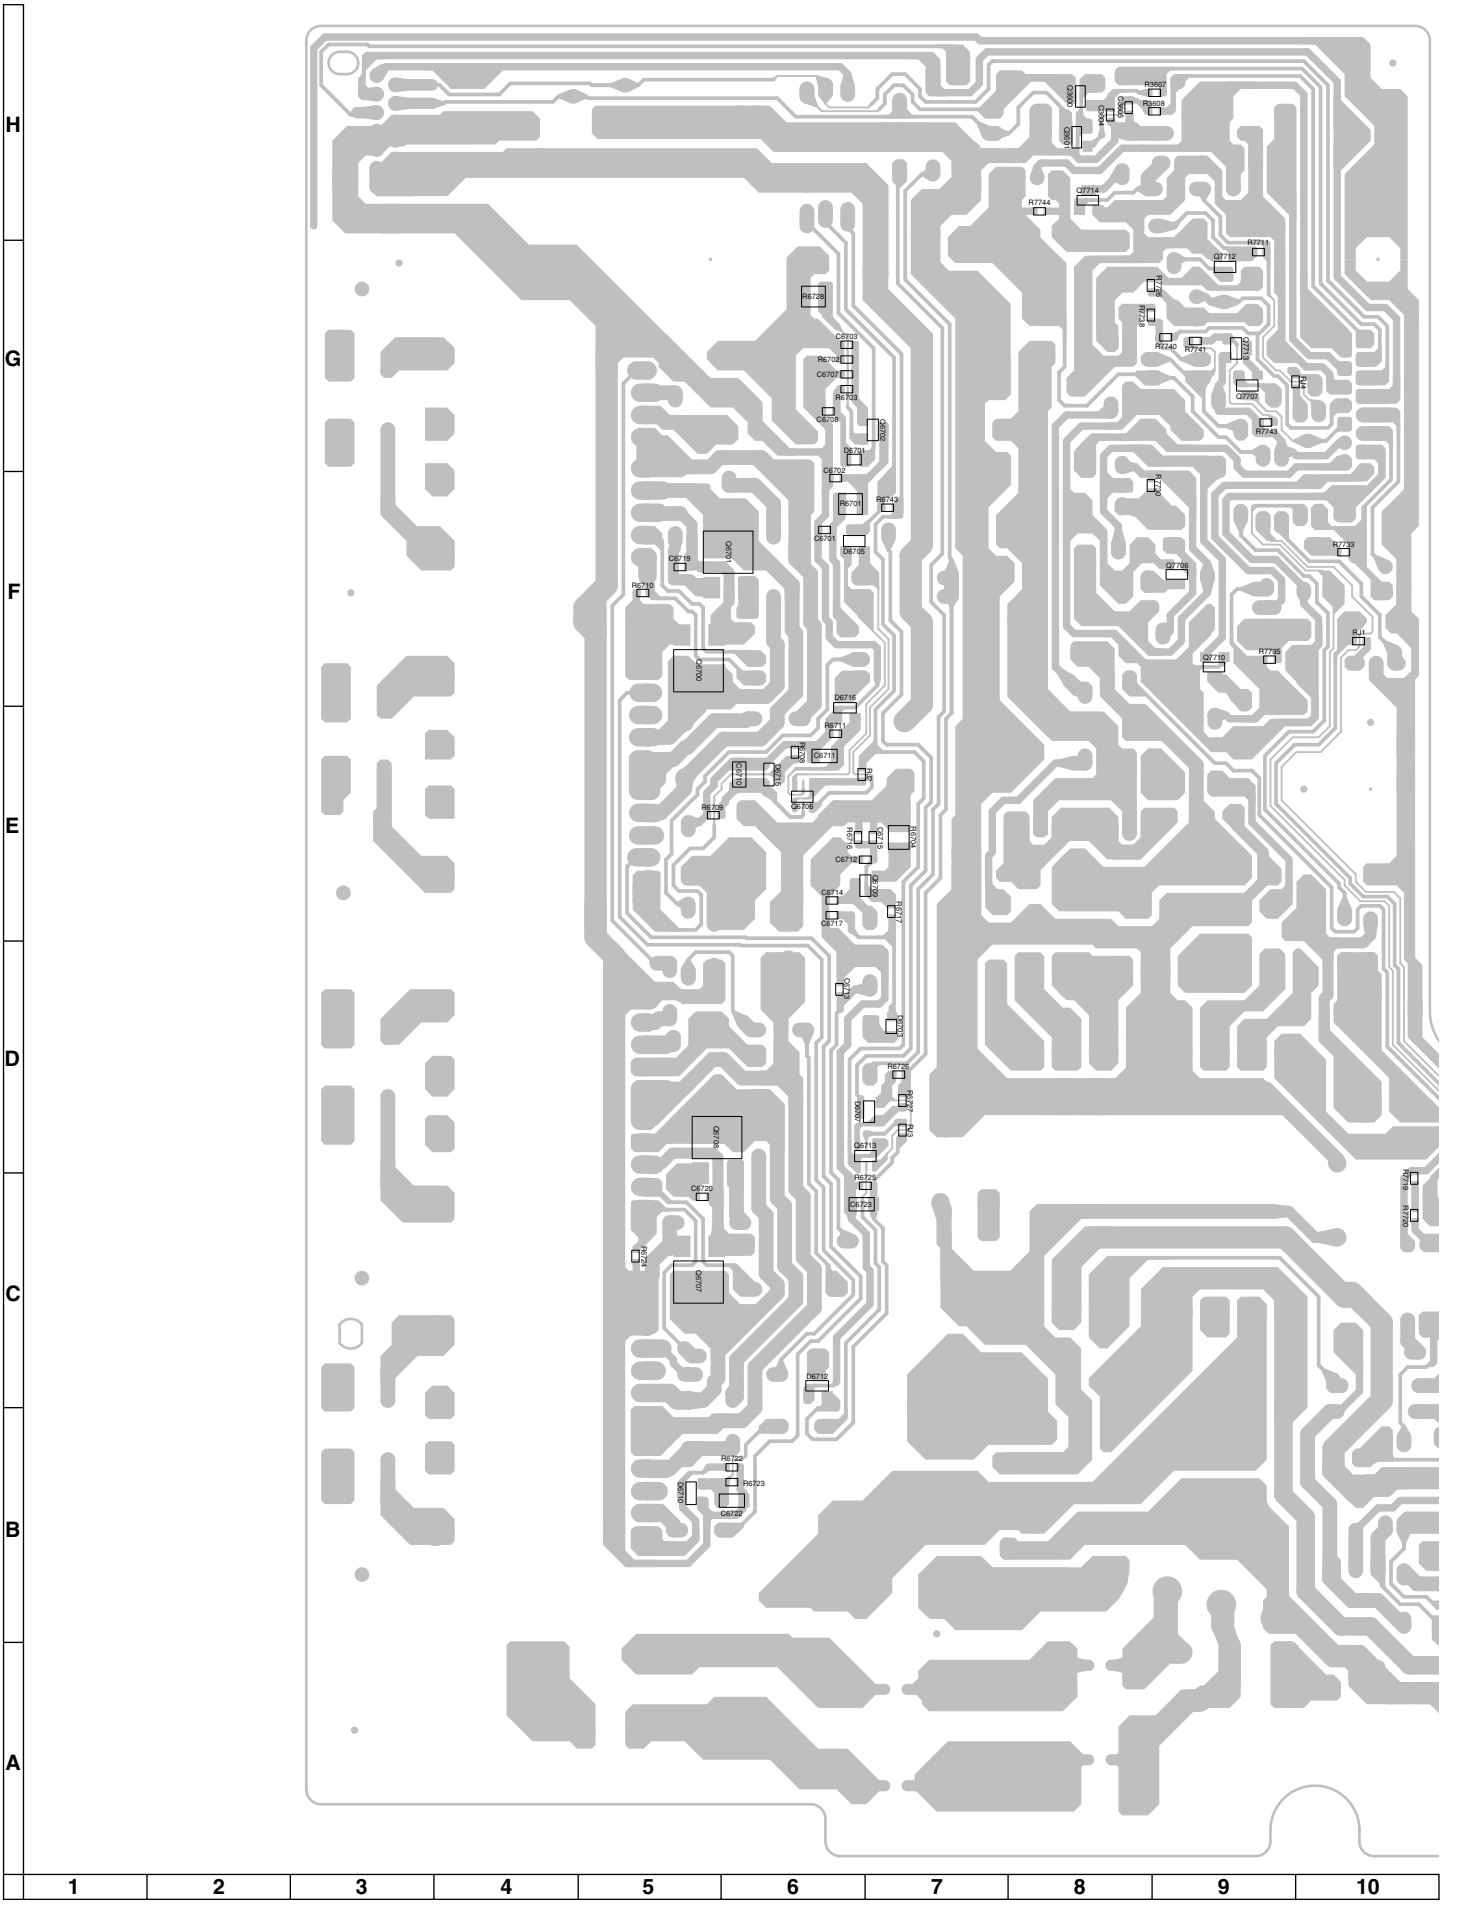
H
G
F
E
D
C
B
A
1
2
3
4
5
6
7
8
9
10

SUB Unit (Chip Parts Side)

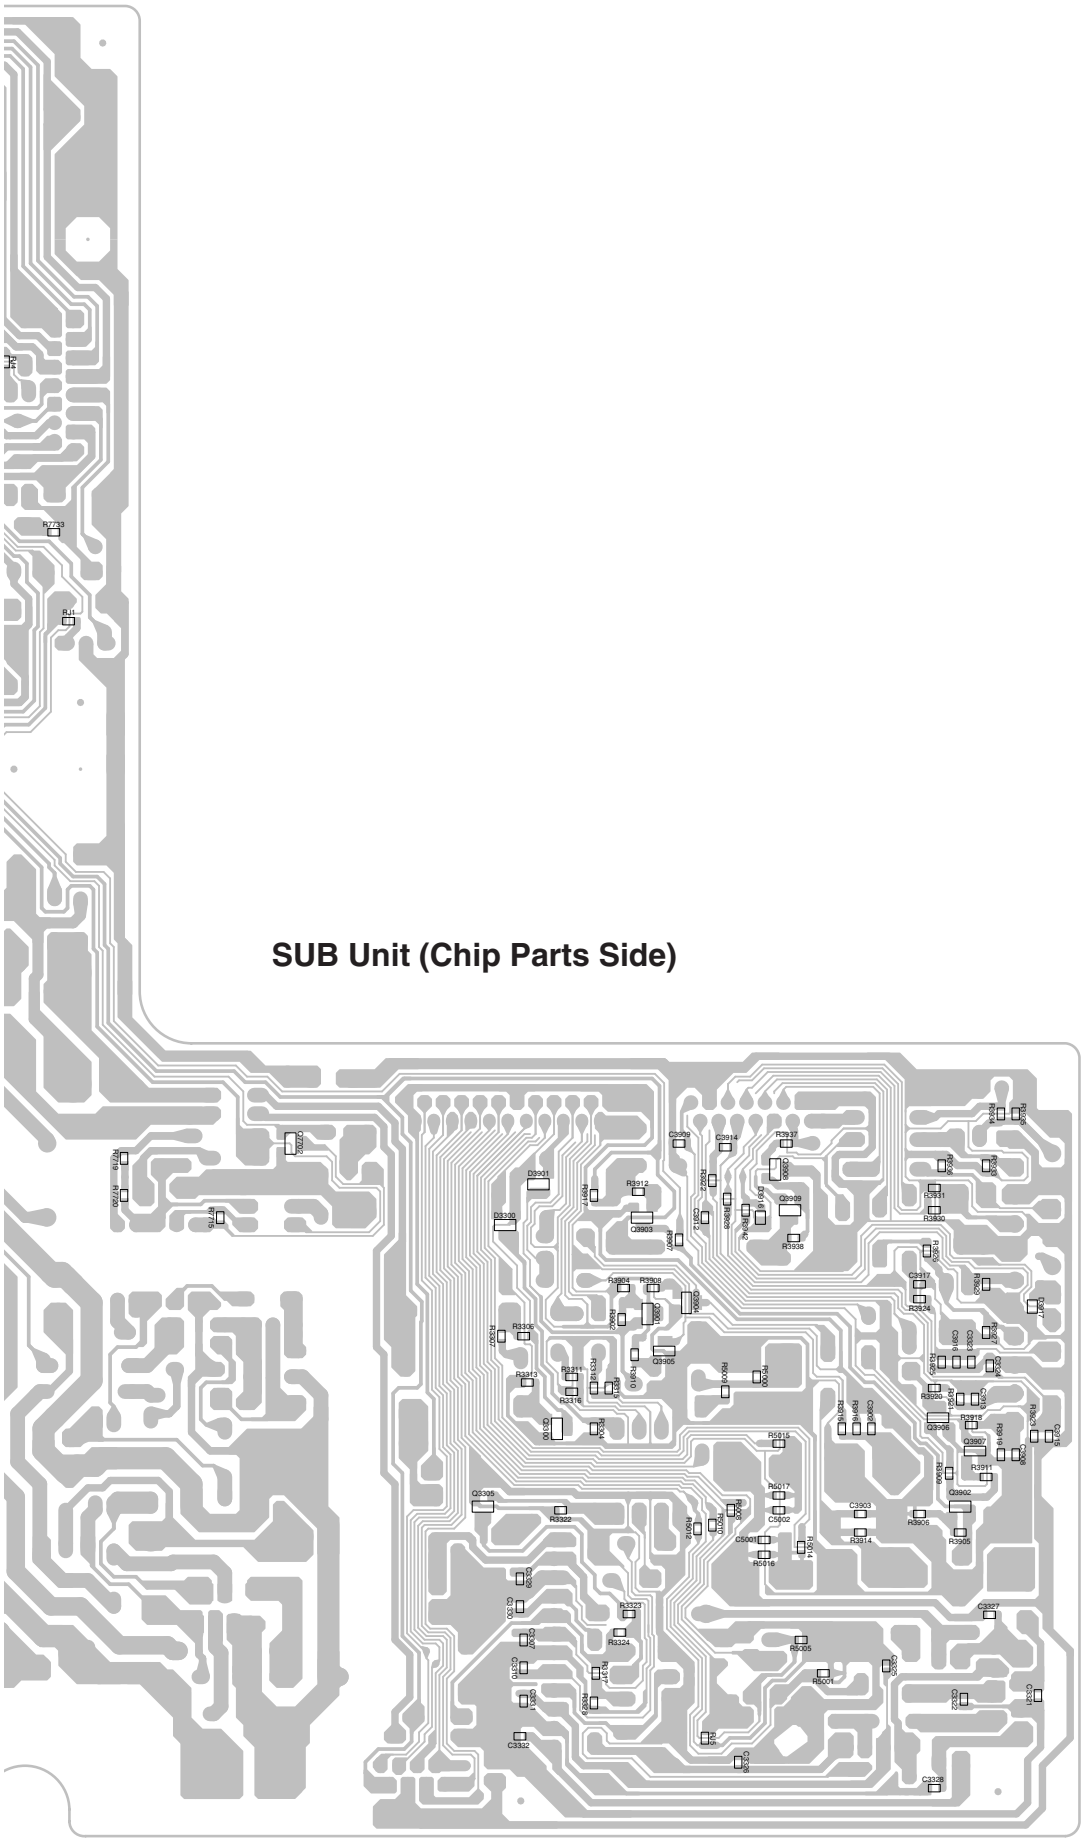

10	11	12	13	14	15	16	17	18	19

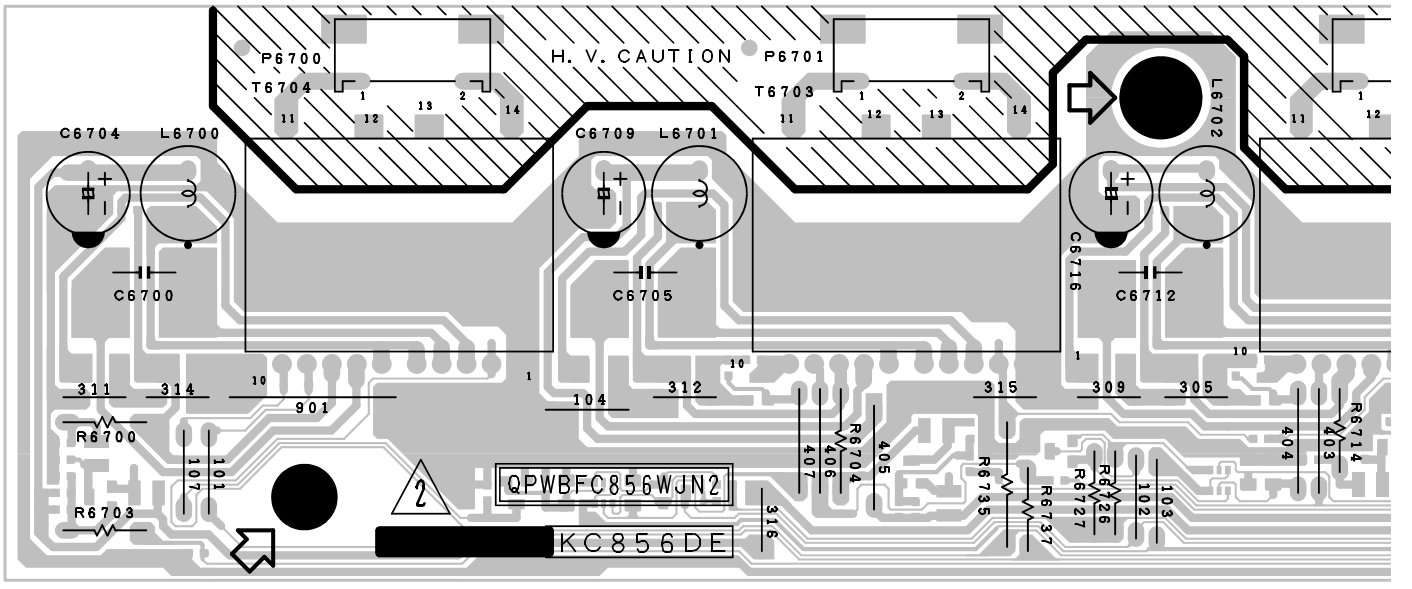

INVERTER Unit (Wiring Side)

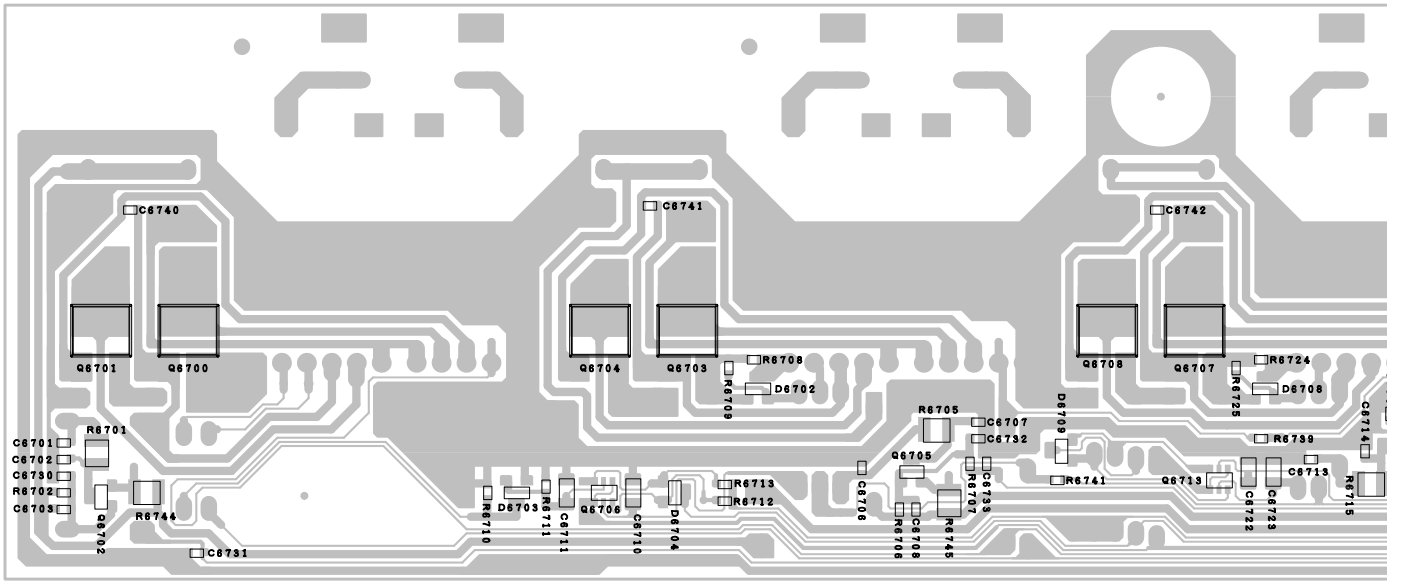

INVERTER Unit (Chip Parts Side)

1	2	3	4	5	6	7	8	9	10

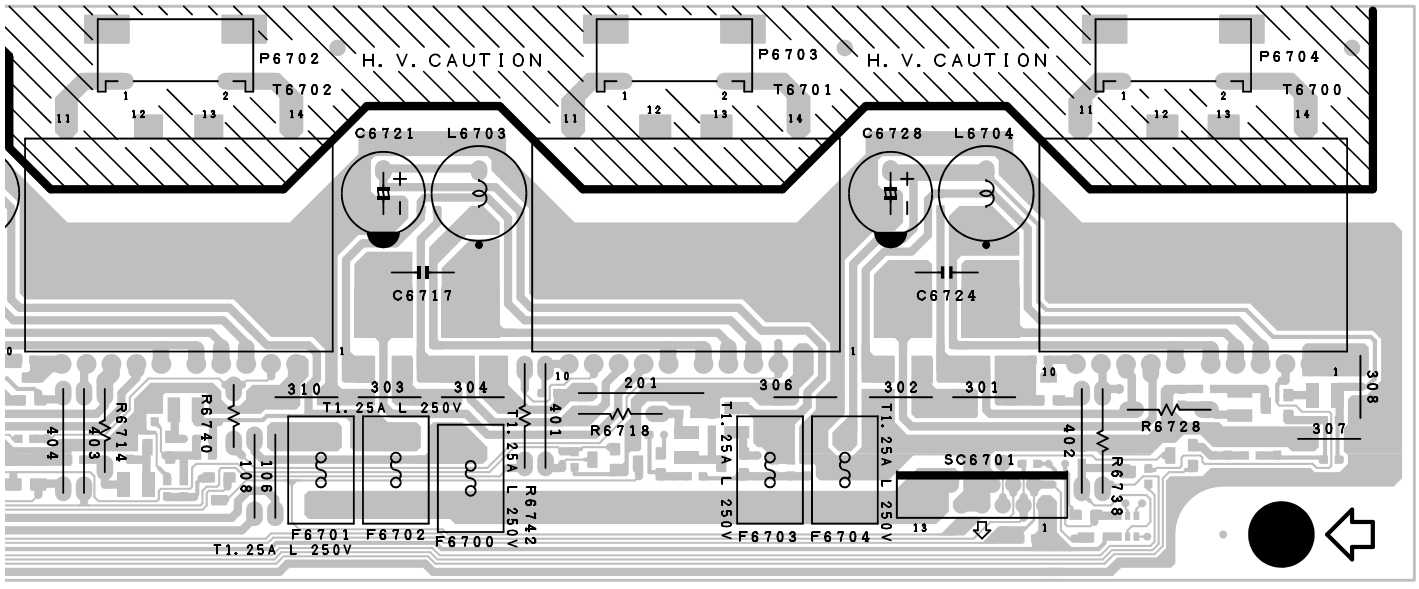

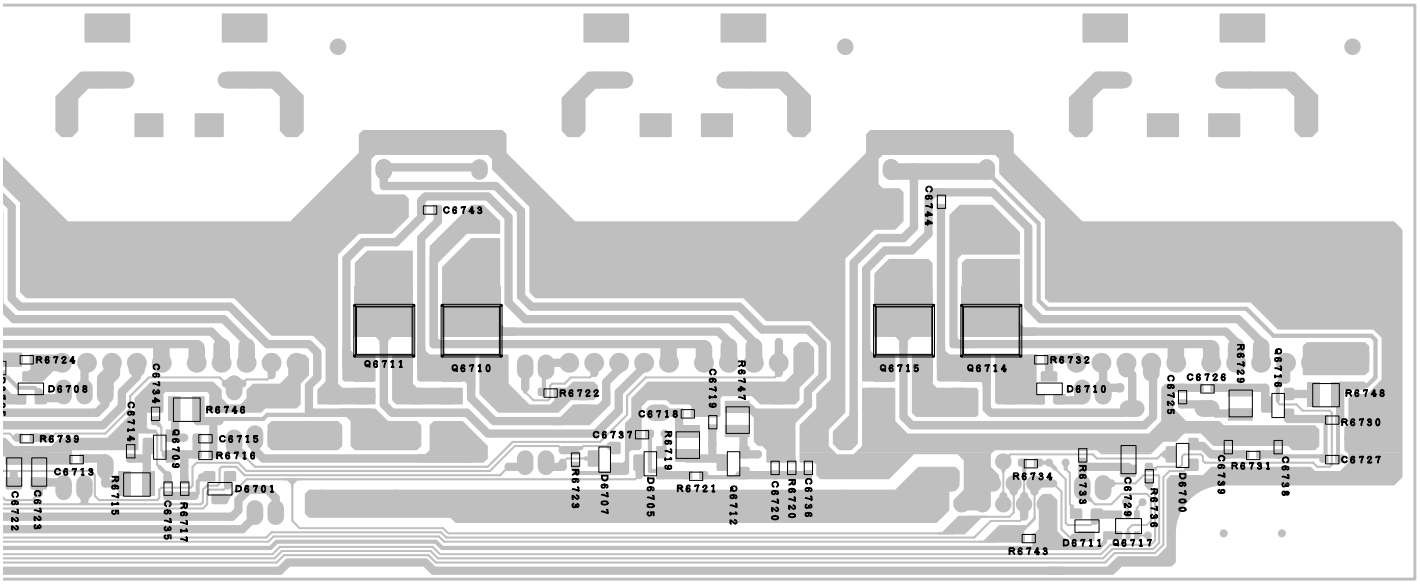

10	11	12	13	14	15	16	17	18	19

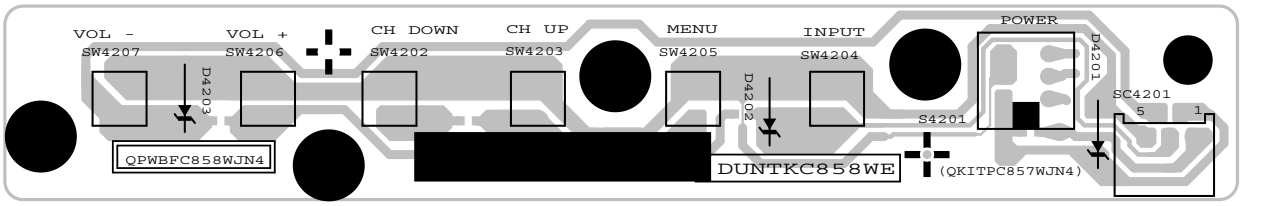

OPERATION Unit (Wiring Side)

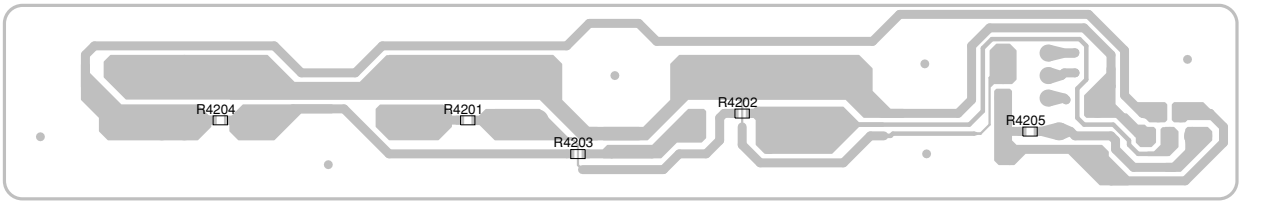

OPERATION Unit (Chip Parts Side)

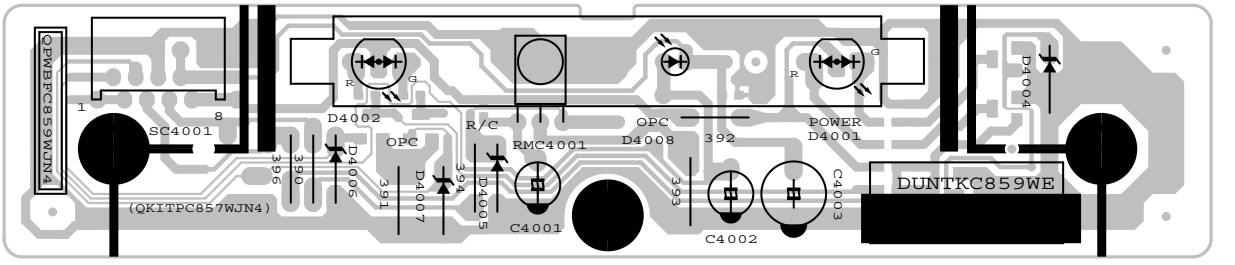

R/C, LED Unit (Wiring Side)

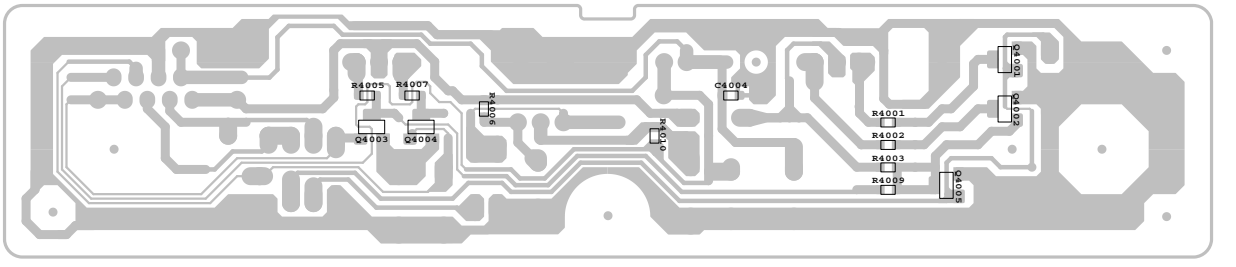

R/C, LED Unit (Chip Parts Side)

1	2	3	4	5	6

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by ⚠ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does no have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

★ MARK: SPARE PARTS-DELIVERY SECTION

Ref. No.	Part No.	★	Description	Code

PRINTED WIRING BOARD ASSEMBLIES
(NOT REPLACEMENT ITEM)

DUNTKC856FM01	–	INVERTER Unit	—
DUNTKC857WE04	–	SUB Unit	—
DUNTKC858WE04	–	OPERATION Unit	—
DUNTKC859WE04	–	R/C, LED Unit	—
DUNTKC860FM03	–	MAIN Unit	—

LCD PANEL

NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY.

RLCDTA025WJZZ	J	20" LCD Panel Unit	DB

DUNTKC856FM01
INVERTER UNIT

TRANSISTORS

Q6700	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6701	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6702	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q6703	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6704	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6705	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q6706	VSUPA606T//-1Y	J	UPA606T	AD
Q6707	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6708	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6709	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q6710	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6711	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6712	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q6713	VSUPA606T//-1Y	J	UPA606T	AD
Q6714	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6715	VS2SC5886A+-1Y	J	2SC5886A	AD
Q6716	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q6717	VSUPA606T//-1Y	J	UPA606T	AD

DIODES

D6700	VHDDAN202K/-1Y	J	Diode	AB
D6701	VHDDAN202K/-1Y	J	Diode	AB
D6702	VHDMA157A//-1Y	J	Diode	AC
D6703	VHDMA157A//-1Y	J	Diode	AC
D6704	VHDDAN202K/-1Y	J	Diode	AB
D6705	VHDDAN202K/-1Y	J	Diode	AB
D6707	VHDMA157A//-1Y	J	Diode	AC
D6708	VHDMA157A//-1Y	J	Diode	AC
D6709	VHDDAN202K/-1Y	J	Diode	AB
D6710	VHDMA157A//-1Y	J	Diode	AC
D6711	VHDDAN202K/-1Y	J	Diode	AB

COILS

L6700	RCiLPA373WJZZ	J	Coil	AC
L6701	RCiLPA373WJZZ	J	Coil	AC
L6702	RCiLPA373WJZZ	J	Coil	AC
L6703	RCiLPA373WJZZ	J	Coil	AC
L6704	RCiLPA373WJZZ	J	Coil	AC

TRANSFORMERS

T6700	RTRNZA075WJZZ	S	Transformer
T6701	RTRNZA075WJZZ	S	Transformer
T6702	RTRNZA075WJZZ	S	Transformer
T6703	RTRNZA075WJZZ	S	Transformer
T6704	RTRNZA075WJZZ	S	Transformer

CAPACITORS

C6700	RC-FZA116WJZZ	S	0.27	250V	Film	
C6703	VCKYCY1CB683KY	J	0.068	16V	Ceramic	AC
C6704	RC-EZA465WJZZ	J	1000	16V	Electrolytic	AE
C6705	RC-FZA116WJZZ	S	0.27	250V	Film	
C6708	VCKYCY1CB683KY	J	0.068	16V	Ceramic	AC
C6709	RC-EZA465WJZZ	J	1000	16V	Electrolytic	AE
C6710	RC-KZ0072TAZZY	J	1	25V	Ceramic	AC
C6711	RC-KZ0072TAZZY	J	1	25V	Ceramic	AC
C6712	RC-FZA116WJZZ	S	0.27	250V	Film	
C6715	VCKYCY1CB683KY	J	0.068	16V	Ceramic	AC
C6716	RC-EZA465WJZZ	J	1000	16V	Electrolytic	AE
C6717	RC-FZA116WJZZ	J	0.27	250V	Film	
C6720	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C6721	RC-EZA465WJZZ	J	1000	16V	Electrolytic	AE
C6722	RC-KZ0072TAZZY	J	1	25V	Ceramic	AC
C6723	RC-KZ0072TAZZY	J	1	25V	Ceramic	AC
C6724	RC-FZA116WJZZ	S	0.27	250V	Film	
C6727	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C6728	RC-EZA465WJZZ	J	1000	16V	Electrolytic	AE
C6729	RC-KZ0072TAZZY	J	1	25V	Ceramic	AC

RESISTORS

R6700	VRD-RA2EE182JY	J	1.8k	1/4W	Carbon	AA
R6701	VRS-TW2ED122JY	J	1.2k	1/4W	Metal Oxide	AA
R6702	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R6703	VRD-RA2BE333JY	J	33k	1/8W	Carbon	AA
R6704	VRD-RA2EE182JY	J	1.8k	1/4W	Carbon	AA
R6705	VRS-TW2ED122JY	J	1.2k	1/4W	Metal Oxide	AA
R6706	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R6707	VRS-CY1JF333JY	J	33k	1/16W	Metal Oxide	AA
R6708	VRS-CY1JF471JY	J	470	1/16W	Metal Oxide	AA
R6709	VRS-CY1JF824JY	J	820k	1/16W	Metal Oxide	AA
R6710	VRS-CY1JF471JY	J	470	1/16W	Metal Oxide	AA
R6711	VRS-CY1JF824JY	J	820k	1/16W	Metal Oxide	AA
R6712	VRS-CY1JF562JY	J	5.6k	1/16W	Metal Oxide	AA
R6713	VRS-CY1JF562JY	J	5.6k	1/16W	Metal Oxide	AA
R6714	VRD-RA2EE182JY	J	1.8k	1/4W	Carbon	AA
R6715	VRS-TW2ED122JY	J	1.2k	1/4W	Metal Oxide	AA
R6716	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R6717	VRS-CY1JF333JY	J	33k	1/16W	Metal Oxide	AA
R6718	VRD-RA2EE182JY	J	1.8k	1/4W	Carbon	AA
R6719	VRS-TW2ED122JY	J	1.2k	1/4W	Metal Oxide	AA
R6720	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R6721	VRS-CY1JF333JY	J	33k	1/16W	Metal Oxide	AA
R6722	VRS-CY1JF471JY	J	470	1/16W	Metal Oxide	AA
R6723	VRS-CY1JF824JY	J	820k	1/16W	Metal Oxide	AA
R6724	VRS-CY1JF471JY	J	470	1/16W	Metal Oxide	AA
R6725	VRS-CY1JF824JY	J	820k	1/16W	Metal Oxide	AA
R6726	VRD-RA2BE562JY	J	5.6k	1/8W	Carbon	AA
R6727	VRD-RA2BE562JY	J	5.6k	1/8W	Carbon	AA

Ref. No.	Part No.	★	Description	Code

DUNTKC856FM01
INVERTER UNIT (Continued)

R6728	VRD-RA2EE182JY	J	1.8k	1/4W	Carbon	AA
R6729	VRS-TW2ED122JY	J	1.2k	1/4W	Metal Oxide	AA
R6730	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R6731	VRS-CY1JF333JY	J	33k	1/16W	Metal Oxide	AA
R6732	VRS-CY1JF471JY	J	470	1/16W	Metal Oxide	AA
R6733	VRS-CY1JF824JY	J	820k	1/16W	Metal Oxide	AA
R6734	VRS-CY1JF562JY	J	5.6k	1/16W	Metal Oxide	AA
R6743	VRS-CY1JF563JY	J	56k	1/16W	Metal Oxide	AA
R6744	VRS-TW2ED561JY	J	560	1/4W	Metal Oxide	AA
R6745	VRS-TW2ED561JY	J	560	1/4W	Metal Oxide	AA
R6746	VRS-TW2ED561JY	J	560	1/4W	Metal Oxide	AA
R6747	VRS-TW2ED561JY	J	560	1/4W	Metal Oxide	AA
R6748	VRS-TW2ED561JY	J	560	1/4W	Metal Oxide	AA

MISCELLANEOUS PARTS

⚠ F6700	QFS-ZA002WJZZ	J	Fuse, 1.25A/250V		AD
⚠ F6701	QFS-ZA002WJZZ	J	Fuse, 1.25A/250V		AD
⚠ F6702	QFS-ZA002WJZZ	J	Fuse, 1.25A/250V		AD
⚠ F6703	QFS-ZA002WJZZ	J	Fuse, 1.25A/250V		AD
⚠ F6704	QFS-ZA002WJZZ	J	Fuse, 1.25A/250V		AD
P6700	QPLGNA391WJZZ	J	Plug, 2-pin		AD
P6701	QPLGNA391WJZZ	J	Plug, 2-pin		AD
P6702	QPLGNA391WJZZ	J	Plug, 2-pin		AD
P6703	QPLGNA391WJZZ	J	Plug, 2-pin		AD
P6704	QPLGNA391WJZZ	J	Plug, 2-pin		AD
SC6701	QSOCZ1338CEZZ	J	Socket, 13-pin		AD

Ref. No.	Part No.	★	Description	Code

DUNTKC857WE04
SUB UNIT

INTEGRATED CIRCUITS

IC3301	VHiAN17821A-1	J	AN17821A	AH
IC7701	VHiSTRW67652E	J	I.C.	AL
⚠ IC7702	RH-FXA003WJZZ	J	PC123Y82	AD
⚠ IC7703	RH-FXA003WJZZ	J	PC123Y82	AD
IC7704	VHiSE005N++-F	S	I.C.	AF
IC7705	VHiKA7809AP-1	J	KIA7809API	AE
IC7706	VHiPQ050ES1-1+	J	PQ050ES1MXP	AE

TRANSISTORS

Q3305	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q3600	VSKRC102S//-1Y	J	KRC102S	AA
Q3601	VSKRC102S//-1Y	J	KRC102S	AA
Q3901	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q3902	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q3903	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q3904	VS2SD1306-E-1Y	J	2SD1306-E	AC
Q3905	VS2SD1306-E-1Y	J	2SD1306-E	AC
Q3906	VS2SD1306-E-1Y	J	2SD1306-E	AC
Q3907	VS2SD1306-E-1Y	J	2SD1306-E	AC
Q3908	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q3909	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q7701	VS2SA1013//1E+	J	2SA1013	AD
Q7702	VSKRC104S//-1Y	J	KRC104S	AA
Q7703	VS2SB1443TV1E+	J	2SB1443TV	AE
Q7704	VS2SB1443TV1E+	J	2SB1443TV	AE
Q7706	VSKRC101S//-1Y	S	KRC101S	AA
Q7707	VSKRC104S//-1Y	J	KRC104S	AA
Q7708	VS2SC2235Y/1E+	J	2SC2235Y	AE
Q7710	VSKRA102S//-1Y	J	KRA102S	AA
Q7711	VS2SB1443TV1E+	J	2SB1443TV	AE
Q7712	VSKRC104S//-1Y	J	KRC104S	AA
Q7713	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q7714	VSKRC102S//-1Y	J	KRA102S	AA

DIODES

D3300	VHDDAN202K/-1Y	J	Diode	AB
D3604	RH-EX0652GEZZY	J	Zener Diode, 18V	AB
D3605	RH-EX0652GEZZY	J	Zener Diode, 18V	AB
D3901	VHDDAN202K/-1Y	J	Diode	AB
D3903	VHD1SS119//-1Y	J	Diode	AA
D3908	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D3911	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D3912	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D3913	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D3914	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D3915	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D3916	RH-EX0612GEZZY	J	Zener Diode	AB
D3917	RH-EX1244CEZZY	J	Zener Diode	AB
D5000	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D5001	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D5002	RH-EX0630GEZZY	J	Zener Diode, 9.1V	AA
D7701	RH-DX0476CEZZ	J	Diode	AG
D7703	VHDSF30JC6+1E	S	Diode	AG
D7705	RH-DX0490CEZZY	J	Diode	AC
D7706	RH-DX0490CEZZY	J	Diode	AC
D7707	RH-DX0321CEZZY	J	Diode	AC
D7708	RH-DX0066GEZZY	J	Diode	AC
D7709	VHD1SS244//-1Y	J	Diode	AB
D7710	VHD1SS244//-1Y	J	Diode	AB
D7711	VHD1SS244//-1Y	J	Diode	AB
D7713	VHDSF30JC6+1E	S	Diode	AG
D7714	RH-DXA059WJZZ	S	Diode	AD
D7715	RH-DX0461CEZZ	J	Diode	AG
D7716	VHD10ELS4//-1Y	J	Diode	AD
D7717	VHD10ELS4//-1Y	J	Diode	AD
D7718	RH-DXA059WJZZ	S	Diode	AD
D7721	VHD1SS119//-1Y	J	Diode	AA
D7722	VHD1SS119//-1Y	J	Diode	AA
D7723	VHD1SS119//-1Y	J	Diode	AA
D7725	RH-EX0618GEZZY	J	Zener Diode, 6.2V	AB

DUNTKC857WE04
SUB UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
D7729	RH-EX0640GEZZY	J	Zener Diode	AA
D7731	VHD1SS119//-1Y	J	Diode	AA
D7732	VHD1SS119//-1Y	J	Diode	AA
⚠ VA7701	RH-VXA022WJZZ	J	Varistor	AD

COILS

Ref. No.	Part No.	★	Description	Code
L3301	VP-CF3R3K0000Y	J	Peaking 3.3µH	AC
L3302	VP-CF3R3K0000Y	J	Peaking 3.3µH	AC
⚠ L7701	RCiLFA161WJZZ	S	Coil	AD
⚠ L7702	RCiLFA162WJZZ	S	Coil	AD
L7703	RCiLP0175CEZZ+	J	Coil	AD
L7704	RCiLPA308WJZZ	S	Coil	AD

TRANSFORMER

Ref. No.	Part No.	★	Description	Code
⚠ T7701	RTRNWA152WJZZ	S	Transformer	AL

CAPACITORS

Ref. No.	Part No.	★				Code
C3305	VCEA0A1CW108M+	J	1000	16V	Electrolytic	AD
C3306	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C3307	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C3308	VCEAEA1HW105M+	J	1	50V	Electrolytic	AB
C3309	VCEAEA1HW105M+	J	1	50V	Electrolytic	AB
C3310	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C3313	VCEAEA1HW225M+	J	2.2	50V	Electrolytic	AB
C3314	VCEAEA1HW225M+	J	2.2	50V	Electrolytic	AB
C3317	VCEAEA1HW225M+	J	2.2	50V	Electrolytic	AB
C3318	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C3319	VCEAEA1CW476M+	J	47	16V	Electrolytic	AB
C3320	VCEAEA1CW476M+	J	47	16V	Electrolytic	AB
C3321	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C3322	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C3323	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C3324	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C3325	VCKYCY1CF104ZY	J	0.1	16V	Ceramic	AA
C3326	VCKYCY1CF104ZY	J	0.1	16V	Ceramic	AA
C3327	VCCCCY1HH221JY	J	220p	50V	Ceramic	AA
C3328	VCCCCY1HH221JY	J	220p	50V	Ceramic	AA
C3604	VCKYCY1HB332KY	J	3300p	50V	Ceramic	AA
C3605	VCKYCY1HB332KY	J	3300p	50V	Ceramic	AA
C3901	VCEAEA0JW107M+	J	100	6.3V	Electrolytic	AB
C3902	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C3903	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C3904	VCEAEA1CW476M+	J	47	16V	Electrolytic	AB
C3905	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C3906	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C3907	VCEAEA0JW476M+	J	47	6.3V	Electrolytic	AB
C3908	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C3909	VCCCCY1HH331JY	J	330p	50V	Ceramic	AA
C3910	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C3911	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C3912	VCCCCY1HH331JY	J	330p	50V	Ceramic	AA
C3913	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C3914	VCCCCY1HH221JY	J	220p	50V	Ceramic	AA
C3915	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C3916	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C3917	VCCCCY1HH221JY	J	220p	50V	Ceramic	AA
C3918	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C5001	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C5002	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
⚠ C7701	RC-FZA022WJZZ	J	0.22	275V	Film	AD
⚠ C7702	RC-FZA022WJZZ	J	0.22	275V	Film	AD
C7703	RC-EZA556WJZZ	J	150	400V	Electrolytic	AN
C7704	RC-FZA180WJZZ	S	0.1	580V	Film	AC
C7705	RC-KZA305WJZZ	S	560p	2kV	Ceramic	AB
⚠ C7706	RC-KZ0105GEZZ	J	2200p	250V	Ceramic	AD
⚠ C7707	RC-KZ0103GEZZ	J	1000p	250V	Ceramic	AD
C7708	VCEA4A1CN226M+	S	22	16V	Electrolytic	AB
C7709	VCQYTA1HM152J+	J	1500p	50V	Mylar	AA
C7711	VCKYPA1HB471K+	J	470p	50V	Ceramic	AA
C7712	VCEA4A1VN476M+	S	47	35V	Electrolytic	AB
C7713	VCEA4A1VN106M+	S	10	35V	Electrolytic	AB
C7715	VCQYTA1HM104J+	J	0.1	50V	Mylar	AB
C7720	RC-EZA155WJZZ	J	2200	10V	Electrolytic	AE
C7721	RC-EZA168WJZZ+	S	220	25V	Electrolytic	AB
C7722	RC-EZA172WJZZ	J	1000	25V	Electrolytic	AE
C7723	RC-EZA184WJZZ+	J	100	50V	Electrolytic	AD
C7724	VCEA4A1AN108M	J	1000	10V	Electrolytic	AD
C7725	RC-EZA173WJZZ	J	1500	25V	Electrolytic	AF
C7727	RC-EZA173WJZZ	J	1500	25V	Electrolytic	AF
C7728	RC-EZA153WJZZ+	J	470	10V	Electrolytic	AD
C7729	RC-EZA172WJZZ	J	1000	25V	Electrolytic	AE
C7731	VCEA4A1CN226M+	S	22	16V	Electrolytic	AB
C7732	VCEA4A1AN227M+	J	220	10V	Electrolytic	AC
C7733	VCEA4A1CN226M+	S	22	16V	Electrolytic	AB
C7736	VCEA0A1HW227M+	J	220	50V	Electrolytic	AB
C7737	VCEA4A1CN107M+	J	100	16V	Electrolytic	AB
C7738	VCEA4A1CN107M+	J	100	16V	Electrolytic	AB
C7739	VCEA4A1HN225M+	J	2.2	50V	Electrolytic	AC
C7740	VCQYTA1HM104J+	J	0.1	50V	Mylar	AB
C7741	VCEA0A1EW227M+	J	220	25V	Electrolytic	AB
C7742	VCEA0A1AW227M+	J	220	10V	Electrolytic	AB
C7743	VCEA4A1CN106M+	J	10	16V	Electrolytic	AC
C7744	VCEA4A1CN106M+	J	10	16V	Electrolytic	AC
C7747	RC-EZA173WJZZ	J	1500	25V	Electrolytic	AF

RESISTORS

Ref. No.	Part No.	★				Code
RJ1	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
RJ2	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
RJ3	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
RJ5	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R3302	VRN-VV3DB1R0J	J	1	2W	Metal Film	AB
R3304	VRS-CY1JF153JY	J	15k	1/16W	Metal Oxide	AA
R3311	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3312	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3315	VRS-CY1JF681JY	J	680	1/16W	Metal Oxide	AA
R3316	VRS-CY1JF681JY	J	680	1/16W	Metal Oxide	AA
R3317	VRS-CY1JF124JY	J	120k	1/16W	Metal Oxide	AA
R3321	VRD-RA2BE272JY	J	2.7k	1/8W	Carbon	AA
R3322	VRS-CY1JF473JY	J	47k	1/16W	Metal Oxide	AA
R3323	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R3324	VRS-CY1JF124JY	J	120k	1/16W	Metal Oxide	AA
R3325	VRD-RA2BE683JY	J	68k	1/8W	Carbon	AA
R3326	VRD-RM2HD151JY	J	150	1/2W	Carbon	AA
R3327	VRD-RM2HD151JY	J	150	1/2W	Carbon	AA
R3607	VRS-CY1JF153JY	J	15k	1/16W	Metal Oxide	AA
R3608	VRS-CY1JF153JY	J	15k	1/16W	Metal Oxide	AA
R3902	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA
R3904	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3905	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA
R3906	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3907	VRS-CY1JF472JY	J	4.7k	1/16W	Metal Oxide	AA
R3908	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3909	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3910	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3911	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R3912	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R3913	VRD-RA2BE271JY	J	270	1/8W	Carbon	AA
R3914	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA
R3915	VRS-CY1JF271JY	J	270	1/16W	Metal Oxide	AA
R3916	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA
R3917	VRS-CY1JF823JY	J	82k	1/16W	Metal Oxide	AA
R3918	VRS-CY1JF271JY	J	270	1/16W	Metal Oxide	AA
R3919	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA
R3920	VRS-CY1JF271JY	J	270	1/16W	Metal Oxide	AA
R3921	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA
R3922	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R3923	VRS-CY1JF473JY	J	47k	1/16W	Metal Oxide	AA
R3924	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R3925	VRS-CY1JF473JY	J	47k	1/16W	Metal Oxide	AA
R3926	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R3927	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R3928	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R3929	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R3930	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R3931	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R3933	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA

DUNTKC857WE04
SUB UNIT (Continued)

Ref. No.	Part No.	★	Description			Code
R3934	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R3935	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R3936	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R3937	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R3938	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R3939	VRD-RA2BE220JY	J	22	1/8W	Carbon	AA
R3940	VRD-RA2BE102JY	J	1k	1/8W	Carbon	AA
R3941	VRD-RA2BE750JY	J	75	1/8W	Carbon	AA
R3942	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R5000	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R5001	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R5005	VRS-CY1JF750JY	J	75	1/16W	Metal Oxide	AA
R5008	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R5009	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R5010	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R5012	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R5014	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R5015	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R5016	VRS-CY1JF473JY	J	47k	1/16W	Metal Oxide	AA
R5017	VRS-CY1JF473JY	J	47k	1/16W	Metal Oxide	AA
⚠ R7702	RR-HZ0014GEZZY	J	12M	1W	Coat-insulated fixed anti-surge	AE
R7703	VRN-VV3AB1R0J	J	1	1W	Metal Film	AA
R7704	VRN-VV3ABR82J	J	0.82	1W	Metal Film	AA
R7705	RR-DZA030WJZZ	S	330k	2W	Spesial Carbon Film	AB
R7706	VRD-RM2HD220JY	J	22	1/2W	Carbon	AA
R7707	RR-DZA033WJZZ	J	180k	3W	Spesial Carbon Film	AD
R7708	RR-DZA033WJZZ	J	180k	3W	Spesial Carbon Film	AD
R7709	VRW-KP3HC3R3K	J	3.3	5W	Cement	AC
R7710	VRD-RM2HD102JY	J	1k	1/2W	Carbon	AA
R7711	VRS-CY1JF222JY	J	2.2k	1/16W	Metal Oxide	AA
R7712	VRD-RM2HD220JY	J	22	1/2W	Carbon	AA
R7713	VRD-RA2BE562JY	J	5.6k	1/8W	Carbon	AA
R7714	VRD-RA2BE102JY	J	1k	1/8W	Carbon	AA
R7715	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R7716	VRN-VV3ABR22J	J	0.22	1W	Metal Film	AA
R7717	VRN-SV2HC1R0J	J	1	1/2W	Metal Film	AA
R7718	VRD-RM2HD221JY	J	220	1/2W	Carbon	AA
R7719	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R7720	VRS-CY1JF271JY	J	270	1/16W	Metal Oxide	AA
R7721	VRD-RA2BE102JY	J	1k	1/8W	Carbon	AA
R7722	VRN-SV2HC1R0J	J	1	1/2W	Metal Film	AA
R7726	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R7727	VRN-RA2BK221FY	S	220	1/8W	Metal Film	AA
R7729	VRD-RA2BE222JY	J	2.2k	1/8W	Carbon	AA
R7730	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R7732	VRD-RM2HD221JY	J	220	1/2W	Carbon	AA
R7733	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R7735	VRS-CY1JF473JY	J	47k	1/16W	Metal Oxide	AA
R7737	VRD-RA2BE102JY	J	1K	1/8W	Carbon	AA
R7738	VRS-CY1JF563JY	J	56k	1/16W	Metal Oxide	AA
R7739	VRD-RM2HD222JY	J	2.2k	1/2W	Carbon	AA
R7740	VRS-CY1JF104JY	J	100k	1/16W	Metal Oxide	AA
R7741	VRS-CY1JF182JY	J	1.8k	1/16W	Metal Oxide	AA
R7742	VRD-RA2BE223JY	J	22k	1/8W	Carbon	AA
R7743	VRS-CY1JF563JY	J	56k	1/16W	Metal Oxide	AA
R7744	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R7745	VRD-RA2EE102JY	J	1k	1/4W	Carbon	AA
R7746	VRS-VV3AB560J	J	56	1W	Metal Oxide	AA
R7747	VRD-RA2BE101JY	J	100	1/8W	Carbon	AA
R7748	VRD-RA2BE102JY	J	1k	1/8W	Carbon	AA
R7749	VRD-RA2BE102JY	J	1k	1/8W	Carbon	AA

MISCELLANEOUS PARTS

⚠ F7701	QFS-C3229CEZZ	J	Fuse, 3.15A/250V		AD
FH7701	QFSHD1017CEZZ+	J	Fuse Holder		AC
FH7702	QFSHD1018CEZZ+	J	Fuse Holder		AC
FB7702	RBLN-0020CEZZ	J	Ferrite Bead		AB
FB7704	RBLN-0090GEZZY	J	Ferrite Bead		AB
J3701	QJAKJ0101SEZZ	J	Jack, Headphone		AE
J3901	QJAKFA031WJZZ	J	Jack, Audio Out (L/R)		AE
J5000	QSOCD0439CEZZ	J	Socket S-Video		AF
J5001	QJAKGA067WJZZ	J	Jack, Audio (L/R)/Video		AE
P3301	QPLGN0442CEZZ	J	Plug, 4-pin (TS)		AB
P3601	QPLGZ1338CEZZ	J	Plug, 13-pin (MF)		AE
P3901	QCNCMA012WJZZ	J	Plug, 15-pin (MB)		AD
P3902	QCNCMA250WJZZ	S	Plug, 23-pin		AD
P7701	QCNCMA012WJZZ	J	Plug, 15-pin		AD
SC3601	QSOCN0895REZZ	J	Socket, 8-pin		AC
SC3901	QSOCZA056WJZZ	S	Socket, AV-IN1 (21-pin Euro-SCART)		AG
⚠ CN7701	QSOCAA003WJZZ	J	Socket, 2-pin (AC INPUT Terminal)		AD
RDA3301	PRDARA176WJFW	S	Heat Sink, for IC3301		AD
RDA7701	PRDARA158WJFW	S	Heat Sink, for IC7701		AC
RDA7702	PRDARA159WJFW	S	Heat Sink, for D7703/D7713		AC
	LX-BZ3100CEF7	S	Screw, x3		AA

Ref. No.	Part No.	★	Description	Code

DUNTC858WE04
OPERATION UNIT

DIODES

D4201	RH-EX0646GEZZY	J	Zener Diode	AA
D4202	RH-EX0604GEZZY	J	Zener Diode	AB
D4203	RH-EX0604GEZZY	J	Zener Diode	AB

RESISTORS

R4201	VRS-CY1JF122JY	J	1.2k	1/16W Metal Oxide	AA
R4202	VRS-CY1JF471JY	J	470	1/16W Metal Oxide	AA
R4203	VRS-CY1JF122JY	J	1.2k	1/16W Metal Oxide	AA
R4204	VRS-CY1JF471JY	J	470	1/16W Metal Oxide	AA
R4205	VRS-CY1JF332JY	J	3.3k	1/16W Metal Oxide	AA

SWITCHES

S4201	QSW-P0614CEZZ	J	MAIN POWER	AF
SW4202	QSW-K0003AJZZ+	J	CH(∨)	AB
SW4203	QSW-K0003AJZZ+	J	CH(∧)	AB
SW4204	QSW-K0003AJZZ+	J	INPUT	AB
SW4205	QSW-K0003AJZZ+	J	MENU	AB
SW4206	QSW-K0003AJZZ+	J	VOL(+)	AB
SW4207	QSW-K0003AJZZ+	J	VOL(–)	AB

MISCELLANEOUS PARTS

SC4201	QSOCN0596REZZ	J	Socket, 5-pin	AB

Ref. No.	Part No.	★	Description	Code

DUNTKC859WE04
R/C, LED UNIT

TRANSISTORS

Q4001	VSKRC104S//-1Y	J	KRC104S	AA
Q4002	VSKRC104S//-1Y	J	KRC104S	AA
Q4004	VSKRC104S//-1Y	J	KRC104S	AA
Q4005	VSKRC104S//-1Y	J	KRC104S	AA

DIODES

D4001	RH-PXA014WJZZ+	J	STANDBY/ON Indicator	AD
D4002	RH-PXA014WJZZ+	J	OPC Indicator	AD
D4004	RH-EX0640GEZZY	J	Zener Diode	AA
D4005	RH-EX0640GEZZY	J	Zener Diode	AA
D4007	RH-EX0640GEZZY	J	Zener Diode	AA
D4008	RH-PXA088WJZZ	J	OPC Sensor	AG

CAPACITORS

C4001	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C4002	VCEAEA1CW106M+	J	10	16V	Electrolytic	AB
C4003	VCEAEA0JW107M+	J	100	6.3V	Electrolytic	AB
C4004	VCKYCY1HF103ZY	J	0.01	50V	Ceramic	AA

RESISTORS

R4001	VRS-CY1JF331JY	J	330	1/16W Metal Oxide	AA
R4002	VRS-CY1JF681JY	J	680	1/16W Metal Oxide	AA
R4003	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R4006	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R4007	VRS-CY1JF331JY	J	330	1/16W Metal Oxide	AA
R4010	VRS-CY1JF333JY	J	33k	1/16W Metal Oxide	AA

MISCELLANEOUS PARTS

SC4001	QSOCN0896REZZ	J	Socket, 8-pin	AC
RMC4001	RRMCUA034WJQZ	J	R/C Receiver	AE
	LHLDZA486WJZZ	S	LED Holder	AD

DUNTKC860FM03
MAIN UNIT

TUNER

NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY.

Ref. No.	Part No.	★	Description	Code
TU201	VTUVT1Y5ED501	S	Tuner	AS

INTEGRATED CIRCUITS

Ref. No.	Part No.	★	Description	Code
IC101	VHiM24C64WN-1Y	J	M24C64-WMN6T	AL
IC151	VHi39VF01WH-1Q	J	I.C.	AN
IC501	RH-iXB219WJZZQ	J	I.C.	BK
IC701	VHiLM1117MJ-1Y	J	LM1117MPX-ADJ	AF
IC702	VHiMM1563DF-1Y	J	MM1563DFBE	AE
IC703	VHiLM1117MJ-1Y	J	LM1117MPX-ADJ	AF
IC704	VHiBA05FP++-1Y	J	BA05FP-E2	AF
IC751	VHiNJ79M08D-1Y	J	NJM79M08DL1A	AF
IC801	RH-iX3251CEZZY	J	TDA9178T/N1	AY
IC1101	VHiBD8120FP-1Y	J	BD8120FP	AX
IC1201	RH-iXA370WJZZQ	J	LR38819	AY
IC2201	VHiTLVDF84B-1Y	J	THC63LVDF84B	AT

TRANSISTORS

Ref. No.	Part No.	★	Description	Code
Q101	VSFMMT718//-1Y	J	FMMT718	AE
Q102	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q103	VSFMMT718//-1Y	J	FMMT718	AE
Q104	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q105	VSUM5K1NTR+-1Y	J	UM5K1NTR	AC
Q201	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q202	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q205	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q701	VSDTA144EE/-1Y	J	DTA144EE	AA
Q702	VSDTA124EE/-1Y	J	DTA124EE	AB
Q751	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q752	VS2SA1530AR-1Y	J	2SA1530AR	AB
Q753	VSDTC144EE/-1Y	J	DTC144EE	AA
Q754	VSFMMT718//-1Y	J	FMMT718	AE
Q755	VSDTC144EE/-1Y	J	DTC144EE	AA
Q756	VSDTC144EE/-1Y	J	DTC144EE	AA
Q757	VSDTC144EE/-1Y	J	DTC144EE	AA
Q758	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q759	VSDTA144EE/-1Y	J	DTA144EE	AA
Q801	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q802	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q803	VS2SC3928AR-1Y	J	2SC3928AR	AB
Q1105	VS2SC4520//-1Y	J	2SC4520	AE
Q1106	VS2SA1729//-1Y	J	2SA1729	AF

DIODES

Ref. No.	Part No.	★	Description	Code
D101	VHDHSU119//-1Y	J	Diode	AB
D202	RH-EXA101WJZZY	J	Zener Diode	AB
D203	VHDRB481K++-1Y	J	Diode	AD
D204	VHD1SS390++-1Y	J	Diode	AB
D205	VHDHSU119//-1Y	J	Diode	AB
D206	VHDHSU119//-1Y	J	Diode	AB
D208	VHD1SS390++-1Y	J	Diode	AB
D701	VHDHSU119//-1Y	J	Diode	AB
D702	VHDHSU119//-1Y	J	Diode	AB
D703	VHDHSU119//-1Y	J	Diode	AB
D704	VHD1SS119//-1Y	J	Diode	AA
D751	RH-EXA099WJZZY	J	Zener Diode	AB
D755	VHDRB481K++-1Y	J	Diode	AD
D756	VHDHSU119//-1Y	J	Diode	AB
D757	VHDHSU119//-1Y	J	Diode	AB
D759	VHD1SS250//1EY	J	Diode	AB
D1103	VHD1SS250//1EY	J	Diode	AB
D1104	VHD1SS250//1EY	J	Diode	AB

PACKAGED CIRCUITS

Ref. No.	Part No.	★	Description	Code
X101	RCRSAA058WJZZ	J	Crystal	AD
X501	RCRSAA037WJZZ	J	Crystal	AE

FILTERS AND COILS

Ref. No.	Part No.	★	Description	Code
SF201	RFiLCA102WJZZ	S	S.A.W Filter	AH
SF202	RFiLCA103WJZZ	S	S.A.W Filter	AM
L202	RCiLPA143WJZZY	J	Coil	AD
L751	RCiLPA143WJZZY	J	Coil	AD
L752	VPCNN470J5R4NY	J	Peaking 47µH	AB
L2201	VPCNN2R7JR85NY	J	Peaking 2.7µH	AB
L2202	VPCNN2R7JR85NY	J	Peaking 2.7µH	AB

CAPACITORS

Ref. No.	Part No.	★				Code
C101	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C102	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C104	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C106	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C107	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C109	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C110	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C111	VCEAPF0JW227MY	J	220	6.3V	Electrolytic	AD
C113	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C116	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C117	VCEAPF0JW107MY	J	100	6.3V	Electrolytic	AC
C118	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C119	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C121	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C122	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C123	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C124	VCEAPF0JW107MY	J	100	6.3V	Electrolytic	AC
C126	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C127	VCKYCY1CB223KY	J	0.022	16V	Ceramic	AB
C128	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C151	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C152	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C161	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C162	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C163	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C201	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C203	VCKYCY1HF333ZY	S	0.033	50V	Ceramic	AA
C204	VCEAPF1CW476MY	J	47	16V	Electrolytic	AC
C205	VCEAPF1CW476MY	J	47	16V	Electrolytic	AC
C206	VCEAPF0JW227MY	J	220	6.3V	Electrolytic	AD
C207	VCEAPF1HW225MY	J	2.2	50V	Electrolytic	AB
C208	VCKYCY1HB103KY	J	0.01	50V	Ceramic	AA
C213	VCKYCY1HB103KY	J	0.01	50V	Ceramic	AA
C215	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C216	VCEAPF1HW225MY	J	2.2	50V	Electrolytic	AB
C217	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C218	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C220	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C301	VCEAPF1HW475MY	J	4.7	50V	Electrolytic	AC
C302	VCKYCY1HB392KY	J	3900p	50V	Ceramic	AA
C303	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C304	VCEAPF1HW225MY	J	2.2	50V	Electrolytic	AB
C305	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C306	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C331	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C332	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C358	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C359	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C360	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C361	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C362	VCKYTV1EB474KY	J	0.47	25V	Ceramic	AC
C363	VCKYTV1EB474KY	J	0.47	25V	Ceramic	AC
C366	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C367	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C368	VCKYTV1EB474KY	J	0.47	25V	Ceramic	AC
C369	VCKYTV1EB474KY	J	0.47	25V	Ceramic	AC
C409	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C410	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C411	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C412	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA
C413	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C414	VCKYCY1HB103KY	J	0.01	50V	Ceramic	AA
C415	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C416	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C417	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C418	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C419	VCCCCY1HH101JY	J	100p	50V	Ceramic	AA

DUNTKC860FM03

MAIN UNIT (Continued)

Ref. No.	Part No.	★			Description	Code
C420	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C421	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C501	VCEAPF0JW226MY	J	22	6.3V	Electrolytic	AB
C504	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C505	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C506	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C507	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C510	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C511	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C512	VCEAPF0JW226MY	J	22	6.3V	Electrolytic	AB
C513	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C514	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C515	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C517	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C518	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C519	VCCCCY1HH8R0DY	J	8.0p	50V	Ceramic	AA
C520	VCCCCY1HH8R0DY	J	8.0p	50V	Ceramic	AA
C521	VCEAPF0JW226MY	J	22	6.3V	Electrolytic	AB
C522	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C523	VCEAPF0JW226MY	J	22	6.3V	Electrolytic	AB
C524	VCEAPF0JW226MY	J	22	6.3V	Electrolytic	AB
C525	VCEAPF0JW226MY	J	22	6.3V	Electrolytic	AB
C535	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C536	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C547	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C548	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C549	VCEAPF0JW107MY	J	100	6.3V	Electrolytic	AC
C550	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C551	VCEAPF0JW107MY	J	100	6.3V	Electrolytic	AC
C552	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C554	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C556	VCEAPF0JW107MY	J	100	6.3V	Electrolytic	AC
C557	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C558	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C570	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C571	VCCCCY1HH100DY	J	10p	50V	Ceramic	AA
C574	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C575	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C576	VCCCCY1HH100DY	J	10p	50V	Ceramic	AA
C578	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C579	VCKYCY1CB223KY	J	0.022	16V	Ceramic	AB
C580	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C581	VCCCCY1HH100DY	J	10p	50V	Ceramic	AA
C582	VCKYCY1CB333KY	J	0.033	16V	Ceramic	AA
C701	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C702	VCEAPF1CW476MY	J	47	16V	Electrolytic	AC
C703	VCEAPF0JW107MY	J	100	6.3V	Electrolytic	AC
C704	VCEAPF1CW476MY	J	47	16V	Electrolytic	AC
C709	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C710	VCEAPF1CW476MY	J	47	16V	Electrolytic	AC
C711	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C712	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C720	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C721	VCKYCY1HB471KY	J	470p	50V	Ceramic	AA
C722	VCEAPF1CW476MY	J	47	16V	Electrolytic	AC
C723	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C724	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C725	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C751	VCEASN1HN225MY	J	2.2	50V	Electrolytic	AB
C752	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C753	VCEAPF1CW107MY	J	100	16V	Electrolytic	AC
C754	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C758	RC-KZ0075TAZZY	J	2.2	16V	Ceramic	AC
C759	VCEASN1HN225MY	J	2.2	50V	Electrolytic	AB
C760	VCEAPF1CW107MY	J	100	16V	Electrolytic	AC
C761	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C763	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C764	VCEASN1HN475MY	J	4.7	50V	Electrolytic	AC
C765	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C766	VCEAPF0JW227MY	J	220	6.3V	Electrolytic	AD
C801	VCEAPF1HW105MY	J	1	50V	Electrolytic	AB
C802	VCKYCY1HB682KY	J	6800p	50V	Ceramic	AA
C803	VCKYCY1CF224ZY	J	0.22	16V	Ceramic	AB
C804	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C805	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C806	VCKYCY1CF334ZY	J	0.33	16V	Ceramic	AB
C807	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C808	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C809	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C810	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C811	VCCCCY1HH220JY	J	22p	50V	Ceramic	AA
C812	VCCCCY1HH220JY	J	22p	50V	Ceramic	AA
C813	VCCCCY1HH220JY	J	22p	50V	Ceramic	AA
C814	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C815	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C816	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C817	RC-KZ0074TAZZY	J	10	6.3V	Ceramic	AF
C818	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C819	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C820	VCEAPF1CW476MY	J	47	16V	Electrolytic	AC
C821	VCKYCY1HB102KY	J	1000p	50V	Ceramic	AA
C822	VCEAPF0JW107MY	J	100	6.3V	Electrolytic	AC
C823	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C825	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C826	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C827	RC-KZ0074TAZZY	J	10	6.3V	Ceramic	AF
C828	RC-KZ0074TAZZY	J	10	6.3V	Ceramic	AF
C829	RC-KZ0074TAZZY	J	10	6.3V	Ceramic	AF
C830	VCCCCY1HH470JY	J	47p	50V	Ceramic	AA
C831	VCCCCY1HH470JY	J	47p	50V	Ceramic	AA
C832	VCCCCY1HH470JY	J	47p	50V	Ceramic	AA
C833	VCKYCY1HB271KY	J	270p	50V	Ceramic	AA
C834	VCKYCY1HB271KY	J	270p	50V	Ceramic	AA
C835	VCKYCY1HB271KY	J	270p	50V	Ceramic	AA
C1104	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1106	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1107	RC-KZA041WJZZY	J	10	10V	Ceramic	AC
C1108	VCCCCY1HH560JY	J	56p	50V	Ceramic	AB
C1109	RC-KZA041WJZZY	J	10	10V	Ceramic	AC
C1110	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1116	VCKYTV1CB105KY	J	1	16V	Ceramic	AC
C1117	VCKYTV1CB105KY	J	1	16V	Ceramic	AC
C1118	VCKYCY1EB104KY	J	0.1	25V	Ceramic	AB
C1119	RC-KZA041WJZZY	J	10	10V	Ceramic	AC
C1120	VCEASN1HN106MY	J	10	50V	Electrolytic	AC
C1202	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1203	RC-KZ0117TAZZY	J	4.7	6.3V	Ceramic	AD
C1210	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1213	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1214	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1215	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1216	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C2201	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C2202	VCKYCY1HB103KY	J	0.01	50V	Ceramic	AA
C2203	VCEAPF1CW106MY	J	10	16V	Electrolytic	AB
C2204	VCKYCY1HB103KY	J	0.01	50V	Ceramic	AA
C2205	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C2206	VCCCCY1HH470JY	J	47p	50V	Ceramic	AA

RESISTORS

R101	VRS-CY1JF332JY	J	3.3k	1/16W	Metal Oxide	AA
R102	VRS-CY1JF332JY	J	3.3k	1/16W	Metal Oxide	AA
R103	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R104	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R105	VRS-CY1JF153JY	J	15k	1/16W	Metal Oxide	AA
R106	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R107	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R108	VRS-CY1JF101JY	J	100	1/16W	Metal Oxide	AA
R109	VRS-CY1JF222JY	J	2.2k	1/16W	Metal Oxide	AA
R111	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R113	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R114	VRS-CY1JF2R2JY	J	2.2	1/16W	Metal Oxide	AA
R115	VRS-CY1JF2R2JY	J	2.2	1/16W	Metal Oxide	AA
R116	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R117	VRS-CY1JF2R2JY	J	2.2	1/16W	Metal Oxide	AA
R118	VRS-CY1JF2R2JY	J	2.2	1/16W	Metal Oxide	AA

DUNTKC860FM03
MAIN UNIT (Continued)

Ref. No.	Part No.	★		Description	Code
R119	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R120	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R122	VRS-CY1JF153JY	J	15k	1/16W Metal Oxide	AA
R123	VRS-CY1JF102JY	J	1k	1/16W Metal Oxide	AA
R124	VRS-CY1JF154JY	J	150k	1/16W Metal Oxide	AA
R125	VRS-CY1JF332JY	J	3.3k	1/16W Metal Oxide	AA
R126	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R127	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R129	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R131	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R132	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R133	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R134	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R136	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R137	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R138	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R139	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R140	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R141	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R142	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R143	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R144	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R145	VRS-CY1JF332JY	J	3.3k	1/16W Metal Oxide	AA
R146	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R147	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R148	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R149	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R151	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R152	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R161	VRS-CY1JF332JY	J	3.3k	1/16W Metal Oxide	AA
R164	VRS-CY1JF332JY	J	3.3k	1/16W Metal Oxide	AA
R201	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R202	VRS-CY1JF122JY	J	1.2k	1/16W Metal Oxide	AA
R203	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R204	VRS-CY1JF122JY	J	1.2k	1/16W Metal Oxide	AA
R205	VRS-CY1JF122JY	J	1.2k	1/16W Metal Oxide	AA
R206	VRS-CY1JF473JY	J	47k	1/16W Metal Oxide	AA
R207	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R208	VRS-CY1JF392JY	J	3.9k	1/16W Metal Oxide	AA
R209	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R210	VRS-CY1JF153JY	J	15k	1/16W Metal Oxide	AA
R211	VRS-CY1JF332JY	J	3.3k	1/16W Metal Oxide	AA
R212	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R217	VRS-CY1JF102JY	J	1k	1/16W Metal Oxide	AA
R218	VRS-CY1JF681JY	J	680	1/16W Metal Oxide	AA
R219	VRS-CJ1JF102JY	J	1k	1/16W Metal Oxide	AA
R220	VRS-CY1JF122JY	J	1.2k	1/16W Metal Oxide	AA
R221	VRS-CY1JF122JY	J	1.2k	1/16W Metal Oxide	AA
R224	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R237	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R239	VRS-CY1JF222JY	J	2.2k	1/16W Metal Oxide	AA
R301	VRS-CY1JF391JY	J	390	1/16W Metal Oxide	AA
R302	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R303	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R304	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R305	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R306	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R362	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R363	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R364	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R365	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R366	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R367	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R368	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R369	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R370	VRD-RA2BE103JY	J	10k	1/8W Carbon	AA
R371	VRD-RA2BE103JY	J	10k	1/8W Carbon	AA
R423	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R544	VRS-CY1JF823JY	J	82k	1/16W Metal Oxide	AA
R548	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R549	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R550	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R551	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R552	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R553	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R554	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R557	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R558	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R559	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R570	VRS-CY1JF100JY	J	10	1/16W Metal Oxide	AA
R571	VRS-CY1JF470JY	J	47	1/16W Metal Oxide	AA
R573	VRS-CY1JF100JY	J	10	1/16W Metal Oxide	AA
R574	VRS-CY1JF470JY	J	47	1/16W Metal Oxide	AA
R575	VRS-CY1JF100JY	J	10	1/16W Metal Oxide	AA
R576	VRS-CY1JF470JY	J	47	1/16W Metal Oxide	AA
R577	VRS-CY1JF123JY	J	12k	1/16W Metal Oxide	AA
R701	VRS-CY1JF121JY	J	120	1/16W Metal Oxide	AA
R702	VRS-CY1JF271JY	J	270	1/16W Metal Oxide	AA
R704	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R705	VRS-CY1JF000JY	J	0	1/16W Metal Oxide	AA
R709	VRS-TW2HF000JY	J	0	1/2W Metal Oxide	AA
R710	VRS-CY1JF271JY	J	270	1/16W Metal Oxide	AA
R711	VRS-CY1JF471JY	J	470	1/16W Metal Oxide	AA
R714	VRS-TW2HF1R0JY	J	1	1/2W Metal Oxide	AA
R715	VRS-TW2HF1R0JY	J	1	1/2W Metal Oxide	AA
R716	VRS-TW2HF101JY	J	100	1/2W Metal Oxide	AA
R717	VRS-TW2HF101JY	J	100	1/2W Metal Oxide	AA
R718	VRS-VV3AB270J	J	27	1W Metal Oxide	AA
R721	VRS-CY1JF105JY	J	1M	1/16W Metal Oxide	AA
R722	VRS-TW2HF1R0JY	J	1	1/2W Metal Oxide	AA
R751	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R752	VRS-CY1JF272JY	J	2.7k	1/16W Metal Oxide	AA
R753	VRS-TW2ED102JY	J	1k	1/4W Metal Oxide	AA
R754	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R755	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R757	VRS-TW2ED103JY	J	10k	1/4W Metal Oxide	AA
R761	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R762	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R764	VRS-CY1JF223JY	J	22k	1/16W Metal Oxide	AA
R766	VRS-TW2HF330JY	J	33	1/2W Metal Oxide	AA
R767	VRS-TW2HF472JY	J	4.7k	1/2W Metal Oxide	AA
R769	VRS-CY1JF562JY	J	5.6k	1/16W Metal Oxide	AA
R801	VRS-CY1JF102JY	J	1k	1/16W Metal Oxide	AA
R802	VRS-CY1JF123JY	J	12k	1/16W Metal Oxide	AA
R803	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R804	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R805	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R806	VRS-CY1JF105JY	J	1M	1/16W Metal Oxide	AA
R807	VRS-CY1JF393JY	J	39k	1/16W Metal Oxide	AA
R808	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R809	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R810	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R811	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R812	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R813	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R814	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R815	VRS-CY1JF100JY	J	10	1/16W Metal Oxide	AA
R816	VRS-CY1JF273JY	J	27k	1/16W Metal Oxide	AA
R817	VRS-CY1JF473JY	J	47k	1/16W Metal Oxide	AA
R819	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R820	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R821	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R822	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R823	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R824	VRS-CY1JF472JY	J	4.7k	1/16W Metal Oxide	AA
R825	VRS-CY1JF103JY	J	10k	1/16W Metal Oxide	AA
R826	VRS-CY1JF104JY	J	100k	1/16W Metal Oxide	AA
R827	VRS-CY1JF473JY	J	47k	1/16W Metal Oxide	AA
R828	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R829	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R830	VRS-CY1JF101JY	J	100	1/16W Metal Oxide	AA
R831	VRS-CY1JF121JY	J	120	1/16W Metal Oxide	AA
R832	VRS-CY1JF121JY	J	120	1/16W Metal Oxide	AA
R833	VRS-CY1JF121JY	J	120	1/16W Metal Oxide	AA
R834	VRS-CY1JF750JY	J	75	1/16W Metal Oxide	AA
R835	VRS-CY1JF750JY	J	75	1/16W Metal Oxide	AA

DUNTKC860FM03

MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
R836	VRS-CY1JF750JY	J	75 1/16W Metal Oxide	AA
R1101	VRS-CY1JF273JY	J	27k 1/16W Metal Oxide	AA
R1102	VRS-CY1JF472JY	J	4.7k 1/16W Metal Oxide	AA
R1103	VRS-CY1JF472JY	J	4.7k 1/16W Metal Oxide	AA
R1104	VRS-CY1JF103JY	J	10k 1/16W Metal Oxide	AA
R1112	VRS-CY1JF181JY	J	180 1/16W Metal Oxide	AA
R1113	VRS-CY1JF102JY	J	1k 1/16W Metal Oxide	AA
R1114	VRS-CY1JF181JY	J	180 1/16W Metal Oxide	AA
R1117	VRS-TW2HF5R6JY	J	5.6 1/2W Metal Oxide	AA
R1118	VRS-TW2HF5R6JY	J	5.6 1/2W Metal Oxide	AA
R1121	VRS-CY1JF000JY	J	0 1/16W Metal Oxide	AA
R1122	VRS-CY1JF000JY	J	0 1/16W Metal Oxide	AA
R1123	VRS-TW2HF000JY	J	0 1/2W Metal Oxide	AA
R1124	VRS-TW2HF101JY	J	100 1/2W Metal Oxide	AA
R1126	VRS-CY1JF000JY	J	0 1/16W Metal Oxide	AA
R1128	VRS-CY1JF000JY	J	0 1/16W Metal Oxide	AA
R1129	VRS-CY1JF103JY	J	10k 1/16W Metal Oxide	AA
R1130	VRS-CY1JF000JY	J	0 1/16W Metal Oxide	AA
R1203	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1204	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1205	VRK-CD1JJ220JY	J	22 1/16W Metal Compo.	AC
R1206	VRK-CD1JJ220JY	J	22 1/16W Metal Compo.	AC
R1207	VRK-CD1JJ220JY	J	22 1/16W Metal Compo.	AC
R1208	VRS-CY1JF220JY	J	22 1/16W Metal Oxide	AA
R1209	VRS-CY1JF220JY	J	22 1/16W Metal Oxide	AA
R1210	VRS-CA1JF220JY	J	22 1/16W Metal Oxide	AA
R1211	VRS-CA1JF101JY	J	100 1/16W Metal Oxide	AA
R1214	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1215	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1216	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1217	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1218	VRS-CY1JF220JY	J	22 1/16W Metal Oxide	AA
R1223	VRS-CY1JF000JY	J	0 1/16W Metal Oxide	AA
R1230	VRS-CY1JF472JY	J	4.7k 1/16W Metal Oxide	AA
R1240	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1241	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1242	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R1243	VRS-CY1JF000JY	J	0 1/16W Metal Oxide	AA
R2203	VRS-CB1JF470JY	J	47 1/16W Metal Oxide	AA
R2204	VRS-CB1JF470JY	J	47 1/16W Metal Oxide	AA
R2205	VRS-CB1JF470JY	J	47 1/16W Metal Oxide	AA
R2206	VRS-CB1JF470JY	J	47 1/16W Metal Oxide	AA
R2207	VRS-CB1JF470JY	J	47 1/16W Metal Oxide	AA
R2208	VRS-CB1JF470JY	J	47 1/16W Metal Oxide	AA
R2224	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R2225	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R2226	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R2227	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R2228	VRS-CY1JF101JY	J	100 1/16W Metal Oxide	AA
R2232	VRS-CY1JF100JY	J	10 1/16W Metal Oxide	AA
R2233	VRS-CY1JF103JY	J	10k 1/16W Metal Oxide	AA

MISCELLANEOUS PARTS

FB101	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB102	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB103	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB104	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB105	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB106	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB107	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB108	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB109	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB151	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB201	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB204	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB401	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB501	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB502	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB504	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB507	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB508	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB531	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB532	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB533	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB535	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB801	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB802	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB803	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB804	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB805	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB806	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB807	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB808	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB809	RBLN-0062TAZZY	J	Ferrite Bead	AB
FB1201	RBLN-0083GEZZY	J	Ferrite Bead	AB
P2002	QPLGNA144WJZZY	J	Plug, 20-pin	AF
SC102	QCNCWA010WJZZY	J	Connector, 15-pin	AE
SC104	QCNCWA010WJZZY	J	Connector, 15-pin	AE
SC105	QSOCN0596REZZ	J	Socket , 5-pin	AB
SC106	QCNCWA251WJZZYS		Connector, 23-pin	AF
SC1201	QSOCNA002WJPZY	J	Socket, 20-pin	AD
SC1202	QSOCN0687FJZZY	J	Socket, 50-pin	AF
SC1203	QSOCN0206FJZZY	J	Socket, 30-pin	AF
TP101	QLUGHA006WJZZY	J	Lug	AC
TP102	QLUGHA006WJZZY	J	Lug	AC

CABINET AND MECHANICAL PARTS

Ref. No.	Part No.	★	Description	Code
1	CCABAA703WJ01	S	Cabinet A Ass'y	BB
1-1	*Not Available*	–	Cabinet A	—
1-2	HDECQA452WJSA	S	R/C, LED Cover	
1-3	HDECQA459WJSA	S	LED Cover	
1-4	HDECQA478WJSA	S	Leg Cover, x2	
1-5	XEBSN30P08000	J	Screw, x1	AA
2	CCABBA456WJ01	S	Cabinet B Ass'y	BC
2-1	*Not Available*	–	Cabinet B	—
2-2	GLEGGA042WJZZ	S	Rubber Leg, x2	
2-3	LANGFA085WJFW	J	Kensington Angle	AC
2-4	LANGTA155WJFW	S	Reinforcement Angle	
2-5	PZETKA109WJZZ	S	Insulating Spacer, x1	
2-6	XEBSN30P08000	J	Screw, x1	AA
3	CDAi-A140WJ01	S	Stand Ass'y	BB
3-1	CDAi-A140WJ02	S	Stand Base Ass'y	
3-1-1	GDAi-A140WJSA	S	Stand Base	
3-1-2	GLEGGA041WJSA	S	Rubber Leg, x2	
3-1-3	PSPAZA083WJZZ	J	Spacer, x2	AB
3-2	GCOVAB023WJSA	S	Stand Cover	
3-3	XESSN40P10000	J	Screw, x8	AB
4	CCOVAA976WJ01	S	Top Cover Ass'y	AP
4-1	*Not Available*	–	Top Cover	—
4-2	JBTN-A353WJSA	S	Operation Button	
4-3	JBTN-A354WJSA	S	Power Button	
4-4	MSPRCA014WJFW	J	Spring, for Power Button	AB
4-5	XEBSN30P08000	J	Screw, x1	AA
5	*Not Available*	–	20" LCD Panel Unit Ass'y	—
5-1	RLCDTA025WJZZ	J	20" LCD Panel Unit	DB
5-2	*Not Available*	–	Back Shield Ass'y	—
5-2-1	PSLDMA495WJFW	J	Back Shield	AW
5-2-2	LHLDZA412WJKZ	J	Lamp Holder-L(Bottom)	AG
5-2-3	LHLDZA413WJKZ	J	Lamp Holder-R(Bottom)	AF
5-2-4	PMLT-A150WJZZ	J	Light Shielding Spacer, x2	AD
5-2-5	PSHEPA226WJZZ	J	Reflection Sheet	AN
5-2-6	TCAUZA031WJZZ	J	Caution Label	AB
⚠ 5-3	KLMP-A046WJZZ	J	Lamp Unit, x5	AV
5-4	LHLDZA414WJKZ	J	Lamp Holder-L(Top)	AL
5-5	LHLDZA415WJKZ	J	Lamp Holder-R(Top)	AL
5-6	PCOVUA048WJZZ	J	Diffusion Plate	AY
5-7	PSHEPA231WJZZ	J	Reflection/deflection Sheet	BB
5-8	PSHEPA233WJZZ	J	Diffusion Sheet	AM
5-9	PSPAZA447WJZZ	J	Spacer, x1	AC
5-10	QCNW-C947WJQZ	J	Connecting Cord	AE
5-11	XBPS726P05J00	J	Screw, x3	AA
6	GCOVAA984WJKA	S	Bass-Conne Cover	AD
7	LCHSMA146WJKA	S	Chassis Frame	AR
8	LX-BZ3442CEF9	J	Screw, x4	AB
9	PSPAZA614WJZZ	S	Spacer, x1	AD
10	PSPAZA615WJZZ	S	Spacer, x1	AB
11	PSPAZA640WJKZ	S	Spacer, x1	AL
12	PSPAZA641WJKZ	S	Spacer, x1	AF
13	PSPAZA642WJKZ	S	Spacer, x1	AH
14	QCNW-B813WJPZ	S	Connecting Cord	AC
15	QCNW-B814WJPZ	S	Connecting Cord	AC
16	QCNW-C853WJQZ	S	Connecting Cord	AE
17	QCNW-C948WJQZ	S	Connecting Cord	AE
18	QCNW-C949WJQZ	S	Connecting Cord	AC
19	QEARPA125WJFW	S	Grounding Part, x1	AC
20	QEARZA041WJZZ	J	Grounding Part, x1	AE
21	RCORFA032WJZZ	J	Core, x1	AK
22	TLABMB271WJZZ	S	Model Label (LC-20SH1E/E(R)/E(F)/E(K))	AE
22	TLABMB473WJZZ	S	Model Label (LC-20SH1E(I))	
23	*Not Available*	–	Serial No. Label	—
24	VSP1104PB038A	J	Speaker, x2	AK
25	XEBS940P20000	J	Screw, x5	AB
26	XEBSN30P08000	J	Screw, x7	AA
27	XEBSN40P10000	J	Screw, x8	AB
28	XHBS830P10000	S	Screw, x2	AA
29	XHPS730P08WS0	S	Screw, x7	AA
30	TLABZA792WJZZ	S	EICTA Label	AL
31	TLABSA028WJSB	J	GOST Label (LC-20SH1E(R))	AF

CABINET AND MECHANICAL PARTS

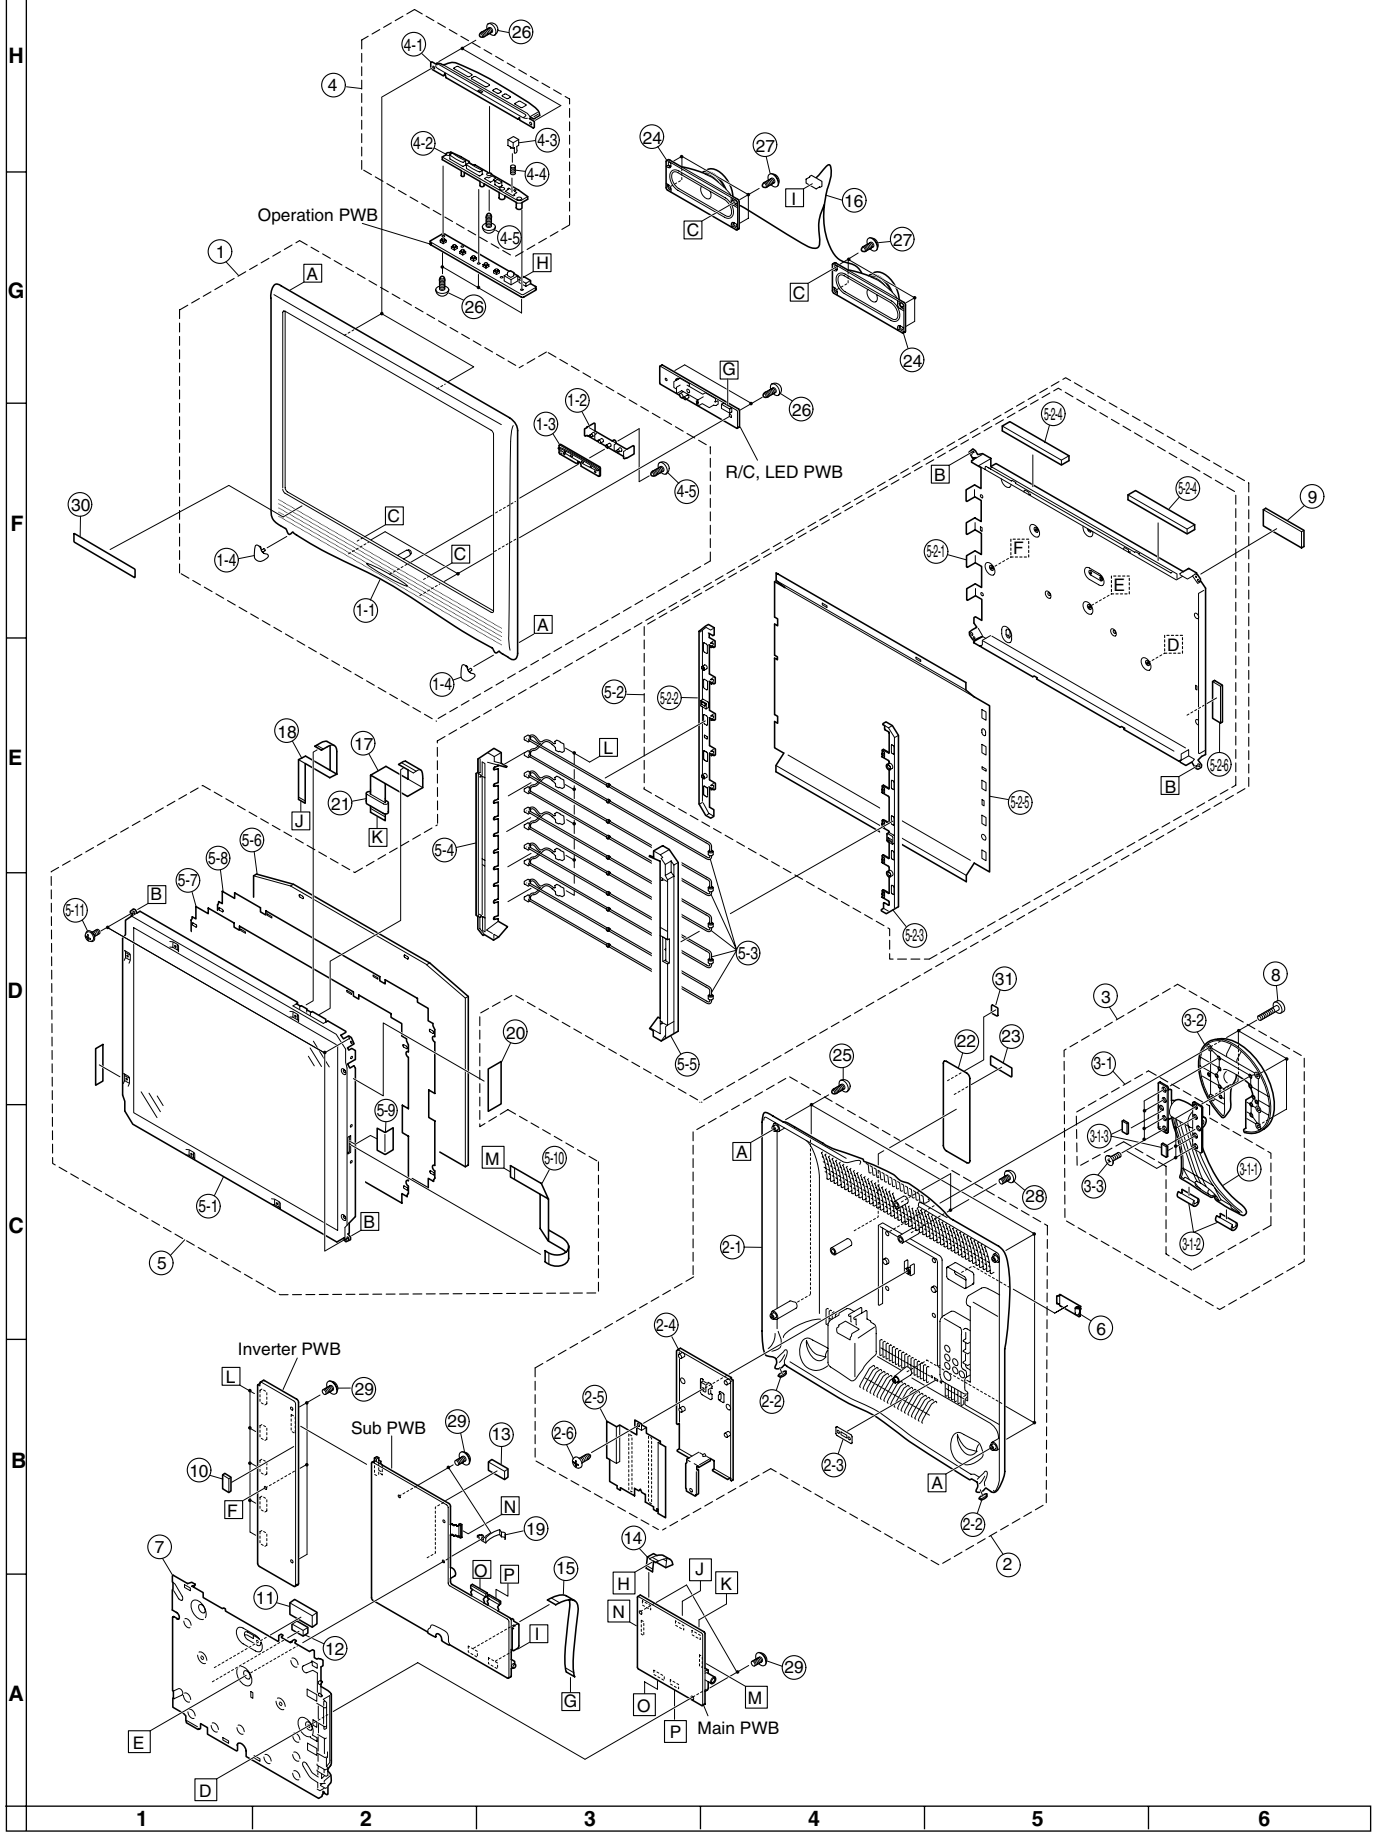

SUPPLIED ACCESSORIES

Ref. No.	Part No.	★	Description	Code
⚠ X1	QACCBA016WJPZ	J	AC Cord (LC-20SH1E(K))	AR
⚠ X1	QACCKA006WJPZ	J	AC Cord (LC-20SH1E/E(R)/E(F)/E(I))	AL
X2	RRMCGA339WJSA	S	Wireless Remote Control	AS
X3	TiNS-B517WJN2	S	Operation Manual	
X4	TiNS-B634WJN2	S	Instruction Book (LC-20SH1E/E(F))	
X5	TiNS-B635WJN2	S	Instruction Book (LC-20SH1E)	
X6	TiNS-B636WJZZ	S	Instruction Book (LC-20SH1E(R))	
X7	TGAN-1688CEN1	J	Guarantee Card (LC-20SH1E(K))	AN
X8	TGAN-A077WJZZ	J	Guarantee Card (LC-20SH1E(R))	AE
X9	*Not Available*	–	"AA" size Battery, x2	—

SERVICE JIGS
(USE FOR SERVICING)

	QCNW-A553WJZZ	J	Extension Cable, 30-pin (SC1203-LCD)	BA
	QCNW-A556WJZZ	J	Extension Cable, 50-pin (SC1202-LCD)	AU
	QCNW-A555WJZZ	J	Extension Cable, 20-pin (SC1201-LCD)	AU
	QCNW-D444WJQZ	J	Extension Cable, 5-pin (SC4201-SC105)	AQ
	QCNW-D445WJQZ	J	Extension Cable, 8-pin (SC4001-SC3601)	AQ
	JiGiNF-001	J	Parallel Part-IIC Interface Jig	CC

PACKING PARTS
(NOT REPLACEMENT ITEM)

Ref. No.	Part No.	★	Description	Code
S1	SPAKCB640WJZZ	–	Packing Case	—
S2	SPAKPA188WJZZ	–	Wrapping Paper	—
S3	SPAKXA620WJZZ	–	Buffer Material	—
S4	SSAKAA010WJZZ	–	Polyethylene Bag (E(R)/E(K)/E(I)x1, E(F)x2, Ex3)	—
S5	TLABKA002WJZZ	–	Carton Label, x1	—
S6	TLABSA029WJZZ	–	GOST Label (LC-20SH1E(R))	—

Supplied Accessories

AC cord	Wireless remote control	Operation manual	"AA" size batteries (×2)
X1  *Product shape may vary from country to country.	X2 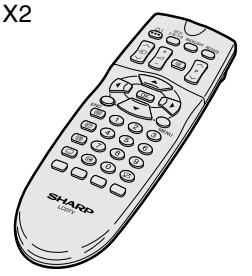	X3 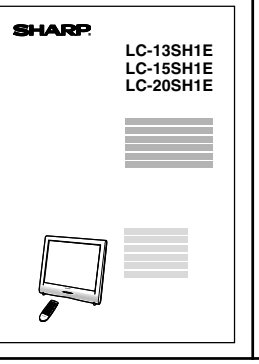	X9 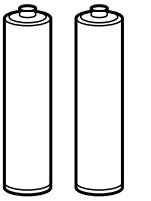

PACKING OF THE SET

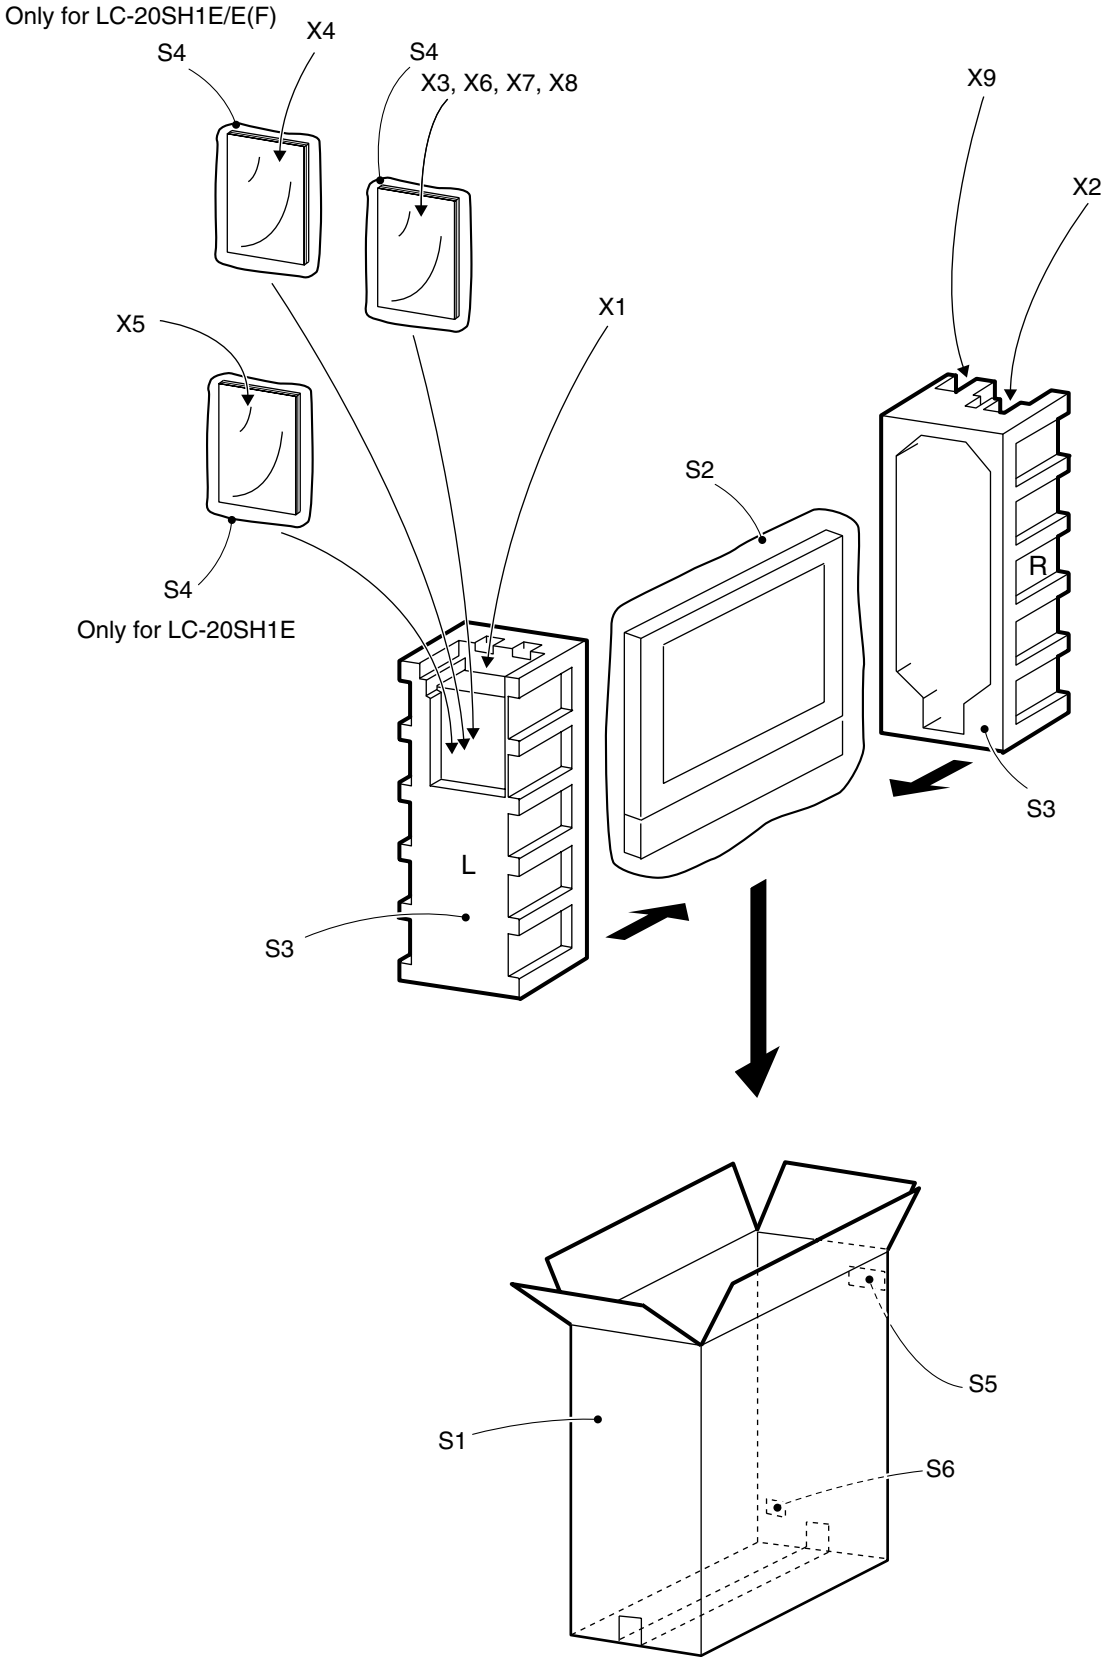

SHARP

COPYRIGHT © 2005 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1841-S
Jan. 2005 Printed in Japan

Design and Production Information
Design : Japan
Production : SEES

MI. KG

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan